# NAVAL POSTGRADUATE SCHOOL Monterey, California



AD-A246 067





**THESIS** 

# THE INTEGRATION SYSTEM FOR THE LOW COST COMBAT DIRECTION SYSTEM

by

Willie Kelly Bolick and Richard Thomas Irwin

September 1991

Thesis Advisor:

Dr. Valdis Berzins

Approved for public release; distribution is unlimited.

92 2 12 174



REPORT DOCUMENTATION PAGE					
1a. REPORT SECURITY CLASSIFICATION UNCLASSIFIED		1b. RESTRICTIVE MARKINGS			
2a SECURITY CLASSIFICATION AUTHORITY		3. DISTRIBUTION/AVAILABILITY OF REPORT			
2b. DECLASSIFICATION/DOWNGRADING SCHED	ULE	Approved for public release;			
		distribution is unlimited			
4. PERFORMING ORGANIZATION REPORT NUMB	BER(S)	5. MONITORING ORGANIZATION REPORT NUMBER(S)			
		2 11445			···
Computer Science Dept.	6b. OFFICE SYMBOL (if applicable)		NITORING ORGANI Ostgraduate Sch		
Naval Postgraduate School	CS				
6c. ADDRESS (City, State, and ZIP Code)	·	7b. ADDRESS (City, State, and ZIP Code)			
Monterey, CA 93943-5000		Montere	ey, CA 93943-	5000	
A A A A A B A B A B A B A B A B A B A B	In office oversor	A BROOKERENEN	IT MOTOLINE IN	ELIZIEIO AZIO	
8a. NAME OF FUNDING/SPONSORING ORGANIZATION	8b. OFFICE SYMBOL (if applicable)	9. PROCUREMEN	NT INSTRUMENT ID	ENTIFICATIO	N NUMBER
8c. ADDRESS (City, State, and ZIP Code)		10. SOURCE OF I	FUNDING NUMBER  I PROJECT	S TASK	WORK UNIT
		ELEMENT NO.	NO.	NO.	ACCESSION NO.
		ļ			
11. TITLE (Include Security Classification)		CO. (D. (D. D.)			
THE INTEGRATION SYSTEM FOR	THE LOW COST	COMBAT DI	RECTION SYS	TEM	
12. PERSONAL AUTHOR(S) Bolick, Willie Kelly; Irwin, Richard T	Гh a a a	· · · · · · · · · · · · · · · · · · ·			
•				"T.= 'E.	
	/90 то <u>09/91</u>		PRT (Year, Month, Da ber, 10		GE COUNT 278
16. SUPPLEMENTARY NOTATION he views ex				o not refle	ct the official
policy or position of the Department o	f Defense or the Ur	nted States Go	vernment.		
17. COSATI CODES	18 SUBJECT TERMS (	Continue on reverse	if necessary and ide	ntify by block i	number)
FIELD GROUP SUB-GROUP	Combat Direction	Center, Softw	are Engineering	g, Integrati	on System
19. ABSTRACT (Continue on reverse if necessary a	I and identify by block number	er)			
In a world where changes in technolog	y occur each minute, th	demand for a h		-	
on board naval ships not equipped with Nava	•			•	
approach to software development and system	•	• •			
use of Ada as the design language with UNI withstand shipboard requirements. The system					• •
	-				-
application. Specific benefits include ease of maintenance and expansion of ongoing processes and applications, allowing the system to grow as the need grows.					
This study provides a detailed set of requirements, functional specifications, designs, and a prototype implementation of the Integration					
System for such a system. The approach taken is to implement the basic features of a Combat Direction System (CDS) on a commercially					
available microprocessor workstation. This Integration System for the Low Cost Combat Direction System meets all the requirements					
specified by the Naval Sea Systems Command. The code provides the basic elements and is designed for integration of a database, a user					
interface, and the ships sensors necessary to provide essential data to operate the system.					
20. DISTRIBUTION/AVAILABILITY OF ABSTRACT    21. ABSTRACT SECURITY CLASSIFICATION   UNCLASSIFIED/UNLIMITED   SAME AS RPT.   DTIC USERS   UNCLASSIFIED					
			CE SYMBOL		
22a, NAME OF RESPONSIBLE INDIVIDUAL Valdis Berzins		(408) 646-24	61	CS/B	e

# THE INTEGRATION SYSTEM FOR THE LOW COST COMBAT DIRECTION SYSTEM

by

Willie Kelly Bolick
Lieutenant, United States Navy
B.S., University of Arkansas, 1977
M.S., Arkansas State University, 1980
and
Richard Thomas Irwin
Lieutenant, United States Navy
B.S., University of Michigan-Flint, 1983

Submitted in partial fulfillment of the requirements for the degree of

# MASTER OF SCIENCE IN COMPUTER SCIENCE

from the

# NAVAL POSTGRADUATE SCHOOL

September 1991


Authors:	- Wiele Korneck
	Willie Kelly Bolick
	· · · · · · · · · · · · · · · · · · ·
	Richard Thomas Irwin
Approved By:	Lidder Terims
	Valdis Berzins, Thesis Advisor
	<u> </u>
	Luqi. Second Reader
	Robert B. McGhee, Chairman,
	Department of Computer Science

# **ABSTRACT**

In a world where changes in technology occur each minute, the demand for a hard Real Time embedded computer system deployed on board naval ships not equipped with Naval Tactical Data System increases. As the demand increases, an important fact looms, a new approach to software development and system design is essential. The approach used in our research started with the requirement specifying use of Ada as the design language with UNIX as the operating system, and selection of the commercial workstation rugged enough to withstand shipboard requirements. The system requires standard power with no special interface equipment for adaptation to shipboard application. Specific benefits include ease of maintenance and expansion of ongoing processes and applications, allowing the system to grow as the need grows.

This study provides a detailed set of requirements, functional specifications, designs, and a prototype implementation of the Integration System for such a system. The approach taken is to implement the basic features of a Combat Direction System (CDS) on a commercially available microprocessor workstation. This Integration System for the Low Cost Combat Direction System meets all the requirements specified by the Naval Sea Systems Command. The code provides the basic elements and is designed for integration of a database, a user interface, and the ships sensors necessary to provide essential data to operate the system.



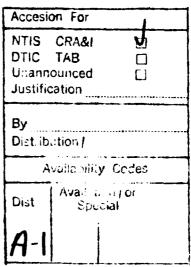

# THESIS DISCLAIMER

Appropriate credit is given for names used which are trademarks of various corporations.

ADA is a registered trademark of the United States Government, ADA Joint Program Office.

LMS 11 is a registered trademark of LOGICON.

SUN is a registered trademark of Sun Microsystems.

UNIX is a registered trademark of AT&T.

The views expressed in this thesis are those of the authors and do not reflect the official policy or position of the Department of Defense or the United States Government.

# **TABLE OF CONTENTS**

I.	INTRODUCTION	1
	A. Historical background of the LCCDS	4
	B. Project organization and goals	5
	C. Software engineering approach.	8
II.	INTEGRATION SYSTEM RESEARCH ANALYSIS	12
	A. Requirements for LCCDS	12
	B. Low Cost Combat Direction System context diagram	15
	C. Requirements for the integration system	16
	D. Integration system context diagram	21
	E. Integration system structure diagram	22
	F. Event list	23
Ш	. DESIGN OF THE INTEGRATION SYSTEM	26
	A. Interface specification for the integration system	26
	B. Statement of purpose	26
	C. Constraints	27
	D. The integration system	28
	E. The object oriented database management system	32
	F. The link 11 receive only system	36

	RATION SYSTEM/OODBMS ARCHITEC ND IMPLEMENTATION	
A. Integra	ation system model	38
1. List	of Integration System packages	40
2.Abst	ract Data Types	42
<b>a</b> . 7	TRACK	42
<b>b</b> . 1	FILTER	46
c. 7	TRACK_DATABASE	48
<i>d</i> . (	GLOBAL_POSITION	49
e.	LINK_TYPE	49
f. A	AESOLUTE_TIME	50
g.	VECTOR_2	50
h.	VECTOR_3	51
3. Tasl	c Integration System	52
4. Tasl	c GPS_Update_Task	54
5. Tasl	c Link_Cycle	55
6. Tasl	r Process_Link_Track	55
B. Databa	ase model	55
C. Link 1	1 model	61
v. evalu	ATION OF SYSTEM PERFORMANCE	64
A. Functi	onal	64
R Timin	charts for real time constraints testing	67

VI. CONCLUSIONS	72
A. Recommendations	72
B. Evolution of the system	73
APPENDIX A GUIDE TO DATA TYPES	75
APPENDIX B INTEGRATION SYSTEM: Ada Code	81
APPENDIX C TRACK PACKAGE: Ada Code	104
APPENDIX D FILTER PACKAGE: Ada Code	154
APPENDIX E CPA PACKAGE: Ada Code	179
APPENDIX F VELOCITY PACKAGE: Ada Code	185
APPENDIX G VECTOR 2 PACKAGE: Ada Code	187
APPENDIX H VECTOR 3 PACKAGE: Ada Code	195
APPENDIX I SPEED PACKAGE: Ada Code	203
APPENDIX J ANGLE PACKAGE: Ada Code	205
APPENDIX K ABSOLUTE TIME PACKAGE: Ada Code	207
APPENDIX L DISTANCE PACKAGE: Ada Code	217
APPENDIX M GLOBAL OBSERVATION PACKAGE: Ac	da 210

APPENDIX N GLOBAL POSITION PACKAGE: Ada Code	. 220
APPENDIX O RELATIVE OBSERVATION PACKAGE: Ada Code	230
APPENDIX P RELATIVE POSITION PACKAGE: Ada Code	231
APPENDIX Q TRACK DATABASE PACKAGE: Ada Code	. 232
APPENDIX R LINK PACKAGE: Ada Code	. 239
APPENDIX S SYSTEM STATUS PACKAGE: Ada Code	. 243
APPENDIX T NAVIGATION_PACKAGE: Ada Code	. 246
APPENDIX U M_SERIES_MSG_PACKAGE: Ada Code	. 250
APPENDIX V PROCESS_LINK_TRACK_PACKAGE: Ada Code	. 252
APPENDIX W RELATIVE_TIME_PACKAGE: Ada Code	255
APPENDIX X GPS CONNECTION CONSIDERATIONS	. 258
LIST OF REFERENCES	260
INITIAL DISTRIBUTION LIST	264

# **LIST OF FIGURES**

Figure 1: LCCDS CONFIGURATION DIAGRAM	5
Figure 2: NON-NTDS PLATFORM	14
Figure 3: LCCDS CONTEXT DIAGRAM	15
Figure 4: INTEGRATION SYSTEM CONTEXT DIAGRAM	21
Figure 5: INTEGRATION SYSTEM STRUCTURE DIAGRAM	22
Figure 6: INTEGRATION SYSTEM EVENT LIST	23
Figure 7: NAVIGATION SYSTEM EVENT LIST	24
Figure 8: USER INTERFACE EVENT LIST	25
Figure 9: TRACK INPUT BY USER	29
Figure 10: TRACK INPUT BY LINK 11	30
Figure 11: TRACK INPUT BY OWNSHIP SENSOR	30
Figure 12: TRACK FILTER STRUCTURE DIAGRAM	31
Figure 13: DATABASE COMMUNICATIONS DIAGRAM	34
Figure 14: GLOBAL POSITIONING SUBSYSTEM	35
Figure 15: LINK 11 RECEIVE ONLY CONTEXT DIAGRAM	37
Figure 16: PACKAGE DEPENDENCY DIAGRAM LEVEL 0	38
Figure 17: PACKAGE DEPENDENCY DIAGRAM	39
Figure 18: DATABASE STRUCTURES	60
Figure 19: DATA STRUCTURE DIAGRAM (LINK 11)	63
Figure 20: TIMING DIAGRAM 1	68
Figure 21: TIMING DIAGRAM 2	68
Figure 22: TIMING DIAGRAM 3	69
Figure 23: TIMING DIAGRAM 4	69

Figure 24: TIMING DIAGRAM 5	70
Figure 25. T. AING DIAGRAM 6	70
Figure 26: TIMING DIAGRAM 7	71
Figure 27: GPS CONNECT	258

# **ACKNOWLEDGEMENTS**

We owe a great debt of gratitude to many people who have inspired and encouraged us during the process of writing this thesis. Special thanks goes to our families, for their support and patience. Also, we would like to mention a few individuals for the time, energy, and advice they gave on behalf of our efforts to formulate our concepts, research, and code the final product:

Mr. Walter Landaker (NPS, Monterey)

Mr. John Locke (NPS. Monterey)

Mr. Russell H. Whalen (NPS, Monterey)

Mr. Mike Williams (NPS, Monterey)

Mr. Albert Wong (NPS, Monterey)

# I. INTRODUCTION

The primary goal of the combat direction center is to ensure the individual fighting capabilities of a single ship. Each ship, however, not only supports the task force, but enhances it to make the task force a single fighting element capable of overcoming any enemy. The Navy has met the challenge of the 1990's with the development and implementation of the AEGIS System. Combatants without this AEGIS capabilities are being upgraded to meet these standards and capabilities when and where it is possible. In some cases this is impossible, for instance, most non-combatants at present have no automated capabilities whatsoever The Navy had the choice of either starting from scratch and fitting these ships from ground up or developing a new system that was capable of meeting specific requirements, still holding the cost of development and implementation to an affordable level. The Navy has projected its desire to develop a system that can be installed on non combatant ships or to augment existing systems on Combat Direction System(CDS) equipment ships. This implementation would be accomplished in Ada and would reflect the specifics of five increments as detailed in Reference 1. The introduction of the Low Cost Combat Directions System (LCCDS) [Ref. 1, 2] into the field of research and development launched the need for a new look at the way Combat Direction Systems function.

The increased complexity of warfare in this decade and the next requires a system capable of timely response and rapid recovery. The LCCDS, a Real Time System, will meet this challenge. Receiving data from a number of sensors, the system will process raw data into formatted information which is both displayed and stored in the database for future recovery and use. Utilizing the Global Positioning System (GPS) the LCCDS will continuously monitor and update ownship position. Receive only link 11 provides a tactical picture of the ship's environment. Equally significant is the user interface, which provides

a variety of inputs from the operator and creating a well balanced, functional, and informative system capable of handling the most critical situation.

The LCCDS system will be implemented on a commercially available microprocessor-based workstation. Selection of a microprocessor is relatively straight forward.

- 1. The system must meet the NAVSEA requirements for shipboard use.
- 2. It must be capable of handling our software requirements.

The Sun Microsystems SPARCstation 2 will provide the capabilities required for the shipboard and real time environment of the LCCDS. The 4.2 BSD UNIX operating system has been suggested [Ref. 3] and meets the requirements necessary to manage the Verdix Ada software development system. Verdix Ada will be the implementation language for the Low Cost Combat Direction Software System. The integration must accomplish an interface between existing shipboard navigation sensors, link 11, and the object oriented database management system. These interface points with navigation and link 11 are not interactive, and allow the integration system only to receive data. The user interface will receive data from the integration system while the database will support both retrieval and storage of data via the integration system.

The LCCDS will accomplish all these tasks plus several additional services in just seconds vice minutes and with a much greater accuracy and reliability than manual methods. This capability is made possible by the careful selection of a powerful, inexpensive microprocessor workstation. One of the projected users of the LCCDS is on board ships without Naval Tactical Data System(NTDS), where at present handling of combat support is accomplished manually, using only maneuvering board and status boards kept updated by individual watch standers. The addition of the LCCDS to one of these platforms would leave the Commanding Officer and his watch standers free to accomplish their mission in a more accurate, safe, and expedient manner.

The integration system is a vital element(module) of the Low Cost Combat Direction System(LCCDS) project which is sponsored by Naval Sea Systems Command(NAVSEA). The LCCDS project is currently divided into three major research and development areas.

- 1. The **integration system**, whose primary function is confining and filtering information from several sources, including ownship sensors, Global Positioning System and receive only link 11. To monitor this information and detect impending significant events, such as closest point approach of other vessels, shoals, aircraft fly over, and navigation hazards. To provide, to the user, a means of continuous access to necessary navigation data, such as ownship fix information, position of intended movement, and waypoint locations. To provide an archival record of the available tactical information for both immediate and historical use.
- 2. The user interface module, which provides the user with onscreen visual elements to provide tactical information in an effective form and enables the user to manage the LCCDS. The user interface receives track information, and environmental information requested from the integration system.
- 3. The **navigation system** of the LCCDS, which will provide ownship navigation and maneuvering data.

The objective of this thesis is to describe the research and development of the integration system for the LCCDS. In conjunction with the development, a design and implementation phase for the integration system as a part of the LCCDS is discussed. A prototype of the integration system with full details on integrating the user interface, the navigation system, and an object oriented database is implemented in Ada. The integration system meets all the requirements of a real time systems as required in the design specifications [Ref. 1].

# A. HISTORICAL BACKGROUND OF THE LCCDS

The traditional or conceptual meaning of a ship's combat system is typically the men and equipment which provide the ship with its offense and defense capabilities. However, some subsystems such as communication and navigation are not in the spotlight as often as the weapons system. Both subsystems accomplish their mission in a routine manner and unless disabled or inoperative are forgotten or de-emphasized when combat systems are discussed. These systems, which provide the eyes and ears for the ship, play an equally important role in the ship's overall combat system. It is the composite of the ship's elements and personnel processing either manual or automated information and providing support to the overall task/mission of the platform that is important. During the late 1950's and since the Naval Tactical Data System (NTDS) has played the role of tactical data integration. Since its evolution out of a need for faster and more accurate information NTDS has been plagued with restrictions and hang-ups. As technology increased, the need to improve the system increased, yet many of the outdated systems were not replaced, and heavy requirements for manual intervention and control continued to slow and restrict the system. Uncoordinated changes in the interfacing system and weapons systems cause a make shift and continuous catch up mode.

Today we have several different generations of these modified/improved systems in the fleet [Ref. 4]. Ongoing study and thirty years of experience has caused the development and deployment of the Combat Direction System which is not totally separated from, but has substantial increases in capabilities over the NTDS. The role of the Combat Direction System is composed as follows [Ref. 5].

1. An automated Database Management System capable of managing tactically significant tracks.

2. A combination of necessary element to form a combat system whose primary purpose is to support the combat direction center.

# B. PROJECT ORGANIZATION AND GOALS

The Low Cost Combat Direction System research and development is under the supervision of the Naval Sea Systems Command. Research is ongoing at the Naval Post Graduate School, Monterey, CA., Naval Ocean Systems Command, San Diego, CA., and Massachusetts Institute of Technology, Cambridge, MA.

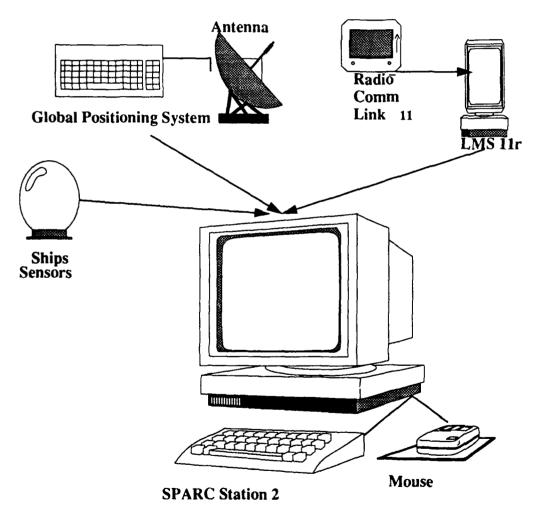


Figure 1: LCCDS CONFIGURATION DIAGRAM

The LCCDS project as shown in Figure 1, is divided into three basic areas of development:

- 1. The hardware evaluation and procurement.
- 2. The development of the software packages.
- 3. Testing and evaluation for Real Time performance

The integration system Project, an element in areas 2 and 3 of the LCCDS, is divided into four major areas of research and development.

- 1. A system capable of providing an interface with the user, developing an interactive communication between user and system.
- 2. A system capable of interfacing with the navigation system and providing ownship navigation data.
- 3. A system capable of interfacing with Link 11 receive only and providing for display network track data.
- 4. A system capable of data storage and retrieval utilizing data received from sensor interfaces, and direct input from the user.

The project sponsor goals for the LCCDS integration system are as follows:

- 1. Locate, evaluate, and procure the hardware necessary to meet the shipboard requirements.
  - 2. Use Ada as the implementation language.
  - 3. Integrate an object-oriented Database Management System.
  - 4. Integrate a manual tracking and identification capability.
  - 5. Integrate a receive only link 11 capability.
- 6. Integrate an on ship navigation and maneuvering capability, along with display of shore line maps.
  - 7. Integrate an autotracking capability [Enclosure 1, Ref. 1]
  - 8. Test, evaluate, and employ the system.

The detailed initial problem statement can be defined in terms of a high level LCCDS program description. Develop the prototype of a Low Cost Combat Direction SoftWare System (LCCDSWS) for a Low Cost Combat Direction System (LCCDS) that implements the basic features of Combat Direction System "Model 5" on a commercially available microprocessor based workstation [Ref. 1,2,3]. This is to be accomplished in respect to the five increments as outlined in Enclosure 1 Reference 1. Based on these guidelines this phase of the research must then start at the beginning, laying into place each part of the puzzle, with a focus on ensuring that no piece will place a constraint on any other piece. In fact, our goal is that each piece will enhance all the remaining pieces. To start, we had to select a system and the software environment for the system. The next steps are to define the requirements for the integration system, write the functional specifications linking the user interface and navigation modules, then implement the above in Ada.

In order for the integration system to meet these requirements, specific goal definitions for the integration system have been established.

- Goal 1. The integration system must provide a track database system, which is capable of accessing and updating track information in Real\_Time.
- Goal 2. The integration system must be able to parse incoming Global Positioning System(GPS) data and extract track/ownship location data in Real\_Time.
- Goal 3. The integration system must be able to parse incoming link 11 messages and extract track data in Real\_Time.
- Goal 4. The integration system must be able to parse incoming sensor related messages and extract track data in Real\_Time.
- Goal 5. The integration system must be able to provide the user with relevant tactical data external to the platform, for screen display.
- Goal 6. The integration system must be able to provide the user with the ability to customize and organize data to meet the specific needs of the individual platform.

Goal 7. The integration system must be able to provide the user with the ability to limit the number of tracks and/or elements for display. Any or all of this data must be available for retrieval and display. The user will by means of a filter package communicate to the integration system what is to be displayed.

Goal 8. The integration system must be able to provide the user with the ability to store, manage, and display geographical regions, paths, and waypoints to meet the specific needs of the user.

Goal 9. The integration system must be able to provide the user with ownship data to include closest point of approach(CPA) time, bearing, and range. CPA data provided may be between any track and ownship or between any two tracks, and must be in Real\_Time.

LT Bolick focused on requirements analysis, system specifications and the overall system design constraints. LT Irwin concentrated on the development of the software components. Both contributed to the system architectural analysis, software development, implementation and design.

# C. SOFTWARE ENGINEERING APPROACH.

The software development process has been defined by several different and capable authorities as having different and varied meanings. Yet all seen to agree on some specific points. The first and most overwhelming point is that when starting a project, the specific requirements must first be defined, researched and redefined. The second point is, that a set of specifications must be developed and a design architecture presented before proceeding with development of the project. Following these well established guidelines [Ref. 7]the model for the LCCDS integration system was developed.

- 1. Requirements analysis [Ref. 3].
- 2. Functional specifications.

- 3. Architectaral design.
- 4. Implementation.
- 5. Testing and Evaluation.

The first state in the LCCDS design, the requirements analysis, has been accomplished by the team of Seveney and Steinberg [Ref. 3]. It is our intention, however, to refine these broad requirements to more specific ones directly related to the integration system. At this point we focus on the initial problem statement: The thrust of this research is to provide detailed requirement analysis for the software portion of the LCCDS. We refer to this as the Low Cost Combat Direction Software System (LCCDSWS).

The Department of Defense(DOD) and Navy have taken great care in the development of specific guidelines for the design and implementation of software to be used by DOD. Directives to be considered in the integration system software require effort to be placed in:

- 1. Accomplishing the task (completion of the integration system).
- 2. Completion in a timely manner.
- 3. Completion at no significant additional cost to sponsor.
- 4. Producing a top quality product.

Using the spiral model of software development the following sequence of events have been established for the LCCDS integration system design, review, and acceptance.

- 1. Review and evaluation of requirements specified by the sponsor(NAVSEA).
- 2. Review and evaluation of requirements document (Masters Thesis by Seveney and Steinberg) to determine if there exist conflicts with the NAVSEA requirements.
- 3. Requirements Analysis Review(RAR) and consistent needs identified.
- 4. Needs analysis and new needs identified.
- 5. Completion of specifications with a review and evaluation of requirements and any new needs are identified.
- 6. Functionality review for first design.

- 7. Design review and reevaluation of needs and requirements. If necessary, apply changes to design.
- 8. Design accomplished with testing in progress. Review for requirements and needs by sponsor. Changes due to requirements and needs identified are applied at this time.

  Bugs are removed from software. Complete code review and code documentation.

  Module testing accomplished.
- 9. Design complete and ongoing testing and evaluation standards. Implementation of a working prototype. Complete system testing with independent quality assurance verification.
- 10. Delivery to sponsor, and ongoing maintenance and upgrade. (debugging in progress).

Research and design of the integration system conforms with the following DOD and Navy directives.

- 1. Department of Defense Military Standard 2167-A Defense System Software Development [Ref. 25].
- 2. Department of Defense Military Standard 2168 Defense System Software Quality Program [Ref. 26].
- 3. American National Standard Institute Military Standard 1815A-1983 Reference Manual for the Am Programming Language [Ref. 27].
- 4. DOD-STD\_480, Configuration Control\_Engineering changes, Deviations, and waiver [Ref. 28].
- 5. MIL-STD-483,
- 6. MIL-STD-490, Specification Practices [Ref. 30].
- 7. MIL-STD-1388, Logistic Support Analysis

The following Data Item Description(DID):

1. DI-MCCR-80012, Software Design Document

- 2. DI-MCCR-80014, Software Test Plan
- 3. DI-MCCR-80017, Software Test Report
- 4. DI-MCCR-80025A, Software Requirements Specification
- 5. DI-MCCR-80026, Interface Requirements Specification

Data Item Description, DI-MCCR-80025A, Software Requirements Specification, specifies the engineering and qualification requirements for a computer software configuration item (CSCI). As the basis for the design, format, data generation, and formal testing of this software project, our team of designers, used the Software Requirements Specification noted above.

# II. INTEGRATION SYSTEM RESEARCH ANALYSIS

# A. REQUIREMENTS FOR LCCDS.

The initial problem statement can best be stated by paraphrasing the Enclosure 1 to Reference 1, "Statement of work for Low Cost Combat Direction System (LCCDS)" which outlines the five increments that the LCCDS project is to be divided.

#### In increment one:

- 1. A computer system is to be selected
- 2. Design and develop an object-oriented Database Management System.
- 3. Design and develop a display/graphics, which provides the user with his own customized screen format allowing interactive operations with the system.
- 4. Display tracks and ownership data.
- 5. General response time to user "should be no greater that one half second".

#### In increment two:

- 1. Integrate manual tracking and track identification capability.
- 2. System maintains ownership track.
- 3. Use standard display symbols as list in Reference 1.
- 4. Display and assign speed and bearing as both values and leaders, with four second updates on all elements of the each track in the database.
- 5. Allow for additional/amplifying track information to be displayed at the users request.
- 6. Allow the user to change track identification number, category, and identity.
- 7. Allow for a unlimited number of tracks in the system.

#### In increment three:

1. Integrate receive only link 11.

#### In increment four:

- 1. Provide ownship data. Navigation and maneuvering data from ownership sensors.
- 2. Provide up to six steaming routes.
- 3. Provide up to 50 waypoints per steaming routes.
- 4. Provide closest point approach data.
- a. Provide ownship CPA with any track.
- b. Provide CPA between any two tracks.
- c. Provide display of CPA bearing lines on position display.

#### In increment five:

1. Integrate an organic auto tracking capability using (TBD) radar interface.


Issues in achieving common operations for Combat Direction Systems was addressed in accordance with the guidelines of Reference 2. The specific concerns faced by this research study and the issue we considered most important is safeguarding consistency, while preserving independent configurations for each user. A list of considerations by which to achieve this concerns are listed below.

- 1. What track characteristics should be specified in statements. Should the track follow the basic NTDS format.
- 2. What actions should the system take in the event of malfunction or error detected and what actions are left to the user.

- 3. Which of the common display and control formats of the model 5 Combat Direction System should be used.
- 4. What safeguards should be built into the system, more specifically the integration system, to insure consistent operations.
- 5. What accuracy and precision of track data is required.

Communications between the integration system and the elements of the LCCDS is a critical link in considering development of a Real\_Time system. There cannot be any delay in the system functions due to restrictions in the communications media. Therefore care and time was used in the selection and implementation of the communication software interface between the three elements user interface, Link 11, navigation interface, and the integration system as seen in Figure 2.

It is important to keep these requirements in mind, not allowing them to drive the research, but to provide some guidelines and restrictive boundaries within which to work. These questions and more are addressed and answered in this research.

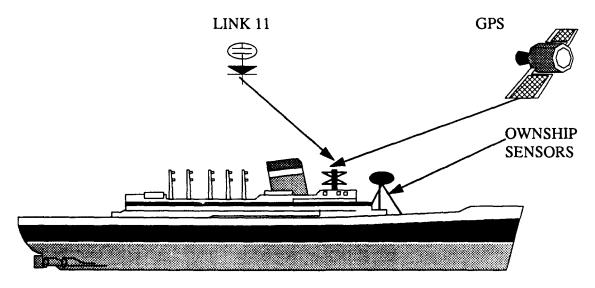

INPUT DATA IS RECIEVE ONLY

Figure 2: NON-NTDS PLATFORM

# B. LOW COST COMBAT DIRECTION SYSTEM CONTEXT DIAGRAM:

The integration system is divided into four major areas of research and development as seen in Figure 3. A complete discussion of each of these areas will be given later in this document.

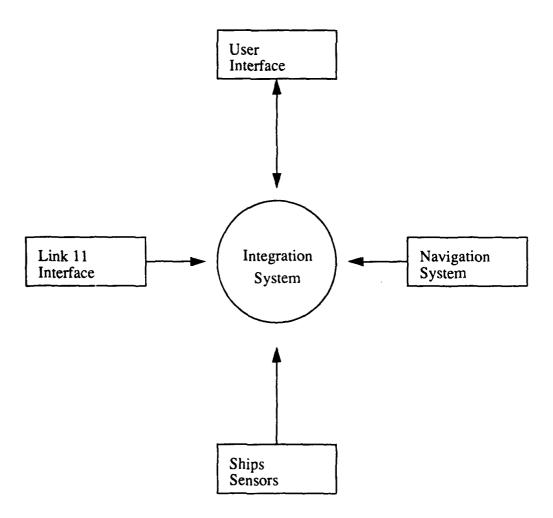


Figure 3: LCCDS CONTEXT DIAGRAM

# C. REQUIREMENTS FOR THE INTEGRATION SYSTEM

The requirements for the integration system appeared straightforward at first, but on closer examination we soon discovered that each of the more general requirements as outlined by Reference 1, Enclosure1 must be expanded to meet our specific needs. Listed below are the general requirements:

- 1. Use Ada as the implementation language.
- 2. Integrate an object-oriented Database Management System.
- 3. Integrate a manual tracking and identification capability.
- 4. Integrate a receive only link 11 capability.
- 5. Integrate an on ship navigation and maneuvering capability, along with display of shoreline maps.
- 6. Integrate an autotracking capability [Enclosure 1 of Ref. 1].

Expansion of these requirements is interlocked with the general design of the complete LCCDS. We began by looking at the qualities of Ada as the implementation language. Because of the Real\_Time requirement for the LCCDS, parallel processing is a must.

The basic design feature of the Ada language is centered around the use of "Oojects" for program design. An object is a data structure consisting of a unique identifier and an associated set of functions and procedures that operate on the object. This meaning of the term object may not be universally agreed upon, but it is our working definition, and will be used throughout the design of the integration system. These operators are the only allowed means of manipulating the object. A number of advantages follow from this design approach. Objects and their associated functions and procedures form a natural boundary along which to subdivide the integration system. Because the structure of a data type is

hidden from all but its associated operators, changes to the structure have a limited impact on the overall system. This feature greatly simplifies program modification and maintenance.

Ada provides a construct called a "Package" that allows the programmer to encapsulate objects and their associated functions and procedures. In addition, it allows for "private" types and "limited" private types that further restrict encapsulation so that objects of these types, while visible to the program parts, can only be manipulated by the functions and procedures it has referenced. A combination of these features permit the programmer to hide data structure implementation and create "abstract" data types. The use of the attribute *private* means that the programmer cannot use any knowledge of how the data type is to be implemented in the integration system. This allows for user changes in the basic features of the LCCDS but maintaining the integrity of the integration system. The integration system will take full advantage of each of these features.

Ada provides a "Task" construct, which is a feature that allows the programmer to divide a program into logically concurrent operations with synchronization between each or all of the operations. In addition to forming the basis for Real-Time operations, Tasks also provide a means of increasing processing efficiency in a parallel processor environment like the integration system for the LCCDS. Like packages, the task has a specification part and a body, however, the specification part is used solely to declare the synchronization point or entry point to the task. The entry point is used to indicate where the message is received or transmitted by the task.

The discussion of Ada packages and tasks would not be complete without an explanation of the Ada features "with" and "use". The with and use clauses are the mechanism by which the integration system environment is made available to all the elements contained within. The with clause tells the compiler that the programmer intends to use data types, procedures, and functions defined somewhere in the package specified.

The use clause tells the compiler that the programmer desires to reference the data types, procedures, and functions located somewhere in the package specified.

The use of data abstraction provides for the integration system several advantages:

- 1. A clearer conceptualizing of the problem or procedure being written and incorporated into the integration system.
  - 2. More reliable data security.
  - 3. A more reliable means of avoiding side effects.
  - 4. Easier modification of the implementation as changes or updates occur.

Making use of or reuse of algorithms that have been implemented previously is a major advantage of program abstraction. Another advantage of this programming style is that it can be modeled more readily using mathematical techniques, thus opening up greater possibilities for correctness proof methods. Correctness proof is a major concern of the integration system since lives will depend on its effectiveness and precision.

The Ada language provides high level facilities for expressing concurrent algorithms parallel processes. These facilities are tasks, and along with subprograms, packages, and generic units, they constitute the physical unit make up of which our programs will be composed. Synchronization between any two of these task occurs when the task issuing an ENTRY call and the task ACCEPTING an entry call establish a rendezvous. The two tasks communicate with each other in both directions during this rendezvous.

Several task can rendezvous with each other, in groups of two or more, at any instant. If several tasks need to rendezvous with the same task, then these entry calls are placed in a queue associated with the entry and accepted in first in-first out order. By this method careful control of the tasks and their order of execution can be artificially established. By this method also we can set a system of priorities without using the Ada task specification "priority".

Deadlock is a concern: NO DEADLOCKS is a requirement for the integration system. Therefore it is absolutely essential to build deadlock prevention into the system. This idea is one that draws a large amount of concern and articles written on the subject. There are two basic fields of belief in the area, one is that deadlocks cannot be prevented and must be handled when they occur. The other is that deadlocks can be prevented and with careful planning and design, and that prevention is preferable to control. In our case, if a task(one) makes an entry call to a task(two) that is in the entry call queue of a task(three), which is in the entry queue of task(one), then deadlock occurs. The design of the system is such that this situation does not occur. Clearly, we have chosen to handle deadlocks by prevention, but have also considered controls and exceptions if the situation arises. Other methods and controls will be discussed later in the document. Research on formal methods and tools to ensure that designs are free from deadlocks is in progress [Ref. 24].

As a subunit within the integration system the database has only one type of object, Track. There does exist, however, several classes of the object. The database features space for unlimited instances of each class, limited only by the amount of swap space available to the workstation.

The integration system must provide a function by which the user can manually enter a track. Incorporated in this task will be provisions allowing the user to change certain attributes of the Track but, restricting these changes to Track identification number and other amplifying information.

The integration system must receive from the Global Positioning System ownship fix (Geographic\_Position) data which consist of a Latitude, Longitude, and a Greenwich Mean Time(GMT). A Global\_Position is the Latitude converted to an angle from the equator and the Longitude converted to an azimuth from the Greenwich Meridian. This data string must be translated and formatted into system data format. The ownship system data is to be stored in the database as track zero and used to define the ownship track. Ownship track is

used by the system to compute course, speed, closest point of approach, range, and bearing information on a user designated track.

The integration system must receive Link 11 data transmitted via the standard fleet UHF/HF communication channels. The data as received is a cryptogram and not usable by the integration system, therefore the data must be deciphered and translated into system format. To accomplish this translation we propose to use a system already being used in the fleet. This translation is a major project in itself and not a primary requirement for the prototype version of the LCCDS. The system proposed to translate the Link message input to M-series messages is the Link Monitoring System (LMS 11r) which receives the Link 11 data directly from the communications link and with a cryptographic unit (KG-40) inline, translate the data into English M series messages which can be sent to the link 11 processor inside the integration system. The link 11 processor translates the M series messages to a string of system formatted characters representing a relative position from DLRP of each contact. The integration system will then store each of these contacts in the database as a track.

A subset of these tracks determined by a filtering process designated by the user, can then be graphically displayed. The filter system is a collection of individual filters that can be combined together by utilizing the mathematical expressions and and or. This combination filter acts as a single filter and forms a TACPLOT, which is used by the integration system to send to the user for graphic display those tracks and situations requested. Filters are discussed in more detail later in this document. The shoreline maps and auto tracking capability listed in the NAVSEA requirements are not a part of this research project.

# D. INTEGRATION SYSTEM CONTEXT DIAGRAM

Figure 4 is the context diagram of the integration system. The diagram is used to illustrate the direction and paths of communication between the various elements of the integration system, the user interface, the link handler, and the navigation handler.

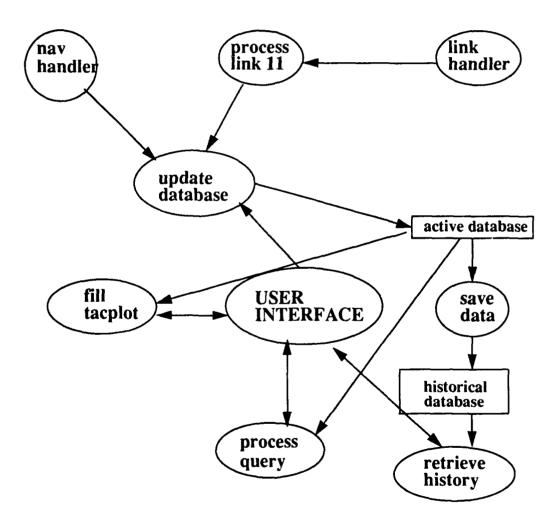


Figure 4: INTEGRATION SYSTEM CONTEXT DIAGRAM

# E. INTEGRATION SYSTEM STRUCTURE DIAGRAM

Figure 5 is the integration system structure diagram illustrating the individual sections or functions the integration system is naturally divided. Each section may contain several individual and unique functions or task which together accomplish the desired mission of that section.

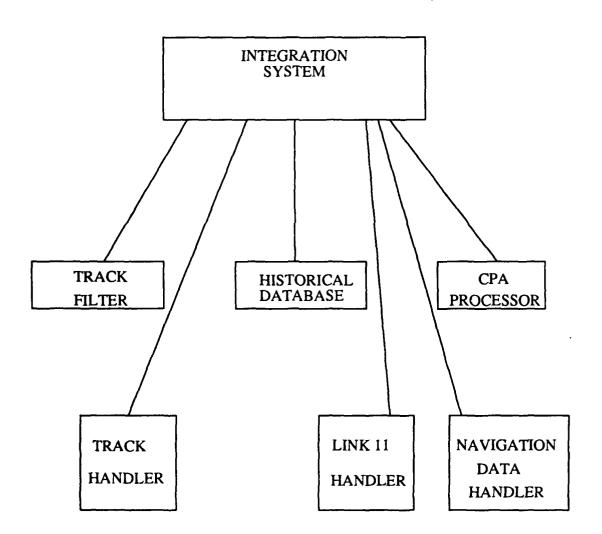


Figure 5: INTEGRATION SYSTEM STRUCTURE DIAGRAM

#### F. EVENT LIST:

A list of external events that cause a response by the integration system is shown in Figure 6.

1.Simulus: Receive ownship data from the Navigation interface.

Response: Interpret and store ownship position(fix) in database.

2. Stimulus: Receive track data from Link 11 NTDS.

Response: Interpret and store NTDS tracks in database.

3. Stimulus: Receive filter from the user.

Response: Provide for graphic display of tracks specified by filter.

4. Receive new track data from the user.

Response: Interpret and store in database.

5. Stimulus: Receive a request to provide CPA data from the user.

Response: Interpret and provide forgraphic display CPA data.

6. Stimulus: Receive track information request from the user.

Response: Provide for the user track identification number and category of track specified.

7. Stimulus: Receive flag from navigation interface indicating loss of sensor signal.

Response: Provide user with alarm specifying loss of sensor signal.

Figure 6: INTEGRATION SYSTEM EVENT LIST

List of events which will occur in the navigation system as a response to the action of one or more sensors are found in Figure 7.

1. Stimulus: Receive ownship fix data from the Global Positioning System.

Response: Translate GPS data to an Ada string of characters and transmit via communication link and RS 232 communication port to the integration system.

2. Stimulus: Receive ownship course from ships gyroscope.

Response: Transmit to integration system.

3. Stimulus: Receive water depth under the keel from ships fathometer.

Response: Transmit to integration system.

4. Stimulus: Receive ownship speed made good through the water from ships pitsword.

Response: Transmit to the integration system.

5. Stimulus: Receive contact information from the ships radar.

Response: Translate data to an Ada string of characters

representing a global position and transmit to the integration

system.

Figure 7: NAVIGATION SYSTEM EVENT LIST

List of events that originate from the user or integration system and trigger a response from the user interface are found in Figure 8.

1. Stimulus: Receive updated tacplot from integration system.

Response: Provide graphic display of tracks specified by filter.

2. Stimulus: Receive update of track category and amplifying data from integration system.

Response: Provide graphic display of track category and amplifying data.

3. Stimulus: Receive track data from the integration system.

Response: Provide corrections to local tracks.

4. Stimulus: Receive CPA information from the integration system on any specified track and ownship track.

Response: Provide graphic display of CPA data.

**5. Stimulus: Receive CPA information from the integration system** 

on any two specified tracks other than ownship.

Response: Provide graphic display of CPA data.

6. Stimulus: Receive initialize the system from integration.

Response: User enters desired system setup.

Figure 8: USER INTERFACE EVENT LIST

# III. DESIGN OF THE INTEGRATION SYSTEM.

#### A. INTERFACE SPECIFICATION FOR THE INTEGRATION SYSTEM

One approach to the specification of concurrent programs is called behavioral. It starts by describing the possible events and actions, series of events and/or series of responses, in which part or all of a program may engage. The first big step was to take these descriptions and translate them into executable specifications. With this partial tool for designing concurrent programs, the construction of the integration system begin. At each level of the integration system we conducted a comparison of the different implementation methods available. Particularly noteworthy is that we found it readily easy to translate these implementation ideas into Ada code. More specifically, by using rendezvous and nondeterministic "Select" statements of Ada Tasking ensure the parallel processing we seek.

The integration system shall provide detailed information on all aspects of the tactical situation and system control, operating parameters and status. This information is obtained from the Tactical Database which shall be an object-oriented database management system written in Ada. The system will provide a flexible, easy to use, window based user interface. A navigation interface will provide the system with ownship information and track data, as well as navigation data.

## **B.** STATEMENT OF PURPOSE

The purpose of the integration system of the LCCDSWS is to integrate the user interface, the navigation system, the receive-only link interface 11 and the object-oriented database management system. The system is to maintain and display a real time picture of the tactical environment for the specific platform on which the system is located.

The results of this integration will store in the database all tracks, including the ownship track which includes ownship Navigation and Maneuvering data. The integration system will use filters provided by the user to determine the contents of the tacplot which is sent to the user interface for display.

#### C. CONSTRAINTS

Software development for Department of Defense must adhere to Department of Defense Military Standard 2167-A Defense System Software Development, 29 February 1988[Ref. 25], Department of Defense Military Standard 2168 Defense System Software Quality Program, 29 February 1988[Ref. 26], and American National Standard Institute Military Standard 1815A-1983 Reference Manual for the Ada Programming Language, 17 February 1983[Ref. 27].

Specified in the Requirement Analysis [Ref. 3] Seveney and Steinberg thesis, are the LCCDSWS, prototype constraints. These constraints will be used as a guideline for the constraints definitions of the integration system. The performance constraints may be evaluated at several different levels and in several different contexts but we will focus on a limited view from the standpoint of the integration system only.

- 1. Resource constraints: The basic resources are available in the LCCDS team and in the faculty and staff of the Naval Postgraduate School.
- 2. Implementation constraints: Hardware available is the Suns Microsystems Sparcstation 2 machine. The system is configured in a stand-alone unit configuration with four each RS-232 communication ports used for interface with the Link, GPS, and ships sensors. Operating System as defined in reference 2 is derived from the UC Berkely Version 4.2 BSD and Bell Lab's UNIX system version 32v [Ref. 32].

In accordance with Reference 1 and The Department of Defense policy the implementation language for the system will be Ada. In this particular application Verdix Ada 6.0 is used.

3. Performance constraints: Performance for the LCCDS workstation include Real\_Time data processing and display. In this application system performance has an upper bound: Reference 1, Enclosure 1 defines Real\_Time to mean that response time must be less than or equal to four seconds.

### D. THE INTEGRATION SYSTEM

The design of the LCCDS is not that of an embedded system, however, the integration system contains functions and procedures not visible to the user. These functions and procedures, in some cases found in Ada Tasks, perform a vital role in the overall systems response and behavior. The design of the integration system as a Real\_Time embedded system requires the use of parallel processing.

In order to meet the time constraints specified in Reference 1, special attention must be given to the order and magnitude of the Ada programs and packages which make up the integration system. The integration system is the main processing element of the LCCDS. Other elements such as the navigation system, Link 11, ships sensors have a one way communication link and only provide data to the integration system. The user interface element has a two way communication link with the Integration System, but is used to display, retrieve, and add to the data already in the system. The integration system stores the data received from these sources in the active database (located in RAM). The data is stored in a data structure called Track, which is defined in the database section of this document.

The system as configured can retrieve the data to perform various operations and functions on Track as required by the user or predefined by the system. The requirements for the system, list a number of these operations and functions [Ref. 1, 2].

- 1. Provide a filtered set of tracks to the user interface for graphic display.
- 2. Provide the user with the ability to select the category and type of track to be displayed.
- 3. Provide the user with closest point of approach data between any pair of tracks selected by the user.
- 4. Track position to be dead reckoned using current track bearing and speed.
- 5. Allow the user to make changes to tracks in the database.
- 6. Provide the user with safe maneuvering data.

The integration system receives track data from three sources:

1. Manual input from the user as illustrated in Figure 9.

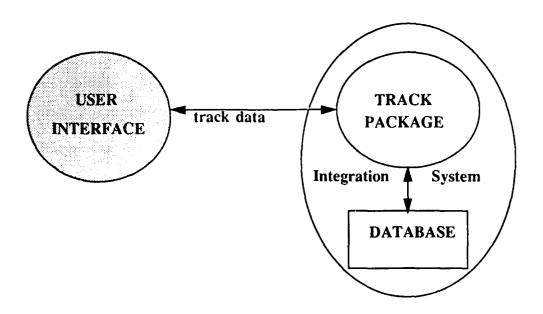


Figure 9: TRACK INPUT BY USER

2. Via communications interface with link 11 as illustrated in Figure 10.

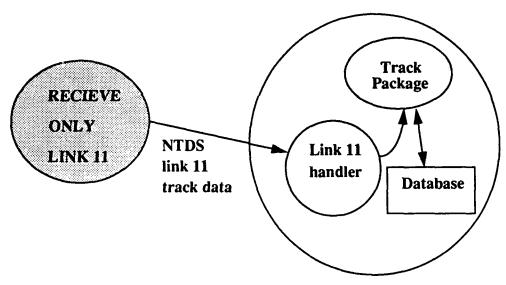


Figure 10: TRACK INPUT BY LINK 11

3. Via communications interface with the ships sensors(radar) as illustrated in Figure 11.

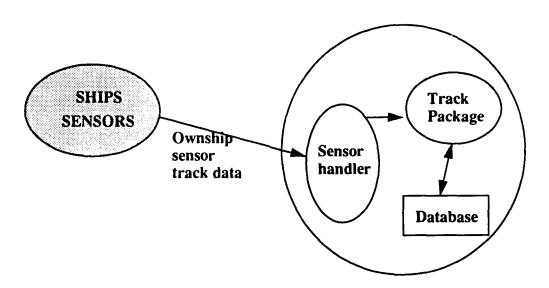


Figure 11: TRACK INPUT BY OWNSHIP SENSOR

The prime objective of the LCCDS is to provide a clear and concise tactical picture for the ship commander. This tactical picture must be presented in a manner which accurately represents the tactical problem (situation) comprehensibly to the user. The integration system allows the user freedom to concentrate on the situation via user predefined filters. Regardless of the mission or tactical situation, a ships sensors provide only raw data. Even when this data is graphically displayed relative to ownship, it is still only useful when the user applies intelligence to the overall situation.

A simplified view on the process of collecting, filtering, and displaying tactically significant data in a Real Time environment is in Figure 12.

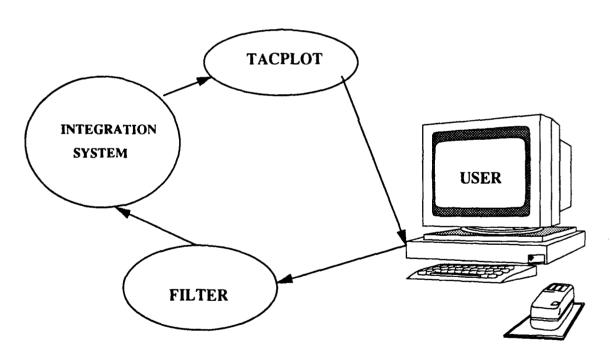


Figure 12: TRACK FILTER STRUCTURE DIAGRAM

The integration system provides navigation, link 11, and user interface inputs to the database. The input is not direct, but through the integration system, allowing for control of the data stored in the database. A specific package is written inside the integration system to interface with the navigation system. The navigation system package provides a facility for converting GPS data into an ownship track. The link 11 package processes the link 11 tracks and after filtering the track base, stores all accepted tracks in the database. Local or user generated tracks is part of the track package.

The integration system consist of a main Ada task that makes entry calls to the various tasks, functions, and procedures that collectively makeup the integration system. The simplified function or purpose of the integration system is to receive data from various sources and translate/parse this raw data input into data the user\_interface can use for graphic display and store a duplicate set of data in the database.

The user has available a set of options by which to manipulate the system filter algorithm. The user may select a single atomic filter or a series of atomic filters and by applying the mathematical and and or statements combine these filters to create a single and filter. This single and filter provides a template which the integration system uses to retrieve only tracks that meet the specific properties of the Tacplot. The Tacplot filed with the tracks that meet the filter are sent to the user interface for graphic display of the tactical situation as illustrated in Figure 12. How the data is displayed is not a consideration of the integration system.

### E. THE OBJECT ORIENTED DATABASE MANAGEMENT SYSTEM

The requirements for the LCCDS specify design and implementation of an objectoriented database system. The purpose of this database is to manage the tactical information store of the LCCDS. The information is used to display a tactical picture of a ship's local environment and provide pertinent answers to queries defined by the user. The data structure and methods of the database, as well as the supporting software components are to be implemented in Ada. The features included in our database are based on the following considerations:

- 1. Real\_Time performance: Safety and Maneuverability of the ship, as well as tactical decision-making demands Real\_Time performance.
- 2. Maintainability: Using an object-oriented approach to the database ensures the methods and procedures defined on an object will not be affected if the data structure representing the object requires alteration.
- 3. Transaction concurrency: In order to maintain Real\_Time performance, parallel execution of separate tasks must occur. The parallel processing of these tasks, however, introduces potential of deadlock situations that should be prevented.

The design of our database responds to the above considerations utilizing:

- 1. Variant Ada records [Ref. 33] to define a single common object class. The main data structure holding the instances of the defined objects allows for rapid retrieval and ease of updating. Locking protocols prohibits conflicting transactions on the database.
- 2. Ada tasks to handle the transaction concurrency problem.

We start our explanation of the record structure by defining the catalog, also known as the database description or schema [Ref. 5, 10]. The catalog contains the following information:

- 1. The constraints.
- 2. Usage standards and application programs.
- 3. Descriptions and user information.

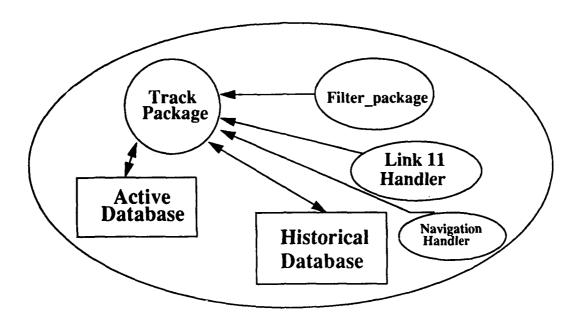


Figure 13: DATABASE COMMUNICATIONS DIAGRAM

The system provides the user with the ability to find a specified track in the database, add a track, alter a track, drop a track, send a track to history, restore an altered track to database, see Figure 13.

As discussed previously the Global Positioning System (Trimble-4000 S) illustrated in Figure 14 transmits the current fix data of ownship to the navigation handler via an RS-232 communication port via an RS-232 communication port. The navigation handler parses this data and translates it to a LCCDS usable format. The integration system receives from the navigation handler a string of characters which represent the position of ownship at a specific time.

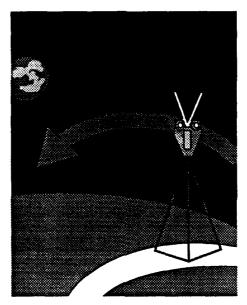


Figure 14: GLOBAL POSITIONING SYSTEM

The string of characters is parsed and converted into a Global\_Observation for ownship. Data is received from the GPS at one second intervals. The navigation handler stores each of these data\_input\_strings in a buffer ready for the integration system to read. When the integration system makes a request to read data the navigation handler locks the buffer and does not allow the GPS to perform its normal one second overwriting of the data in the buffer with new data.

When the integration system has completed the read function the navigation handler unlocks the buffer and allows the GPS to overwrite the buffer with the next full string of data. An interval of every four seconds is required for the integration system to update the ownship Global\_Observation.

Link 11 tracks are received by the system and converted to the track type. The system stores the tracks in the database. Filtering of these Link 11 tracks occurs in two stages, first as the tracks are received and deciphered, the second when the user designed filter is used to fill the Tacplot for graphic display of tracks.

### F. THE LINK 11 RECIEVE ONLY SYSTEM

A vital feature in the LCCDS is the ability to receive all contact information reported by the task force on the NTDS Link 11. The data gathered and displayed from this source will give the Commanding Officer a clear tactical picture of all elements in the force. The Link provides a measure of security for ships maneuverability and tactical defense. This study did not consider a two-way communication link because the value of two-way communication to a non-combatant ship is unclear. However, data from ownship sensors could be useful to other combatant ships.

we propose to utilize software and hardware from an outside source to translate the NTDS Link 11 data into source code the system can use. The Link 11 interface with the integration system consists of the link 11 handler designed inside the integration system and communicating directly with it is the external Link 11 data translator and decoder. The link handler is an Ada function which breaks a string of characters into the individual parts of the data type Track and stores the array of parts in a buffer waiting for the integration system to lock the buffer and read out the data. After reading the contents of the buffer the integration system unlocks the buffer. The link handler then repeats the process.

Once this translator package is in hand, we can proceed to design an Ada package capable of parsing the NTDS Link 11 code string, M messages, and breaking them into there individual elements. Once the individual elements are available the system can convert them into a Track record. A new LCCDS track number is be assigned to each track with a pointer from the NTDS track number to its associated system track number. The Track record is be stored in the active database as a track. We limited our work on the link handler to developing a specification.

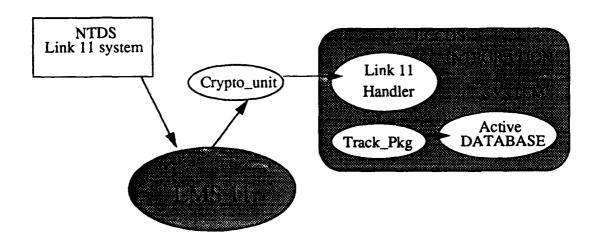


Figure 15: LINK 11 RECIEVE ONLY CONTEXT DIAGRAM

The system recommended to decipher and translate the Link 11 data into a string of correct LCCDS message format characters is the Link Monitoring Set 11 r (LMS 11r) system as illustrated in Figure 15. The LMS 11r system is a Link 11 receive only Data Terminal Set which can provide a continuous sting of two each sixteen bit parallel messages of the Link 11 data. These messages are then passed through the crypto- unit (KG-40 for LOS - UHF/HF and KG-84 for SATCOM - UHF)) which decodes the messages to M series messages. Using the format prescribed in OP-SPEC 411.2 these M series messages can be translated in the system format (English Text) by the integration system link 11 processor package. Because of the classification (CONFIDENTIAL) of the link 11 material a removable hard drive or tape drive is recommended for secondary memory. At this point a discussion of the protocol for Link 11 data receipt, MIL-STD-1397 input data, would be appropriate if this research paper was classified. Because the paper is unclassified we will leave this discussion to the follow-on research and development of the Link 11 receive only system.

# IV. INTEGRATION SYSTEM /OODBMS ARCHITECTUAL DESIGN AND IMPLEMENTATION

## A. INTEGRATION SYSTEM MODEL

The integration system software is designed as a set of Ada packages. This concept allows for greater versatility and application of the Ada programs and functions developed. The integration system provides navigation, link 11, and user inputs to the database. The input is not direct, but through the integration system, allowing for control of the data stored in the database. A specific package is contained in the integration system to interface with the navigation system.

A general discussion of the packages and how we applied them to the overall design concept of the integration system follows Figure 16 which is a package dependency diagram of the integration system. In Figures 16 and 17 nodes are Ada packages, and the arrows depict Ada with statements.

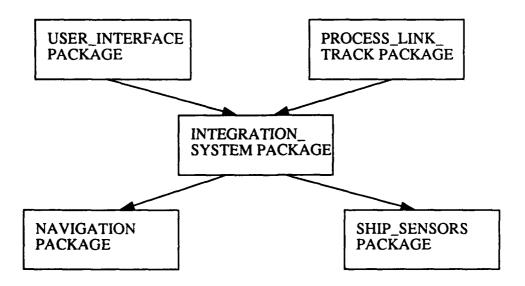


Figure 16: PACKAGE DEPENDENCY DIAGRAM LEVEL 0

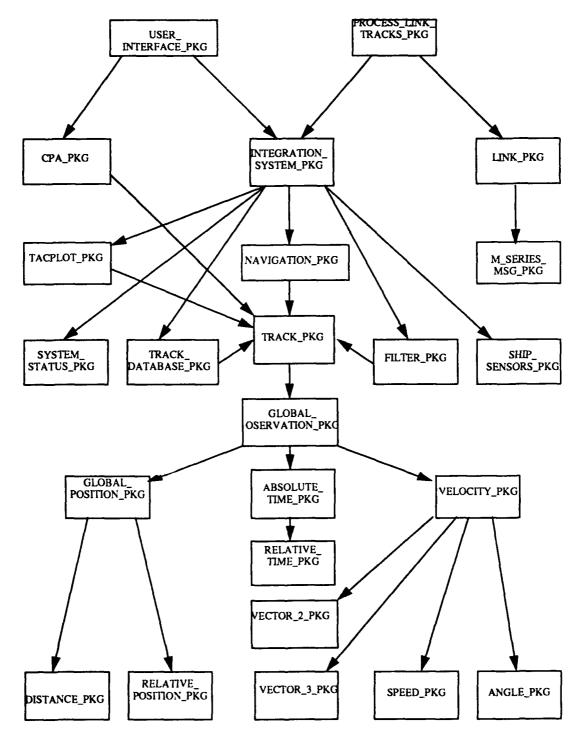


Figure 17: PACKAGE DEPENDENCY DIAGRAM

### 1. LIST OF INTEGRATION SYSTEM PACKAGES:

- INTEGRATION SYSTEM PACKAGE: The purpose of the package is to receive data or information from various sources, translate/parse the raw data input into integration system formatted data, store the data in the database as a track, and send the data to the user\_interface for graphic display of the tactical situation. The package also performs time synchronization functions for external tasks.
- FILTER PACKAGE: The purpose of the package is to represent policies for choosing which tracks are entered in the database and which are shown on the graphic display. The policies are defined by the user via the user\_interface.
- TRACK PACKAGE: The purpose of the package is creation, deletion, and modification of tracks in the database.
- **CPA PACKAGE**: The purpose of the package is computation of the closest point of approach between any two tracks specified by the user.
- VELOCITY PACKAGE: The purpose of the package is to represent the velocity of a specified track. Velocity is defined as a two dimensional vector, representing course and speed.
- VECTOR\_2 PACKAGE: The purpose of the package is to provide a means of using two dimension vectors for various applications.
- VECTOR\_3 PACKAGE: The purpose of the package is to provide a means of using three dimension vectors in various applications.
- **SPEED PACKAGE**: The purpose of the package is to represent speed in knots or yards per second.
- ANGLE PACKAGE: The purpose of the package is to offer a means of representing an angle in radians or degrees and functions to return attributes of the angle.
- **DISTANCE PACKAGE**: The purpose of the package is to offer a means of representing distance in yards or nautical miles.

- ABSOLUTE TIME PACKAGE: The purpose of the package is to provide
  the integration system constant access to system time. Defines the abstract
  data type Absolute\_Time and associated functions. System time can be
  displayed as Greenwich Mean Time or Local Mean Time depending on user
  needs.
- **RELATIVE TIME PACKAGE**: The purpose of the package is to represent the length of the (interval) between two events.
- GLOBAL POSITION PACKAGE: The purpose of the package is to represent geographical positions on the earth. Input and output in terms of latitude and longitude are provided. Internally uses an angle from the equator and an angle from the Greenwich Meridian.
- GLOBAL OBSERVATION PACKAGE: The purpose of the package is to represent a global\_observation(global\_position, velocity, and time) for a track. The global observation indicates current position of the track.
- RELATIVE POSITION PACKAGE: The purpose of the package is to compute the bearing and range of a track from a reference track. Bearing is defined as an angle from true north and range is the distance between the two tracks.
- **RELATIVE OBSERVATION PACKAGE**: The purpose of the package is to define a data type Relative\_Observation that stores a Relative\_Position and an Observation\_Time.
- TRACK DATABASE PACKAGE: The purpose of the package is to provide a means to store the tracks in the system. To accomplish this the package creates a linked list of tracks.
- LINK PACKAGE: The package converts M series messages into system formatted tracks. These tracks are stored in the database as link controlled tracks.

- NAVIGATION PACKAGE: The purpose of the package is to keep track
  of ownship position via a communication port that accepts global
  positioning system data. The received data is translated into integration
  system track format and stored in the database as ownship current location.
- SYSTEM STATUS PACKAGE: The purpose of the package is to provide the system with a means to enable or disable the communication link between the system and the ships sensors. The package provides the integration system with a means of indicating a up and operating or down and off status of the ships sensors.
- M SERIES MSG PACKAGE: The purpose of the package is to provide a
  means of activating a communication port to read in the link M series
  messages from the LMS 11r and storing the messages in a buffer.
- PROCESS LINK TRACKS PACKAGE: The purpose of the package is
  to read from the buffer each M series message. Using the LINK package
  procedures/functions, each M series message is converted to an integration
  system link track. The LINK tracks are processed as integration system
  tracks and stored in the database.

#### 2. ABSTRACT DATA TYPES:

## a. TRACK

- (1) Description: A TRACK represents the observations and descriptions of a tactically significant contact. The implementation of the TRACK type is given in Appendix C, p. 103. There are several different kinds of TRACKs; each of which is identified by its TRACK\_CATEGORY (see Function TRK\_CATEGORY). The possible values of TRACK\_CATEGORY are:
- a. SURFACE\_PLATFORM: In nautical terms, a surface platform is defined as any man-made vessel designed to operate on the surface of the water. For a more detailed definition refer to Reference 2.

- b. SUBSURFACE\_PLATFORM: In nautical terms, a subsurface platform is defined as any man-made vessel designed to operate below the surface of the water. For a more detailed definition refer to Reference 2.
- c. AIR\_PLATFORM: An air platform is any man-made object designed to operate above the earth's surface. The platform has an ALTITUDE. For a more detailed definition refer to Reference 2.
- d. UNKNOWN: An unknown TRACK\_CATEGORY is defined as any TRACK whose TRACK\_CATEGORY has not yet been established by the user.

The TRACK\_CATEGORY of an UNKNOWN TRACK can be changed via the operation CHANGE\_TRACK\_CATEGORY.

- e. REGION: REGIONs consist of two types, CIRCLE and POLYGON. A REGION is stored in the database as a TRACK. A CIRCLE contains a center (GLOBAL\_POSITION) and a radius (DISTANCE). A POLYGON contains from three to twenty vertices (GLOBAL\_POSITIONS) that form the POLYGON. The REGION may be relative to a GLOBAL\_POSITION which does not have motion or relative to a TRACK that has VELOCITY. A REGION may represent an operating area in which the platform operates or may represent a restricted area in which platform movement is constrained or forbidden.
- f. PATH: A PATH consists of a series of WAYPOINTS (GLOBAL\_POSITIONS) and is stored in the database as a TRACK. A time is assigned to each WAYPOINT and represents a desired time to arrive at the WAYPOINT. The array is passed to the user\_interface for graphic display upon request. PATHs can be used to represent Path of Intended Movement(PIM) along which the platform travels. A PATH can be stored in history for later reference.
- g. MAN\_IN\_WATER: A GLOBAL\_POSITION used to mark the geographic location of a man lost overboard.
- h. SPECIAL\_POINT. A SPECIAL\_POINT TRACK is defined as a single object, real or imaginary, man-made or natural, and not otherwise designated as

surface platform, subsurface platform, air platform, or unknown. A SPECIAL\_POINT TRACK is further defined by its SPECIAL\_POINT\_CATEGORY. The possible values of a SPECIAL\_POINT\_CATEGORY are NAV\_HAZARD, WAYPOINT, or GENERAL. All SPECIAL POINT TRACKs have, attributes, VELOCITY, as (GLOBAL POSITION). A WAYPOINT is generally defined as an imaginary point at a specific GLOBAL POSITION with an additional attribute TIME TO that defines OWNSHIP's expected/desired arrival time to the WAYPOINT. A NAV\_HAZARD is a SPECIAL\_POINT that represents a physical object whose size and/or location presents a real hazard to navigation. A GENERAL SPECIAL\_POINT is a SPECIAL\_POINT not otherwise designated as a WAYPOINT or NAV\_HAZARD. Its description may be elaborated in the TRACK's AMPL\_INFO.

- (2) Attributes: The following are attributes of TRACK:
- a. Function TRACK\_ID\_NUMBER (TRK: TRACK) return NATURAL;

TRACKs are uniquely identified by their TRACK\_ID\_NUMBER. TRACK\_ID's are unique throughout a mission, to make sure that the historical record is unambiguous. Every TRACK has a TRACK\_ID\_NUMBER regardless of its TRACK\_CATEGORY. The TRACK\_ID\_NUMBERs are generated by the TRACK\_TYPE and are a one up count process (see the variable TRACK\_ID in the private part of the package TRACK\_PKG specification. The correspondence between Link TRACK\_ID's and TRACK\_ID\_NUMBER is maintained by the LINK\_TABLE data structure in the package LINK\_PKG.

## b. TRACK location:

Function CURRENT\_POSITION (TRK: TRACK) return GLOBAL\_POSITION;

CURRENT\_POSITION returns the GLOBAL\_POSITION of the TRACK's dead-reckoned position from the last GLOBAL\_OBSERVATION

Function RELATIVE\_BEARING (REFERENCE\_TRACK, TARGET\_TRACK: TRACK) return ANGLE;

Returns the bearing angle from the course of the REFERENCE\_TRACK to the TARGET\_TRACK.

Function TRUE\_BEARING (REFERENCE\_TRACK, TARGET\_TRACK: TRACK) return ANGLE;

Returns the bearing angle from true north to the TARGET\_TRACK.

Function MOST\_RECENT\_OBSERVATION (TRK: TRACK) return

ANGLE;

Returns the TRACK's last entered GLOBAL\_OBSERVATION.

c. TRACK motion:

Function TRUE\_VELOCITY (TRK: TRACK) return VELOCITY;

Returns TRACK's true course and speed relative to the surface of the earth as calculated in its MOST\_RECENT\_OBSERVATION.

Function TRUE\_COURSE (TRK: TRACK) return ANGLE;

Returns TRACK's true course calculated in its MOST\_RECENT\_OBSERVATION.

Function TRUE\_SPEED (TRK: TRACK) return SPEED;

Returns TRACK's true speed calculated in its MOST\_RECENT\_OBSERVATION.

Function TRACK\_RELATIVE\_VELOCITY (REFERENCE\_TRACK, TARGET\_TRACK: TRACK) return VELOCITY;

Returns TARGET\_TRACK's relative motion (course and speed) relative to the given REFERENCE\_TRACK.

Function RELATIVE\_COURSE(REFERENCE\_TRACK,

TARGET\_TRACK: TRACK) return ANGLE;

Returns TARGET\_TRACK's relative course as seen from the reference TRACK.

d. TRACK intelligence information:

Function AMPL\_INFO (TRK: TRACK) return AMP\_STR.VSTRING;

Returns a string of characters that more clearly defines the identification or mission of the platform represented by the TRACK.

Function TRACK\_IDENTITY (TRK: TRACK) return IDENTITY\_TYPE;

Returns the TRACK's IDENTITY\_TYPE, which can have the values UNKNOWN, FRIENDLY, HOSTILE, NEUTRAL.

Function PLATFORM\_CLASS (TRK: TRACK) return V\_AND\_C\_STR.VSTRING;

Returns a string of characters that define the class of the contact.

Examples are Cruiser or Aircraft carrier.

Function VESSEL\_NAME (TRK: TRACK) return V\_AND\_C\_STR.VSTRING;

Returns a string of characters that represent the platforms name. An example is USS EDSON.

- (3) Creation Operations A TRACK object is created by procedure CREATE\_TRACK Appendix C, p. 130. A required parameter for this operation is, understandably, its first GLOBAL\_OBSERVATION.
- (4) Update Operations The package, TRACK\_PKG, contains numerous functions and procedures to modify/update the attributes of TRACK objects as described in Reference 2.

### b. FILTER

(1) Description: A FILTER is a predicate on TRACKs that defines a subset of all possible TRACKs. FILTERs are used to represent display policies. They describe a set of characteristics that a TRACK must possess in order to be graphically displayed.

Complex FILTERs are defined in terms of simpler AND\_FILTERs. A FILTER predicate is a disjunction (or) of one or more AND\_FILTERs; that is, if a TRACK meets all requirements of at least one of the AND\_FILTERs, it is accepted for display. AND\_FILTERs are composed of simpler ATOMIC\_FILTERs. An AND\_FILTER predicate is a conjunction (and) of zero or more ATOMIC\_FILTERs; a TRACK satisfies an AND\_FILTER if it meets all requirements of its component ATOMIC\_FILTERs. Each ATOMIC\_FILTER defines a single relational constraint on a TRACK. The implementation of the FILTER type is given in Appendix D, p. 153.

- (2) Attributes: ATOMIC\_FILTERs have the form [FILTER\_CATEGORY RELATION CONSTANT]. The possible values of FILTER\_CATEGORY are DISTANCE\_FILTER, TRACK\_CATEGORY\_FILTER, and PLATFORM\_IDENTITY\_FILTER.
- a. DISTANCE\_FILTER describes a TRACK's distance from a reference TRACK or the TRACK's altitude (if air).
- b. TRACK\_CATEGORY\_FILTER describes a TRACK's TRACK\_CATEGORY.
- c. PLATFORM\_IDENTITY\_FILTER describes a TRACK's IDENTITY\_TYPE (UNKNOWN, HOSTILE, FRIENDLY, NEUTRAL).
- d. RELATION identifies the FILTER\_CATEGORY's relation to the input CONSTANT. The possible values of a RELATION are EQUAL, NOT\_EQUAL, LESS, LESS\_OR\_EQUAL, GREATER, and GREATER\_OR\_EQUAL. An example ATOMIC\_FILTER is "TRACK\_CATEGORY EQUAL SURFACE\_PLATFORM." This means that one requirement (ATOMIC\_FILTER) of an AND\_FILTER is that the TRACK must be of TRACK\_CATEGORY SURFACE\_PLATFORM.
- (3) Creation Operations: ATOMIC\_FILTERs are created through calls to either: MAKE\_DISTANCE\_ATOMIC\_FILTER, MAKE\_TRACK\_CATEGORY\_ATOMIC\_FILTER, or MAKE\_PLATFORM\_IDENTITY\_ATOMIC\_FILTER.

Following the creation of an ATOMIC\_FILTER, it is appended to its parent AND\_FILTER through a call to ADD\_ATOMIC\_FILTER\_TO\_AND\_FILTER. Once an AND\_FILTER has been fully defined, it is appended to the FILTER through a call to ADD\_AND\_FILTER\_TO\_FILTER.

(4) Update Operations: FILTERs are updated as a result of the addition of AND\_FILTERs. Once the FILTER is filled, the contents of that FILTER are unchangeable, unless a new FILTER is created, thus deleting the old ATOMIC\_FILTERs and AND\_FILTERs.

## c. TRACK\_DATABASE

- (1) Description: TRACK\_DATABASE represents the LCCDS database of TRACKs. The implementation of the TRACK\_DATABASE type is given in Appendix Q, p. 231.
- (2) Attributes: ACTIVE\_TRACK(TRACK\_DATABASE) returns a boolean value that tells whether or not a TRACK is active in the database. For example, following a call to FIND\_TRACK\_IN\_DBASE(TRACK\_ID), the function ACTIVE\_TRACK(TRACK\_DATABASE) will return FALSE if the TRACK was not found. Active relates to a TRACK receiving periodic updates by the function ADD\_TRACK\_OBSERVATION.
- (3) Creation Operations: LCCDS contains one, and only one, object of type TRACK\_DATBASE that is created at system initialization.
- (4) Update Operations: TRACK\_DATABASE is updated when a TRACK is added to the database (ADD\_TRACK\_TO\_DBASE), when a TRACK is deleted from the database (DROP\_TRACK\_FROM\_DBASE), and when the entire database is deleted (PURGE\_ENTIRE\_DBASE).

## d. GLOBAL\_POSITION

- (1) Description: A GLOBAL\_POSITION represents the earth coordinates of a TRACK geographic location. The implementation of the GLOBAL\_POSITION type is given in Appendix N, p. 219. Internally we use a right-handed coordinate system centered on the center of the earth. The z axis points to the north pole, and the x axis points to the intersection of the equator and the Greenwich Meridian.
- (2) Attributes: The geographic location is defined as a latitude and longitude of the TRACK. Latitude is defined as an angle from the equator (PHI) and Longitude is an angle from the Greenwich Meridian (THETA). GET\_LATITUDE(GLOBAL\_POSITION) and GET\_LONGITUDE(GLOBAL\_POSITION) are attributes of GLOBAL\_POSITION that refer to latitude and longitude, respectively. A GLOBAL\_POSITION, as used in LCCDS, cannot be changed once created. Its value can, however, be retrieved for use in the computations of other values.
- (3) Creation Operations: The operations that create a GLOBAL\_POSITION are MAKE\_GLOBAL\_POSITION and FIND\_GLOBAL\_POSITION. MAKE\_GLOBAL\_POSITION accepts the numerical equivalents of degrees, minutes, and seconds, as well as the latitude and longitude hemisphere identifiers and returns a GLOBAL\_POSITION in terms of PHI and THETA. FIND\_GLOBAL\_POSITION returns a calculated GLOBAL\_POSITION based on a RELATIVE\_POSITION from another GLOBAL\_POSITION.
  - (4) Update Operations: None

## e. LINK\_TYPE

(1) Description: A LINK\_TYPE represents a tactically significant contact as reported over Link-11 (in M\_SERIES\_MSG format). The implementation of the LINK\_TYPE type is given in Appendix R, p. 238.

- (2) Attributes: These elements refer to the LINK\_TYPE's Link number, its relative position from DLRP (Data Link Reference Point), the time of the observation, the TRACK category, the TRACK identity, and its altitude (if air).
- (3) Creation Operations: A LINK\_TYPE is created by CONVERT\_M\_SERIES\_MSG\_TO\_LINK\_TYPE.
- (4) Update Operations: Since the information used to fill an object of LINK\_TYPE comes into LCCDS from an external source, LINK\_TYPE is not mutable.

## f. ABSOLUTE\_TIME

- (1) Description: ABSOLUTE\_TIME represents the year, month, and time of day to the second. The implementation of the ABSOLUTE\_TIME type is given in Appendix K, p. 206.
- (2) Attributes: YEAR(ABSOLUTE\_TIME) refers to the calendar year. MONTH(ABSOLUTE\_TIME) refers to the numerical value of the calendar month. DAY(ABSOLUTE\_TIME) refers to the calendar day. TIME\_OF\_DAY(ABSOLUTE\_TIME) refers to the number of seconds elapsed in the current day.
- (3) Creation Operations: An object of type ABSOLUTE\_TIME is created by initiating a function call to MAKE\_ABSOLUTE\_TIME. Objects of type ABSOLUTE\_TIME can also be created though function calls to "+", "-", or NOW.
  - (4) Update Operations: None.

## g. VECTOR\_2

(1) Description: Describes a two-dimensional vector defined in terms of floating point numbers, representing a TRACK's course and speed or its bearing and range. The implementation of the VECTOR\_2 type is given in Appendix G, p. 186.

- (2) Attributes: LENGTH(VECTOR\_2) refers to speed or range. DIRECTION(VECTOR\_2) refers to course or bearing. X\_COORDINATE(VECTOR\_2) refers to the X coordinate of the vector. Y\_COORDINATE(VECTOR\_2) refers to the Y coordinate of the vector.
- (3) Creation Operations: Operations that create instances of VECTOR\_2 are MAKE\_POLAR\_VECTOR\_2 and MAKE\_CARTESIAN\_VECTOR\_2. Operations that create instances of VECTOR\_2 by mathematical manipulations are "+" (the addition of two vectors), "-" (subtraction of one vector from another), DOT\_PRODUCT, "\*" (multiplication of a vector by a scalar factor).
  - (4) Update Operations: None.

## h. VECTOR\_3

- (1) Description: Describes a three-dimensional vector defined in terms of floating point numbers. The implementation of the VECTOR\_3 type is given in Appendix H, p. 194.
- (2) Attributes: Attributes of VECTOR\_3 include LENGTH(VECTOR\_3), X\_COORDINATE(VECTOR\_3), Y\_COORDINATE(VECTOR\_3), Z\_COORDINATE(VECTOR\_3), THETA(VECTOR\_3), and PHI(VECTOR\_3).
- (3) Creation Operations: Operations that create instances of VECTOR\_3 are MAKE\_POLAR\_VECTOR\_3, MAKE\_CARTESIAN\_VECTOR\_3. Operations that create instances of VECTOR\_3 by mathematical manipulations are "+" (the addition of two vectors), "-" (subtraction of one vector from another), DOT\_PRODUCT, CROSS\_PRODUCT, SCALE (multiplication of a vector by a scalar factor)
  - (4) Update Operations: None.

## 3. TASK INTEGRATION\_SYSTEM:

The purpose of the task is to manage the track database. The task receives data or information from various sources and translate/parse this raw data input into integration system formatted data that the user\_interface can graphically display. The task defines entry calls to the various tasks, functions, and procedures that create, delete, or otherwise modify TRACKs and FILTERs. The INTEGRATION\_SYSTEM task also provides a timing function for the task PROCESS\_LINK\_TRACKS that retrieves and modifies Link 11 input. The INTEGRATION\_SYSTEM task is necessary to provide a Real\_Time environment for the integration system. The task allows parallel processing to take place preventing one function or procedure from dominating the CPU.

A list of the entry calls defined by the task follows:

- Entry CREATE\_TRACK: Creates a TRACK and enters it into the TRACK DATABASE.
- Entry DELETE\_TRACK\_AND\_SEND\_TO\_HISTORY: Deletes a TRACK from the active TRACK\_DATABASE and sends it to history.
- Entry ADD\_TRACK\_OBSERVATION: Adds an observation to an existing TRACK, using relative position from OWNSHIP as the observation location.
- Entry SET\_TRACK\_IDENTITY: Sets/changes a TRACK's IDENTITY.
- Entry SET\_AMPL\_INFO: Sets/changes a TRACK's AMPLIFYING\_INFO.
- Entry SET\_PLATFORM\_CLASS: Sets/changes a TRACK's CLASS.
- Entry SET\_VESSEL\_NAME: Sets/changes a TRACK's NAME.
- Entry SET\_ALTITUDE: Sets/changes a TRACK's ALTITUDE.
- Entry GET\_CONTROL: Gets a TRACK's CONTROL.
- Entry SET\_CONTROL: Sets/changes a TRACK's CONTROL.

- Entry CHANGE\_TRACK\_CATEGORY: Sets/changes a TRACK's IDENTITY.
- Entry BUILD\_WAYPOINT\_SPECIAL\_POINT: Builds a WAYPOINT TRACK.
- Entry BUILD\_NAV\_HAZARD\_SPECIAL\_POINT: Builds a NAV\_HAZARD TRACK.
- Entry BUILD\_GENERAL\_SPECIAL\_POINT: Builds a GENERAL SPECIAL\_POINT TRACK.
- Entry BUILD\_PATH: Builds a PATH TRACK.
- Entry BUILD\_ABSOLUTE\_CIRCLE\_REGION: Builds an ABSOLUTE CIRCLE REGION TRACK.
- Entry BUILD\_RELATIVE\_CIRCLE\_REGION: Builds a RELATIVE CIRCLE REGION TRACK, with the radius of the circle in yards and position of circle center relative to reference track position.
- Entry BUILD\_ABSOLUTE\_POLYGON\_REGION: Builds an ABSOLUTE POLYGON REGION TRACK.
- Entry BUILD\_RELATIVE\_POLYGON\_REGION: Builds a RELATIVE POLYGON REGION TRACK.
- Entry CHANGE\_COURSE: Adds TRACK observation reflecting TRACK's course change.
- Entry CHANGE\_SPEED: Adds TRACK observation reflecting TRACK's speed change.
- Entry CHANGE\_GLOBAL\_POSITION: Adds TRACK observation reflecting TRACK's position change.
- Entry MAKE\_DISTANCE\_ATOMIC\_FILTER: Makes an ATOMIC\_FILTER based on distance type attributes and adds it to the current AND\_FILTER.

- Entry MAKE\_TRACK\_CATEGORY\_ATOMIC\_FILTER: Makes an ATOMIC\_FILTER based on TRACK category type attributes and adds it to the current AND\_FILTER.
- Entry MAKE\_PLATFORM\_IDENTITY\_ATOMIC\_FILTER: Makes an ATOMIC\_FILTER based on TRACK identity type attributes and adds it to the current AND\_FILTER.
- Entry ADD\_AND\_FILTER\_TO\_FILTER: Adds a filled AND\_FILTER to the current FILTER.
- Entry CLEAR\_FILTER: Clears the FILTER to make way for a new one.
- Entry WRITE\_FILTER: Writes a filled FILTER to an archive file for historical purposes.
- Entry FILL\_TACPLOT: Fills the tactical display structure with TRACKs that pass FILTER requirements.
- Entry SET\_SENSOR\_STATUS: Flags the system as to whether or not to accept input from a particular OWNSHIP sensor.
- Entry GET\_SENSOR\_STATUS: Gets the current input status from a particular OWNSHIP sensor.
- Entry SHUTDOWN: Purges the TRACK\_DATABASE, sending each TRACK to an archive file. Also writes archived TRACK info and FILTER info to text files. Aborts the GPS update task.

# 4. TASK GPS\_UPDATE\_TASK:

The purpose of the task is to interface to a Global Positioning System via the RS-232 communication port. The task reads in a string of data that represents the geographic position of the ship at the time the data was received, and store the Global Positioning System data in a buffer. The task defines no entry calls but, invokes the procedure Add\_Track\_Observation which accepts the geographic position reported by the Global Positioning System as a new observation. Retrieves GPS data every four seconds and adds

a new OWNSHIP TRACK observation The task is a separate task because if it were a procedure or function the system would not be released to perform any other operations.

No entry calls are defined from GPS\_UPDATE\_TASK.

## 5. TASK LINK\_CYCLE:

The purpose of the task is to limit the rate of the Link input. The task has an endless loop that clocks the time period of four seconds between loops. Each loop the task calls the procedure that reads in the Link buffer and processes the M\_Series\_Messages into Link\_Tracks and stores them in the database. The single entry call defined by the task is listed below:

## a. entry START\_LINK\_UPDATE;

Link 11 information request performed every 4 seconds

## 6. TASK PROCESS\_LINK\_TRACK:

The purpose of the task is to process the Link 11 M\_Series\_Messages into Link\_Track format. After processing the message buffer the task checks the database to see if the track is active. If the track is found the process updates the track with a Global\_Observation. If the track is not found the Track is created and stored in the database.

No entry calls are defined by PROCESS\_LINK\_TRACK.

### B. DATABASE MODEL

Design and development of the database for the LCCDS is driven by four goals:

- 1. Performance: Does the structure of the database support fast access to the data? Can the system(USER) retrieve and update relevant data within specified response time?
- 2. Integrity: To what extent does the database guarantee that correct data is stored and is not accidentally corrupted?

- 3. Understandability: How coherent is the structure of the database to the user? After a long period of time, will it still be understandable to the designers and others?
- 4. Extensibility: How easily can the database be extended to new applications without disrupting the present or on-going system?

Keeping these goals in mind, we define the requirements/restrictions placed on the database.

- 1. The object-oriented database is to be implemented in Ada.
- 2. The database is to be divided into two parts.
  - a. An active database in main memory.
  - b. A historical database in secondary memory.
- 3. Develop a Real\_Time system.
- a. Time meets the four second Real\_Time requirement with respect to start time and completion time of a specific transaction(Task,Procedure,Function).
  - b. The current design assumes a single processor system.

Design of the tactical database starts with identification of objects and classes. The initial phase consist of analysis of the objects proposed in reference 35. The requirements are not difficult since most objects are identified by references 34 and 35, but, careful analysis of the objects and their class along with the methods are necessary before starting to build the database. First we establish that the database has only one class the abstract data type Track. Each object of this class has object variables specific to that object

Our objective is to use the object-oriented approach in the databade design. An object-oriented distributed program system is modeled as a collection of task or procedures containing transactions and data objects which synchronize their operations through messages. To elaborate, when discussing Ada tasking and communication complexity for

distributed programs, the key property to be considered is that both consist of a number of processes or task that execute asynchronously in parallel, but communicate and synchronize by message passing.

While considering requirements complexity, looking at distributed programs which realize concurrency by parallel execution of separate tasks and which constrain the concurrency by introducing task communication. We came to the conclusion that program complexity consist of two components:

- 1. A local complexity which reflects the complexity of the individual task.
- 2. Communication complexity which reflects the complexity of the interactions among tasks.

A transactions accesses objects indirectly by communication of its desires to the transaction manager, which then sends a message to the appropriate object manager. Although transaction and object managers may maintain more than one transaction or object, we assume, with confidence, that the transaction manager controls on transaction at a time, and each object manager controls one object. The internal structure of a transaction manager consist of two components, the transaction body, and the probe queue. When a transaction request an object, the transaction manager sends a message to the object manager with the request. The object manager either grants or denies the request depending upon whether or not the transaction will create a conflict(deadlock) with some transactions already holding the object. The internal structure of the object manager contains:

- 1. A LOCK\_LIST which holds information about those transactions that currently hold a lock on the object.
- 2. A REQUEST\_LIST which lists those transactions currently having an outstanding request on the object.
- 3. A COMPATIBILITY\_TABLE which holds information on the compatibility of operations on the object.

The compatibility table is used by the concurrency control algorithm. The algorithm is based on the read/write lock model and may allow more than one holder since the object can be shared among transactions requesting read only locks. Concurrency control is insured because we have insisted that all transactions run to completion or they don't start running. We accomplish this by building a schedule of transactions to run. Because task run in parallel, it is important to insure the completion of specific parts of the program or task before allowing the remaining procedures or task to run. By insuring this scheduling holds, the results are the same as if the program or task was running individually.

The database stores the track data which contains all the amplifying information needed to identify the contact. The Identification number is assigned by the integration system at the time the track is stored in the database. Because the data structure is a linked list the track ID numbers can range from one to infinity, with zero reserved for ownship. If the track in local the system will assign the next number to the track, but if the track is a link track the system must check if the track is active or not. If the track is active then the system simply updates the track. However, if the track does not exist the system assigns a system track number and add the numbers to a cross reference tables. The cross reference table is used to keep track of what link track goes with what system track. After the table entry is made the system then stores the track in the database. Each track stored in the database has added to it a link listed which contain each of the global observations. Each global observation contains the global position and time of observation for the specific track. The most recent observation is added to the head of the list enabling the system to retrieve the current position with better time efficiency.

As discussed in the previous chapter, GPS data is received and buffered once every second. The integration system once every four seconds lock the buffer for writing in order to prevent inadvertent changing of data while reading. The integration systems package "navigation handler" reads the GPS data, translate the data to system format as illustrated

in Figure 18 and stores the data as ownship location in the database track zero. Likewise, the LMS 11r the intermediate link 11 processor sends a series of M\_Series\_Messages through the decoder. The integration system receives the data which is buffered for reading by the integration systems "link processor". The integration system once every four seconds lock the link buffer to prevent changing of data while reading is taking place. Then read the data and store it in the database by the appropriate track number assigned.

Tracks are stored to secondary memory(History) only when the active track is deleted from the active database. If the system crashes, the active tracks in the active database are lost. However, these tracks can and must be recreated when the system is brought back on line. The user may select any number of tracks from the historical database to review by calling READ\_TRACK\_FROM\_ARCHIVES and entering the track number/numbers desired. The integration system retrieves from secondary memory each track desired and stores a copy of it in an array then passes the array to the user for graphic display.

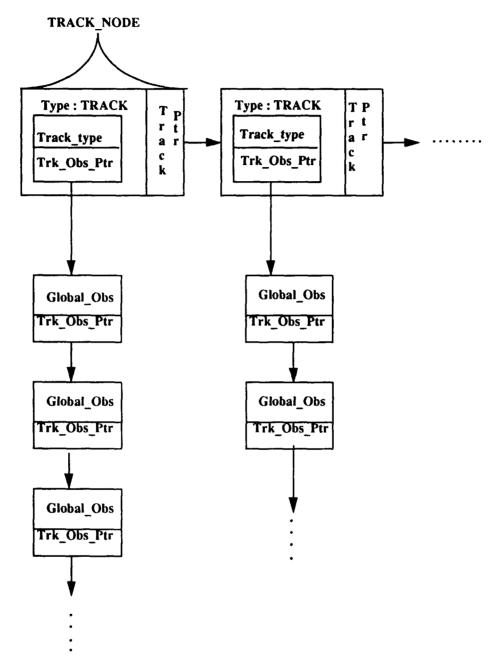


Figure 18: DATABASE STRUCTURE

#### C. LINK 11 MODEL

It is important to note that most material related to and involving the link 11 system is classified confidential or higher. This document however, is unclassified, therefore the discussion of the link 11 system and the interface to it is limited to the unclassified portion.

The link 11 signal is transmitted via UHF/HF radio communications to the fleet. We purpose to use an existing system LMS 11r to be an intermediate step between the LCCDS integration system and the link 11 receiver on the platform of choice. The LMS 11r is a unit already tested and in use. The General Specifications and Operational Specifications are, according to our source, in the Department of Defense supply system [Ref. 40].

The Link 11 interface with the integration system consists of a link 11 handler designed inside the integration system and communicating directly with the LMS 11r system. The link handler is an Ada function which breaks a string of characters into the individual parts of the track data type and stores the array of parts in a buffer waiting for the integration system to lock the buffer and read out the data. The integration system then unlocks the buffer and the link handler repeats the process.

Link 11 data consist of two parts: a Data\_Link\_Reference\_Point(DLRP) and a string of tracks reported by fleet assets with reference to the DLRP. The DLRP must be entered manually in the system by the user. The link handler translates the DLRP into a Global\_Position and stores it as a regular track. The integration system assigns a special non changing track number to the DLRP that is determined at the time DLRP is entered. This track number will be determined by the system each time DLRP is entered. Utilizing this special track number the system calculates the relative position of the DLRP relative to ownship and the Global\_Position of each track in the Link 11 database. The User\_Interface selects the reference track and invokes the integration system function Relative\_Position to compute the relative position of each Link 11 track to the reference

track. If the user does not select a reference track the system uses ownship as the default reference track and computes the Relative\_Position of each Link 11 track relative to ownship.

The track is then stored in the database with a system assigned track number. In order to keep track of which link track matches with which system track, a table is constructed in the integration system. The table contains three elements, the link track number, the corresponding system track number and a pointer to link them together. When an updated set of tracks is received the system searches the table to see if the link track is an active system track. If the link track is found to be an active system track the system updates the Global\_Observation of the corresponding system track. If the link track is not found, the system calls create track, assign a track number to the corresponding link track, and stores the track in the database as illustrated in Figure 19.

The integration system scans the link track table for time out every four seconds covering every track in the database designated as link control. The user may at any time take local control of a link track simply by changing the track control to local. A time out event causes the system to drop the link track from the active database. This action is necessary in situations where no updates on the specific track have been received in a pre-assigned time period. By doing so the system removes all inactive link tracks from the active database, freeing up space for new ones. The procedure has no control over local designated tracks. The user must clean house for these user generated tracks or tracks the user has changed from link to local control.

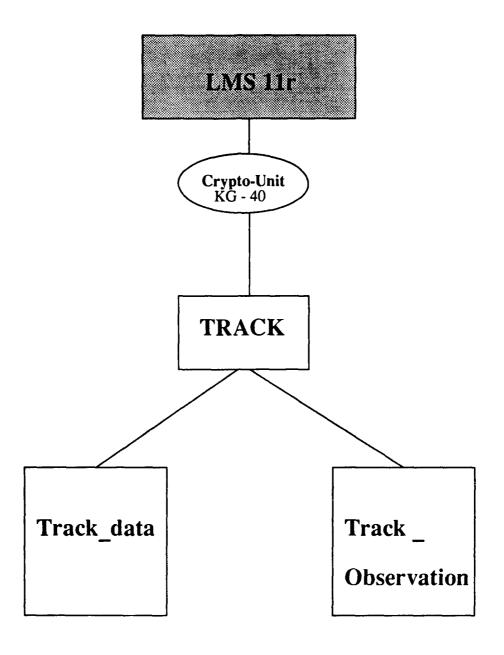


Figure 19: DATA STRUCTURE DIAGRAM(LINK 11)

## V. EVALUATION OF SYSTEM PERFORMANCE

### A. FUNCTIONAL

Initial testing of the integration system was conducted by first designing a test program to evaluate each individual requirement [enclosure 1, Ref. 1]. The process of evaluating the integration system included testing for correctness and timing of each procedure, function, and task individually as illustrated in Figures 20 through 26. The test for each individual component was conducted successfully.

The system test program was expanded to test the integration system collectively. To accomplish this testing procedure the integration system was linked to the navigation system for Global Position System data input. Manual tracks were entered as Link tracks to simulate Link 11 input. Each feature of the requirements of enclosure one of Reference 1 was tested for correctness. Timing for a single iteration of the requirements feature was recorded and is illustrated in the timing diagrams Figures 20 through 26.

A list of the test and evaluation of the system follows:

1. Track testing phase: Testing of the Track package required the evaluation of each procedural operation and capability specified by the requirement specification. The list of these steps and their results are:

Allow the user to create a manually input track and store the track in the database: The user may enter a track by either entering the bearing and range to the track from a reference track or by entering a Global\_Position of the new track. Timing is well within the Real\_Time range and correctness is verified.

The integration system adds a new track to the database when the user manually inputs a track or when a track is received from the link processor is not found in the link to system track number reference table located in the integration system. The integration

system will assign a system track number to the track and store the track in the database. Timing is well within the Real\_Time range and correctness is verified.

The user has the option to delete any track from the database simply by identifying the track by the Track\_Number, locate and retrieve the track from the database, and call the function DELETE\_TRACK. Deletion of a track removes the track from the active database and stores the track and all of the global\_observations to history in secondary memory. Timing is well within the Real\_Time range and correctness is verified.

The system receives from GPS ownship fix data. Translates the data string into integration system formatted track data and stores the track in the database as track number zero. The system receives from GPS new fix data every second and stores the data in a buffer. The integration system reads the buffer every four seconds and stores the data in the database as the current Global\_Observation for track zero. Timing is well within the Real\_Time range and correctness is verified.

The user can change the attributes of a track in the database but, cannot change a Global\_Observation. The user has the option to record or change the track category and identity or enter any amplifying information about the track. The user can make a manual course and speed change. The integration system will compute and record a new course and speed based on each new Global\_Observation received or the manual course and speed entry from the user. When the track location is received as a Global\_Position the system will compute the bearing and range to the track from ownship and record the data. Timing is well within the Real\_Time range and correctness is verified.

2. Velocity package testing phase: The system determines the velocity of a specified track. Velocity is divided into course and speed of a track Timing is well within the Real\_Time range and correctness is verified.

- 3. Global position package testing phase: The system allows the user to manually input a Global\_Position or will automatically convert a Relative\_Position to a Global\_Position and assign the global position to a specific track. The system assigns a relative position to a specific track from any specified reference track or defaults to ownship as the reference track. Given a Global\_Position the system computes the Relative\_Position. Timing is well within the Real\_Time range and correctness is verified.
- 4. CPA testing phase: The system determines the closest point of approach between any two specified tracks. The CPA results are true bearing, range, and time of CPA. Timing is well within the Real\_Time range and correctness is verified.
- 5. Filter testing phase: The system can designate a specified filter called an atomic filter and with the mathematical expressions and/or combine a series of these atomic filters into a specific system filter which filters tracks for display only those that meet the specific restrictions placed on the system by the user. Timing is well within the Real\_Time range and correctness is verified.

Testing of the integration system takes on two faces. The first is that of a bug or problem finding and removal process. The second is a timing test to see if the individual Functions and/or Procedures meet the Real\_Time timing constraints. The timing test is divided into two parts, one to test the complete process run time and the second is testing each iteration of the process. Real Time is defined by NAVSEA as a four second period of time. Testing of the integration system has revealed to date, a safe and comfortable time margin within this Real\_Time period in which the system may operate.

While observing the timing graphs in section B this chapter, keep in mind that the times used were generated by the UNIX operating system and rounded off to fit the timing graphs. In each timing case the function tested was the primary function and may include any number

of called functions and procedures. The time considered for each timing graph was the composite time required to execute the primary function. Each iteration of a procedure/function was also timed.

### B. TIMING CHARTS FOR REAL TIME CONSTRAINTS TESTING

Timing and evaluation of the functions and tasks of the integration system was conducted to evaluate the Real\_Time requirements for the LCCDS. Each entry in the timing diagrams Figures 20 through 26 correspond to a specific requirement by the sponsor [enclosure 1, Ref. 1]. Each individual entry in the timing diagrams has two timing categories and was conducted as previously discussed. The *Isolated Module* category for each entry represents the time required to execute the requirements feature of the procedure, function, or task as a individual unit. The *System Response* category for each entry represents the time required to execute the same feature by the integration system. Each entry in the timing diagrams was evaluated against the Real\_Time requirement of the four second time period to refresh/fill the TACPLOT for graphic display of the tactical situation.

The integration system is designed such that no single operation will dominate CPU time. The tasks and functions that are executed on a timed cycle require a small amount of the four second time period allowing time for the operations requested by the user. Utilizing these procedures we have developed a set of timing charts that very closely represent the actual CPU time required for the integration system.

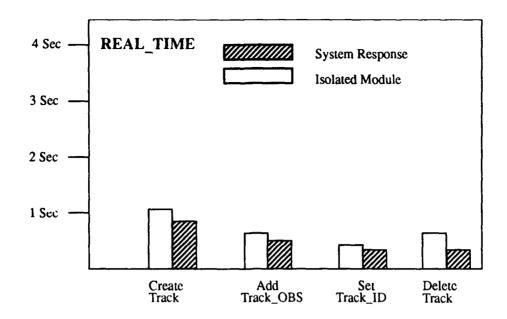


Figure 20: TIMING DIAGRAM 1

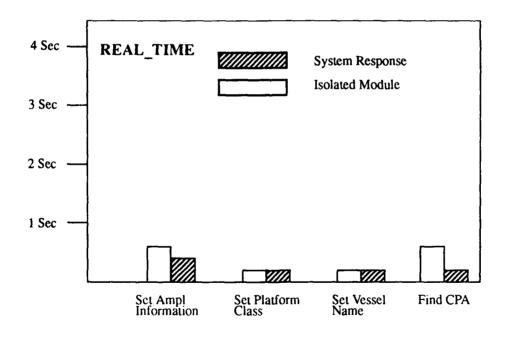


Figure 21: TIMING DIAGRAM 2

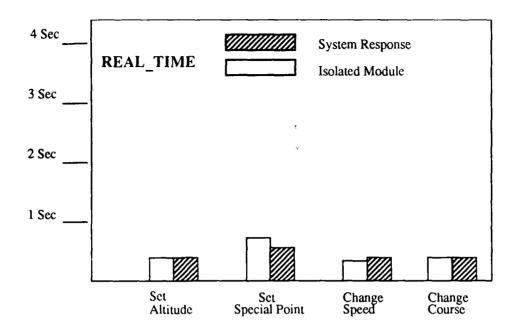


Figure 22: TIMING DIAGRAM 3

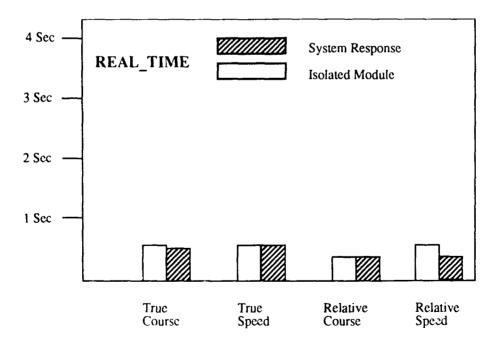


Figure 23: TIMING DIAGRAM 4

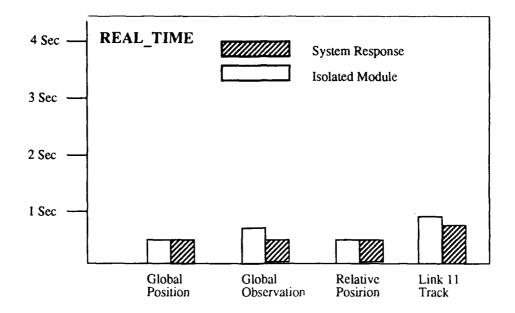


Figure 24: TIMING DIAGRAM 5

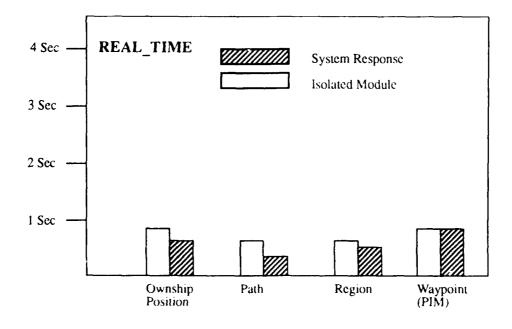


Figure 25: TIMING DIAGRAM 6

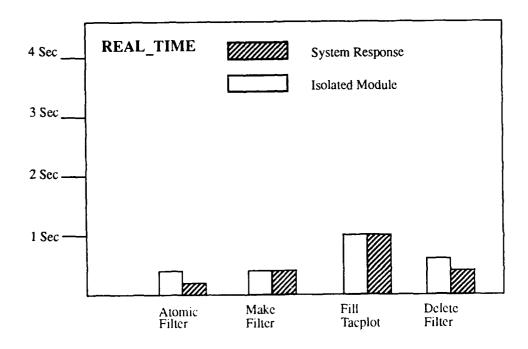


Figure 26: TIMING DIAGRAM 7

## VI. CONCLUSIONS

#### A. RECOMMENDATIONS

The use of reusable software is an approach that saves time and money. It is a software development technique that works. One of the most serious problems faced today in armed forces acquisition of new systems is the length of time between initial requirements analysis and delivery of a usable system. This generally means that the system delivered is already out of date when it arrives. The LCCDS design, however, takes advantage of rapidly improving commercial computer technology, hardware and software. Specifically, we take advantage of reliable and inexpensive commercial workstation systems. Even more significant is the fact that we can obtain these workstations now vice having to wait for years while someone makes up their mind what the specification for the system should be.

During the period of our research we discovered an interesting fact: there are several different projects being funded to do the same exact thing, to develop a Combat Direction System that can be placed on non NTDS and NTDS ships to assist in the navigation and daily formation steaming functions. A combined effort might produce a workable prototype capable of accomplishing what NAVSEA has mandated. The continuation of the LCCDS will see such a prototype in the fleet and soon after working models.

Considerable effort was expended searching for an existing software unit capable of translating Link 11 data into a format the system could utilize. Our recommendation is to include the LMS-11r a Logicon product to accomplish this task. The LMS-11r is a unit that is presently in the system and can be obtained with short lead time.

A study designed to research the possibility of incorporating parts of the ATP-1C into the system capabilities would be money well spent. All the necessary elements with the exceptions of the algorithms are built into the system. Adding the required procedures and functions containing the algorithms for computing solutions to ATP-1C requirements and

incorporating them into the system calls would accomplish this requirement. To complete the addition of the ATP-1C solution solver would require the classifying of the system.

#### **B.** EVOLUTION OF THE SYSTEM

In order to accommodate the evolutionary changes in the tactical environment resulting from changes in tactics, weapons and sensors, the LCCDS has to be capable of quick and inexpensive software upgrades. This operational flexibility is a paramount requirement. The system must be programmable, to adapt to system failures and the ever changing data structure used in the integration system to support the constant evolution of the system support software. The need for flexibility clearly dictates the use of a general purpose, stored program, commercial computer where parts and upgrades can be accomplished with minimum cost in time and money.

It is necessary to convert the various forms of tactical data from analog to digital representations so that all data in the system can be represented in the same formats. Analog to digital conversion becomes an important hardware priority. The procurement and installation of this hardware must be addressed in the continuation of this body of research. A follow on study would be most appropriate but not necessary as we have completed the initial leg work and have outlined the necessary additions in hardware and software. Speed of conversion and accuracy are the prime objectives in this task. The conversion to digital data representation must be done as close to the source as possible to maintain accuracy throughout the system and resultant data calculations and applications.

Different types of these conversion units must be defined and specific decisions made as to which unit will be used in each of the more specific applications. The on-line analog to digital conversion must be used for vital data sources such as these selected sensors: gyro, pit log and the platforms primary radars.

Automatic radar detection and tracking of targets is another area of research for future projects. This thesis has not explored this vast and complex area. At present some ships of the fleet have a basic manual, rate aided tracking capability for all installed radars. However, on some ships when radar is overwhelmed with tracks, using the conventional grease pencil method of tracking and plotting, the analysis and decision making functions border on hopelessness. There is an obvious need for the auto tracking capability to be installed on all ships of the fleet.

Each ship equipped with LCCDS would have a real time working advantage over ships not equipped with NTDS or the LCCDS. No longer would the commander have to wait for critical data needed to make fast, accurate, life-threatening decisions need for safe ship-handling. The commander would have more confidence in his decisions because of his confidence in the accuracy of the LCCDS system.

# **APPENDIX A**

# **GUIDE TO DATA TYPES**

In order to better understand the integration system this guide to the data types and the location where they can be found is provided:

VECTOR_2_PKG	function	<b>"</b> *"
ABSOLUTE_TIME_PKG	function	<b>"+"</b>
VECTOR_2_PKG	function	<b>"+"</b>
VECTOR_3_PKG	function	"+"
ABSOLUTE_TIME_PKG	function	<b>"_"</b>
VECTOR_2_PKG	function	<b>"_"</b>
VECTOR_3_PKG	function	"_"
ABSOLUTE_TIME_PKG	function	"<"
ABSOLUTE_TIME_PKG	type	ABSOLUTE_TIME
TRACK_PKG	type	ABSOLUTE_VERTEX_ARRAY
TRACK_PKG	function	ABS_CIRCLE_CENTER
TRACK_PKG	function	ABS_REGION_VERTICES
TRACK_PKG	type	ABS_VERTEX_TYPE
TRACK_DATABASE_PKG	function	ACTIVE_TRACK
FILTER_PKG	procedure	ADD_AND_FILTER_TO_FILTER
FILTER_PKG	procedure	ADD_ATOMIC_FILTER_TO_AND_FILTER
TRACK_PKG	procedure	ADD_TRACK_OBSERVATION
TRACK_DATABASE_PKG	procedure	ADD_TRACK_TO_DBASE
TRACK_PKG	subtype	AIR_TRACK_TYPE
TRACK_PKG	function	ALTITUDE
TRACK_PKG	function	AMPL_INFO
TRACK_PKG	package	AMP_STR
FILTER_PKG	type	AND_FILTER
FILTER_PKG	type	AND_FILTER_NODE
FILTER_PKG	type	AND_FILTER_PTR
ANGLE_PKG	subtype	ANGLE
ANGLE_PKG	function	ARCSIN
ANGLE_PKG	function	ARCTAN
FILTER_PKG	type	ATOMIC_FILTER
FILTER_PKG	type	ATOMIC_FILTER_NODE
FILTER_PKG	type	ATOMIC_FILTER_OUT
FILTER_PKG	type	ATOMIC_FILTER_PTR

ANGLE_PKG	subtype	AZIMUTH
RELATIVE_POSITION_PKG	function	BEARING_TO
TRACK_PKG	procedure	BUILD_ABSOLUTE_CIRCLE_REGION
TRACK_PKG	procedure	BUILD_ABSOLUTE_POLYGON_REGION
TRACK_PKG	procedure	BUILD_GENERAL_SPECIAL_POINT
TRACK_PKG	procedure	BUILD_NAV_HAZARD_SPECIAL_POIN
TRACK_PKG	procedure	BUILD_PATH
TRACK_PKG	procedure	BUILD_RELATIVE_CIRCLE_REGION
TRACK_PKG	procedure	BUILD_RELATIVE_POLYGON_REGION
TRACK_PKG	procedure	BUILD_WAYPOINT_SPECIAL_POINT
TRACK_PKG	procedure	CHANGE_COURSE
TRACK_PKG	procedure	CHANGE_GLOBAL_POSITION
TRACK_PKG	procedure	CHANGE_SPEED
TRACK_PKG	procedure	CHANGE_TRACK_CATEGORY
TRACK_PKG	function	CIRCLE_RADIUS
FILTER_PKG	procedure	CLEAR_FILTER
TRACK_PKG	function	CONTROL
TRACK_PKG	type	CONTROL_TYPE
ANGLE_PKG	function	COS
VELOCITY_PKG	function	COURSE
CPA_PKG	type	CPA_TYPE
FILTER_PKG	procedure	CREATE_FILTER_FILE
TRACK_PKG	procedure	CREATE_TRACK
TRACK_PKG	procedure	CREATE_TRACK_FILES
VECTOR_3_PKG	function	CROSS_PRODUCT
TRACK_PKG	function	CURRENT_POSITION
ABSOLUTE_TIME_PKG	function	DAY
ANGLE_PKG	function	DEGREES_TO_RADIANS
TRACK_PKG	procedure	DELETE_TRACK_AND_SEND_TO HISTORY
VECTOR_2_PKG	function	DIRECTION
DISTANCE_PKG	subtype	DISTANCE
FILTER_PKG	type	DISTANCE_ATTRIBUTE_ID
DISTANCE_PKG	function	DISTANCE_IN_NAUTICAL_MILES
VECTOR_2_PKG	function	DOT_PRODUCT
VECTOR_3_PKG	function	DOT_PRODUCT
TRACK_DATABASE_PKG	procedure	DROP_TRACK_FROM_DBASE
GLOBAL_POSITION_PKG	type	EAST_WEST
FILTER_PKG	subtype	EQUALITY_RELATION_ID
FILTER_PKG	function	EVERYTHING
NAVIGATION_PKG	package	E_W_INOUT
FILTER_PKG	type	FILTER

FILTER_PKG	type	FILTER_CATEGORY
FILTER_PKG	package	FILTER_INOUT
CPA_PKG	function	FIND_CPA
GLOBAL_POSITION_PKG	function	FIND_GLOBAL_POSITION
GLOBAL_POSITION_PKG	function	FIND_RELATIVE_POSITION
TRACK_DATABASE_PKG	procedure	FIND_TRACK_IN_DBASE
FILTER_PKG	procedure	FREE_AND_FILTER
FILTER_PKG	procedure	FREE_ATOMIC_FILTER
TRACK_PKG	procedure	FREE_OBS
TRACK_DATABASE_PKG	procedure	FREE_TRK
NAVIGATION_PKG	function	GET_GPS_UPDATE
GLOBAL_POSITION_PKG	procedure	GET_LATITUDE
GLOBAL_POSITION_PKG	procedure	GET_LONGITUDE
SYSTEM_STATUS_PKG	function	GET_STATUS
GLOBAL_POSITION_PKG	type	GLOBAL_POSITION
TRACK_PKG	type	GLOB_OBS_ARRAY
INTEGRATION_SYSTEM_PKG	task	GPS_UPDATE_TASK
GLOBAL_POSITION_PKG	function	GREAT_CIRCLE_BEARING
GLOBAL_POSITION_PKG	function	GREAT_CIRCLE_DISTANCE
RELATIVE_TIME_PKG	function	HOURS
TRACK_PKG	type	IDENTITY_TYPE
INTEGRATION_SYSTEM_PKG	task	INTEGRATION_SYSTEM
VECTOR_2_ G	function	LENGTH
VECTOR_3_PKG	function	LENGTH
INTEGRATION_SYSTEM_PKG	task	LINK_CYCLE
LINK_PKG	type	LINK_PTR
LINK_PKG	type	LINK_TABLE
LINK_PKG	type	<del>_</del>
ABSOLUTE_TIME_PKG	function	MAKL_ABSOLUTE_TIME
VECTOR_2_PKG	function	MAKE_CARTESIAN_VECTOR_2
VECTOR_3_PKG	function	MAKE_CARTESIAN_VECTOR_3
FILTER_PKG	procedure	MAKE_DISTANCE_ATOMIC_FILTER
TRACK_PKG	function	MAKE_GLOBAL_OBSERVATION
GLOBAL_POSITION_PKG	function	MAKE_GLOBAL_POSITION
DISTANCE_PKG	function	MAKE_NAUTICAL_MILES_DISTANCE
FILTER_PKG	procedure	MAKE_PLATFORM_IDENTITY_ATOMIC_FILTER
VECTOR_2_PKG	function	MAKE_POLAR_VECTOR_2
VECTOR_3_PKG	function	MAKE_POLAR_VECTOR_3
RELATIVE_TIME_PKG	function	MAKE_RELATIVE_TIME
SPEED_PKG	function	MAKE_SPEED
FILTER_PKG	procedure	MAKE_TRACK_CATEGORY_ATOMIC_FILTER

VELOCITY_PKG	function	MAKE_VELOCITY
TRACK_PKG	subtype	MAN_IN_WATER_TRACK_TYPE
RELATIVE_TIME_PKG	function	
ABSOLUTE_TIME_PKG	function	MONTH
TRACK_PKG	function	MOST_RECENT_OBSERVATION
M_SERIES_MSG_PKG	type	M_SERIES_MSG
M_SERIES_MSG_PKG	type	M_SERIES_MSG_BUFFER
TRACK_PKG	subtype	NON_DISPLAYABLE_TRACK_TYPE
VECTOR_2_PKG	function	NORMALIZE
VECTOR_3_PKG	function	NORMALIZE
GLOBAL_POSITION_PKG	type	NORTH_SOUTH
ABSOLUTE_TIME_PKG	function	NOW
TRACK_PKG	subtype	NUM_HISTORY_PTS
TRACK_PKG	subtype	NUM_PATH_PTS
TRACK_PKG	subtype	NUM_VERTICES
NAVIGATION_PKG	package	N_S_INOUT
TRACK_PKG	function	PATH_POINTS
TRACK_PKG	subtype	PATH_TRACK_TYPE
TRACK_PKG	type	PATH_TYPE
VECTOR_3_PKG	function	PHI
TRACK_PKG	function	PLATFORM_CLASS
TRACK_PKG	procedure	PRINT_GLOBAL_POSITION
TRACK_PKG	procedure	PRINT_OBSERVATION_TIME
FILTER_PKG	procedure	PRINT_TIME_OUT is
PROCESS_LINK_TRACKS_PKG	procedure	PROCESS_MSG_BUFFER
TRACK_DATABASE_PKG	procedure	PURGE_ENTIRE_DBASE
ANGLE_PKG	function	RADIANS_TO_DEGREES
RELATIVE_POSITION_PKG	function	RANGE_OF
TRACK_PKG	function	REGION_CATEG
TRACK_PKG	type	REGION_CATEGORY
TRACK_PKG	type	REGION_PLACEMENT
TRACK_PKG	function	REGION_PLCMT
TRACK_PKG	subtype	REGION_TRACK_TYPE
TRACK_PKG	type	REGION_TYPE
FILTER_PKG	type	RELATION_ID
TRACK_PKG	function	RELATIVE_BEARING
TRACK_PKG	function	RELATIVE_CIRCLE_REFERENCE_TRK_NUM
TRACK_PKG	function	RELATIVE_CIRCLE_REFERENCE _TRK_POS
TRACK_PKG	function	RELATIVE_COURSE
RELATIVE_OBSERVATION_PKG	Stype	RELATIVE_OBSERVATION
RELATIVE_POSITION_PKG	subtype	RELATIVE_POSITION .

TRACK PKG	function	RELATIVE_REGION_REFERENCE_TRK_NUM
TRACK_PKG	function	RELATIVE_REGION_REFERENCE_TRK_POS
TRACK_PKG	function	RELATIVE_SPEED
RELATIVE_TIME_PKG	subtype	RELATIVE_TIME
TRACK_PKG	type	RELATIVE_VERTEX_ARRAY
TRACK_PKG	function	REL_CIRCLE_CENTER
TRACK_PKG	function	REL_REGION_VERTICE
TRACK_PKG	type	REL_VERTEX_TYPE
TRACK_DATABASE_PKG	procedure	RESTORE_ALTERED_TRACK_TO_DATABASE
VECTOR_2_PKG	function	ROTATE
VECTOR_3_PKG	function	SCALE
RELATIVE_TIME_PKG	function	SECONDS
SYSTEM_STATUS_PKG	type	SENSOR
TRACK_PKG	procedure	SET_ALTITUDE
TRACK_PKG	procedure	SET_AMPL_INFO
TRACK_PKG	procedure	SET_CONTROL
TRACK_PKG	procedure	SET_PLATFORM_CLASS
SYSTEM_STATUS_PKG	procedure	SET_STATUS
TRACK_PKG	procedure	SET_TRACK_IDENTITY
TRACK_PKG	procedure	SET_VESSEL_NAME
ANGLE_PKG	function	SIN
VELOCITY_PKG	function	SPD
TRACK_PKG	type	SPECIAL_POINT_CATEGORY
TRACK_PKG	subtype	SPECIAL_POINT_TRACK_TYPE
TRACK_PKG	type	SPECIAL_POINT_TYPE
TRACK_PKG	function	SPEC_POINT_CATEGORY
SPEED_PKG	subtype	SPEED
SPEED_PKG	function	SPEED_IN_KNOTS
VECTOR_2_PKG	function	SQRT
VECTOR_3_PKG	function	SQRT
SYSTEM_STATUS_PKG	type	STATUS
TRACK_PKG	subtype	SUBSURFACE_TRACK_TYPE
TRACK_PKG	subtype	SURFACE_TRACK_TYPE
SYSTEM_STATUS_PKG	type	SYSTEM_STATUS
TRACK_PKG	function	TARGET_RELATIVE_VELOCITY
INTEGRATION_SYSTEM_PKG	package	TC_INOUT
FILTER_PKG	function	TEST_ATOMIC_FILTER
FILTER_PKG	function	TEST_FILTER
VECTOR_3_PKG	function	THETA
ABSOLUTE_TIME_PKG	function	TIME_OF_DAY
TRACK_PKG	type	TRACK

TRACK_PKG	type	TRACK_CATEGORY
TRACK_DATABASE_PKG	type	TRACK_DATABASE
TRACK_PKG	package	TRACK_DATA_OUT
TRACK_PKG	procedure	TRACK_HISTORY
TRACK_PKG	function	TRACK_IDENTITY
TRACK_PKG	function	TRACK_ID_NUMBER
TRACK_DATABASE_PKG	type	TRACK_NODE
TRACK_PKG	type	TRACK_OBS
TRACK_PKG	package	TRACK_OBS_OUT
TRACK_PKG	type	TRACK_OBS_PTR
TRACK_DATABASE_PKG	type	TRACK_PTR
TRACK_PKG	type	TRACK_TYPE
TRACK_PKG	function	TRK_CATEGORY
TRACK_PKG	function	TRUE_BEARING
TRACK_PKG	function	TRUE_COURSE
TRACK_PKG	function	TRUE_SPEED
TRACK_PKG	function	TRUE_VELOCITY
TRACK_PKG	type	T_OBS
TRACK_PKG UPDATE_RELATIVE_CIRCLE_	procedure REFERENCE_TR	K_POS
TRACK_PKG UPDATE_RELATIVE_REGION_	procedure REFERENCE_TR	K_POS
		<del></del>
UPDATE_RELATIVE_REGION_	REFERENCE_TR	<del></del>
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG	REFERENCE_TR	VECTOR_2
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG	REFERENCE_TR type type subtype	VECTOR_2 VECTOR_3
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG	REFERENCE_TR type type subtype function	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG	REFERENCE_TR type type subtype function package	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG	REFERENCE_TR type type subtype function package	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG TRACK_PKG	REFERENCE_TR type type subtype function package package	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG TRACK_PKG TRACK_PKG	REFERENCE_TR type type subtype function package package function	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR WAYPNT
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG TRACK_PKG TRACK_PKG TRACK_PKG	REFERENCE_TR type type subtype function package package function type	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR WAYPOINT_ARRAY
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG	REFERENCE_TR type type subtype function package package function type type	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR WAYPOINT_ARRAY WAYPOINT_TYPE
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG FILTER_PKG	REFERENCE_TR type type subtype function package package function type type procedure	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR WAYPOINT_ARRAY WAYPOINT_TYPE WRITE_FILTER
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG FILTER_PKG FILTER_PKG	REFERENCE_TR type type subtype function package package function type type procedure procedure	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR WAYPOTT WAYPOINT_ARRAY WAYPOINT_TYPE WRITE_FILTER WRITE_FILTER_ARCHIVES_TO_TEXT_FILE
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG FILTER_PKG FILTER_PKG TRACK_PKG	REFERENCE_TR type type subtype function package package function type type procedure procedure procedure	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR WAYPOINT_ARRAY WAYPOINT_TYPE WRITE_FILTER WRITE_FILTER_ARCHIVES_TO_TEXT_FILE WRITE_TRACK_ARCHIVES_TO_TEXT_FILE
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG FILTER_PKG FILTER_PKG TRACK_PKG VECTOR_2_PKG	REFERENCE_TR type type subtype function package package function type type procedure procedure procedure function	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR WAYPOIT_ARRAY WAYPOINT_ARRAY WAYPOINT_TYPE WRITE_FILTER WRITE_FILTER_ARCHIVES_TO_TEXT_FILE WRITE_TRACK_ARCHIVES_TO_TEXT_FILE X_COORDINATE
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG VECTOR_2_PKG VECTOR_3_PKG	REFERENCE_TR type type subtype function package package function type type procedure procedure procedure function function	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR WAYPOINT_ARRAY WAYPOINT_TYPE WRITE_FILTER WRITE_FILTER_ARCHIVES_TO_TEXT_FILE WRITE_TRACK_ARCHIVES_TO_TEXT_FILE X_COORDINATE X_COORDINATE YEAR
UPDATE_RELATIVE_REGION_ VECTOR_2_PKG VECTOR_3_PKG VELOCITY_PKG TRACK_PKG INTEGRATION_SYSTEM_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG TRACK_PKG VECTOR_2_PKG VECTOR_3_PKG ABSOLUTE_TIME_PKG	REFERENCE_TR type type subtype function package package function type type procedure procedure procedure function function function function	VECTOR_2 VECTOR_3 VELOCITY VESSEL_NAME VPKG V_AND_C_STR WAYPOINT_ARRAY WAYPOINT_TYPE WRITE_FILTER WRITE_FILTER ARCHIVES_TO_TEXT_FILE WRITE_TRACK_ARCHIVES_TO_TEXT_FILE X_COORDINATE X_COORDINATE YEAR

## **APPENDIX B**

## INTEGRATION SYSTEM

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines tasks INTEGRATION_SYSTEM, GPS_UPDATE_TASK,
LINK CYCLE
-- and associated entries
with TRACK_PKG, GLOBAL_POSITION_PKG, GLOBAL_OBSERVATION_PKG, ANGLE_PKG,
 SPEED PKG, DISTANCE PKG, RELATIVE POSITION PKG, FILTER PKG,
TACPLOT PKG,
 SYSTEM_STATUS_PKG, ABSOLUTE_TIME_PKG;
use TRACK PKG, GLOBAL POSITION PKG, GLOBAL OBSERVATION PKG, ANGLE PKG,
 SPEED_PKG, DISTANCE_PKG, RELATIVE_POSITION_PKG, FILTER_PKG,
TACPLOT PKG,
 SYSTEM_STATUS_PKG, ABSOLUTE_TIME_PKG;
package INTEGRATION_SYSTEM_PKG is
 -- Contains entries that deal with procedures to alter the main
 -- TRACK DATABASE, the FILTER, or the SYSTEM STATUS
 task INTEGRATION SYSTEM is
 -- Creates a TRACK and enters it into the TRACK_DATABASE
 entry CREATE TRACK
 ( OBS : in GLOBAL OBSERVATION;
```

```
TRK_CAT : in TRACK_CATEGORY );
 -- Deletes a TRACK from the TRACK_DATABASE and sends it to history
entry DELETE_TRACK_AND_SEND_TO_HISTORY
 ( TRK NUM : in NATURAL );
 -- Adds an observation to an existing TRACK
entry ADD_TRACK_OBSERVATION
 ( TRK NUM : in NATURAL;
OBS : in GLOBAL_OBSERVATION );
 -- Adds an observation to an existing TRACK, using relative position
from
-- OWNSHIP as the observation location
entry ADD_TRACK OBSERVATION
 ( TRK_NUM : in NATURAL;
POS : in RELATIVE_POSITION );
-- Sets/changes TRACK's IDENTITY
entry SET_TRACK_IDENTITY
 ( TRK_NUM : in NATURAL;
TID : in IDENTITY TYPE );
-- Sets/changes TRACK's AMPLIFYING_INFO
entry SET AMPL INFO
( TRK NUM : in NATURAL;
AMP : in STRING );
-- Sets/changes TRACK's CLASS
entry SET_PLATFORM CLASS
 ( TRK NUM : in NATURAL;
PC : in STRING );
-- Sets/changes TRACK's NAME
entry SET_VESSEL NAME
( TRK_NUM : in NATURAL;
VES : in STRING );
-- Sets/changes TRACK's ALTITUDE
entry SET ALTITUDE
 ( TRK NUM : in NATURAL;
```

```
ALT : in DISTANCE );
-- Gets TRACK's CONTROL
entry GET CONTROL
( TRK NUM : in NATURAL;
CON : out CONTROL TYPE );
-- Sets/changes TRACK's CONTROL
entry SET CONTROL
( TRK NUM : in NATURAL;
CON : in CONTROL TYPE );
-- Sets/changes TRACK's IDENTITY
entry CHANGE_TRACK_CATEGORY
( TRK NUM : in NATURAL;
CAT : in TRACK_CATEGORY );
-- Builds a WAYPOINT TRACK
entry BUILD_WAYPOINT_SPECIAL_POINT
( POS : in GLOBAL POSITION;
TYME : in ABSOLUTE TIME ); -- time to waypoint
-- Builds a NAV HAZARD TRACK
entry BUILD NAV HAZARD SPECIAL POINT
( OBS : in GLOBAL OBSERVATION );
-- Builds a GENERAL SPECIAL_POINT TRACK
entry BUILD GENERAL SPECIAL POINT
( OBS : in GLOBAL OBSERVATION );
-- Builds a PATH TRACK
entry BUILD PATH
( PTS : in WAYPOINT_ARRAY ); -- points in path
-- Builds an ABSOLUTE CIRCLE REGION TRACK
entry BUILD ABSOLUTE CIRCLE_REGION
( RAD : in DISTANCE; -- radius of circle(yds)
CTR : in GLOBAL POSITION ); -- posn of circle center
-- Builds a RELATIVE CIRCLE REGION TRACK
entry BUILD RELATIVE CIRCLE_REGION
```

```
( RAD : in DISTANCE; -- radius of circle(yds)
CTR : in RELATIVE_POSITION; -- posn of circle center relative
            -- to ref trk pos
REF_TRK_NUM : in NATURAL ); -- reference track number
-- Builds an ABSOLUTE POLYGON REGION TRACK
entry BUILD ABSOLUTE POLYGON REGION
( AVA : in ABSOLUTE_VERTEX_ARRAY ); -- pts in polygon
-- Builds a RELATIVE POLYGON REGION TRACK
entry BUILD RELATIVE POLYGON REGION
( RVA : in RELATIVE_VERTEX_ARRAY; -- pts in poly reltv to ref trk
            -- position
REF TRK NUM : in NATURAL ); -- reference track number
-- Adds TRACK observation reflecting TRACK's course change
entry CHANGE COURSE
( TRK_NUM : in NATURAL;
CRS : in ANGLE );
-- Adds TRACK observation reflecting TRACK's speed change
entry CHANGE_SPEED
( TRK_NUM : in NATURAL;
SPD : in SPEED );
-- Adds TRACK observation reflecting TRACK's position change
entry CHANGE GLOBAL POSITION
( TRK NUM : in NATURAL;
POS : in GLOBAL POSITION );
-- Makes an ATOMIC_FILTER based on distance type attributes and adds it
-- to the current AND FILTER
entry MAKE DISTANCE ATOMIC FILTER
( DAF_ATTRIB_ID : in DISTANCE_ATTRIBUTE_ID;
DAF LIMIT : in DISTANCE;
DAF REF TRK NUM : in NATURAL;
DAF_RELATION : in RELATION ID );
-- Makes an ATOMIC_FILTER based on TRACK category type attributes and
-- it to the current AND FILTER
```

```
entry MAKE TRACK CATEGORY ATOMIC FILTER
 ( TCAF DESIRED TRK CAT : in TRACK CATEGORY;
 TCAF_EQ_REL_ID : in EQUALITY RELATION ID );
 -- Makes an ATOMIC FILTER based on TRACK identity type attributes and
adds
 -- it to the current AND FILTER
 entry MAKE PLATFORM IDENTITY ATOMIC FILTER
 ( PIAF DESIRED PLAT ID : in IDENTITY TYPE;
 PIAF_EQ_REL_ID : in EQUALITY_RELATION_ID );
 -- Adds a filled AND FILTER to the current FILTER
 entry ADD AND FILTER TO FILTER;
 -- Clears the FILTER to make way for a new one
 entry CLEAR FILTER;
 -- Writes a filled FILTER to an archive file for historical purposes
 entry WRITE FILTER;
 -- Fills the tactical display structure with TRACKs that pass FILTER
 -- requirements
 entry FILL TACPLOT;
 -- Flags the system as to whether or not to accept input from a
particular
 -- OWNSHIP sensor
 entry SET SENSOR STATUS
 ( SENSER : in SENSOR;
 SENSER STATUS : in STATUS );
 -- Gets the current input status from a particular OWNSHIP sensor
 entry GET SENSOR STATUS
 ( SENSER : in SENSOR;
 SENSER STATUS : out STATUS );
 -- Purges the TRACK DATABASE, sending each TRACK to an archive file.
 -- Also writes archived TRACK info and FILTER info to text files.
 -- Aborts the GPS update task.
 entry SHUTDOWN;
```

```
end INTEGRATION_SYSTEM;
-- Retrieves GPS data every 4 seconds and adds a new OWNSHIP TRACK
-- observation
task GPS UPDATE TASK;
-- Performs timing function for LINK-11 updates
task LINK CYCLE is
entry START LINK UPDATE;
end LINK_CYCLE;
end INTEGRATION_SYSTEM_PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
___
with TRACK_DATABASE_PKG, VECTOR_2_PKG, CALENDAR, NAVIGATION PKG;
use TRACK_DATABASE_PKG, VECTOR 2_PKG, CALENDAR, NAVIGATION PKG;
package body INTEGRATION_SYSTEM_PKG is
package APKG renames TRACK_PKG.AMP STR;
package VPKG renames TRACK PKG.V AND C STR;
use APKG, VPKG;
package INTEGER_INOUT is new INTEGER IO ( INTEGER );
package TC_INOUT is new ENUMERATION_IO ( TRACK CATEGORY );
use TC INOUT;
TRACK_DB : TRACK_DATABASE;
DIST_AT_FILT : ATOMIC_FILTER;
```

```
TRK_CAT_AT_FILT : ATOMIC_FILTER ( TRACK CATEGORY FILTER );
PLTFM ID AT FILT : ATOMIC FILTER ( PLATFORM IDENTITY FILTER );
AND_FILTUR : AND_FILTER;
FILTUR : FILTER;
ACTIVE_TRACK : TRACK;
OTHER TRACK: TRACK;
OWNSHIP : TRACK;
SYSTUM_STATUS : SYSTEM_STATUS;
LAST TRK NUM : NATURAL := 0;
VS1 : VPKG.VSTRING;
VS2 : APKG. VSTRING;
OBS : GLOBAL_OBSERVATION;
POS : GLOBAL POSITION;
TNUM : NATURAL;
PASSED_FILTER : BOOLEAN;
task body INTEGRATION SYSTEM is
begin
loop
select
accept CREATE_TRACK
( OBS : in GLOBAL OBSERVATION;
TRK_CAT : in TRACK CATEGORY ) do
-- Restore previous ACTIVE TRACK to TRACK DATABASE before creating
-- now one
RESTORE_ALTERED_TRACK_TO_DATABASE ( ACTIVE_TRACK, TRACK_DB );
```

```
CREATE TRACK ( OBS, LAST TRK NUM, ACTIVE_TRACK );
-- Default is UNKNOWN, so don't change if UNKNOWN
if TRK CAT /= TRACK PKG.UNKNOWN then
CHANGE_TRACK CATEGORY ( ACTIVE_TRACK, TRK_CAT );
end if;
ADD_TRACK_TO_DBASE ( ACTIVE_TRACK, TRACK_DB );
 -- Keep OWNSHIP up-to-date
 if TRACK_ID NUMBER ( ACTIVE_TRACK ) = 0 then
OWNSHIP := ACTIVE TRACK;
 end if;
 end;
 or
accept DELETE TRACK AND SEND TO HISTORY
 ( TRK_NUM : in NATURAL ) do
 FIND_TRACK_IN_DBASE ( TRK_NUM, ACTIVE_TRACK, TRACK_DB );
 DROP_TRACK_FROM_DBASE ( TRACK_DB );
   -- Set OWNSHIP as the ACTIVE_TRACK following a deletion
 FIND TRACK IN DBASE ( 0, ACTIVE TRACK, TRACK_DB );
 end;
 or
......ADD_TRACK_OBSERVATION.....
 accept ADD_TRACK_OBSERVATION
 ( TRK_NUM : in NATURAL;
 OBS : in GLOBAL_CBSERVATION ) do
 FIND_TRACK_IN_DBASE ( TRK_NUM, ACTIVE_TRACK, TRACK_DB );
 ADD TRACK OBSERVATION ( ACTIVE_TRACK, OBS );
 -- Keep OWNSHIP up-to-date
```

```
if TRACK_ID_NUMBER ( ACTIVE_TRACK ) = 0 then
OWNSHIP := ACTIVE_TRACK;
end if;
end;
or
accept ADD TRACK OBSERVATION
( TRK NUM : in NATURAL;
POS : in RELATIVE POSITION ) do
FIND TRACK_IN DBASE ( TRK_NUM, ACTIVE_TRACK, TRACK_DB );
  -- Convert the RELATIVE POSITION observation to a GLOBAL OBSERVATION
OBS := MAKE GLOBAL OBSERVATION ( OWNSHIP, ACTIVE TRACK, POS );
ADD TRACK OBSERVATION ( ACTIVE TRACK, OBS );
end;
or
accept SET_TRACK_IDENTITY
( TRK_NUM : in NATURAL;
TID : in IDENTITY TYPE ) do
FIND_TRACK_IN_DBASE ( TRK_NUM, ACTIVE_TRACK, TRACK_DB );
SET TRACK IDENTITY ( ACTIVE_TRACK, TID );
end;
or
accept SET_AMPL_INFO
( TRK NUM : in NATURAL;
AMP : in STRING ) do
FIND_TRACK_IN_DBASE ( TRK_NUM, ACTIVE_TRACK, TRACK_DB );
```

```
-- Convert STRING to a VSTRING ( variable STRING )
VS2 := VSTR (AMP);
SET_AMPL_INFO ( ACTIVE_TRACK, VS2 );
end;
or
......SET_PLATFORM_CLASS.....
accept SET PLATFORM CLASS
( TRK_NUM : in NATURAL;
PC : in STRING ) do
FIND TRACK_IN DBASE ( TRK NUM, ACTIVE_TRACK, TRACK_DB );
  -- Convert STRING to a VSTRING ( variable STRING )
VS1 := VSTR ( PC );
SET_PLATFORM_CLASS ( ACTIVE_TRACK, VS1 );
end;
or
accept SET_VESSEL_NAME
( TRK NUM : in NATURAL;
VES : in STRING ) do
FIND TRACK IN DBASE ( TRK NUM, ACTIVE TRACK, TRACK DB );
  -- Convert STRING to a VSTRING ( variable STRING )
VS1 := VSTR ( VES );
SET VESSEL NAME ( ACTIVE TRACK, VS1 );
end;
or
```

```
.....SET_ALTITUDE.....
accept SET_ALTITUDE
( TRK_NUM : in NATURAL;
ALT : in DISTANCE ) do
FIND_TRACK_IN_DBASE ( TRK_NUM, ACTIVE_TRACK, TRACK DB );
SET ALTITUDE ( ACTIVE TRACK, ALT );
end;
or
......GET_CONTROL..............
accept GET_CONTROL
( TRK_NUM : in NATURAL;
CON: out CONTROL TYPE ) do
FIND_TRACK_IN DBASE ( TRK NUM, ACTIVE TRACK, TRACK DB );
CON := CONTROL ( ACTIVE_TRACK );
end;
or
accept SET_CONTROL
( TRK_NUM : in NATURAL;
CON : in CONTROL_TYPE ) do
FIND_TRACK_IN_DBASE ( TRK_NUM, ACTIVE_TRACK, TRACK_DB );
SET_CONTROL ( FCTIVE_TRACK, CON );
end;
or
    accept CHANGE_TRACK_CATEGORY
( TRK_NUM : in NATURAL;
CAT : in TRACK_CATEGORY ) do
```

```
FIND TRACK IN DBASE ( TRK NUM, ACTIVE TRACK, TRACK DB );
CHANGE_TRACK_CATEGORY ( ACTIVE_TRACK, CAT );
end;
or
.....SUILD_WAYPOINT_SPECIAL_POINT.......
accept BUILD WAYPOINT SPECIAL POINT
( POS : in GLOBAL POSITION;
TYME : in ABSOLUTE_TIME ) do
-- Restore previous ACTIVE_TRACK to TRACK_DATABASE before creating
-- new one
RESTORE ALTERED TRACK TO DATABASE ( ACTIVE TRACK, TRACK DB );
OBS.POSITION := POS;
OBS.OBSERVATION_TIME := TYME;
OBS.COURSE AND SPEED := MAKE CARTESIAN VECTOR 2 ( 0.0, 0.0 );
CREATE_TRACK ( GBC, LAST_TRK_NUM, OTHER_TRACK );
  -- Changes TRACK CATEGORY to SPECIAL POINT, WAYPOINT & fills
  -- waypoint data
BUILD WAYPOINT SPECIAL POINT ( OTHER TRACK, POS, TYME );
ACTIVE TRACK := OTHER TRACK;
ADD_TRACK TO DBASE ( ACTIVE_TRACK, TRACK_DB );
end;
or
..... BUILD NAV HAZARD SPECIAL POINT............
accept BUILD_NAV_HAZARD_SPECIAL_POINT
( OBS : in GLOBAL OBSERVATION ) do
-- Restore previous ACTIVE_TRACK to TRACK_DATABASE before creating
-- new one
RESTORE ALTERED TRACK_TO DATABASE ( ACTIVE_TRACK, TRACK_DB );
```

```
CREATE_TRACK ( OBS, LAST_TRK_NUM, OTHER_TRACK );
  -- Changes TRACK_CATEGORY to SPECIAL POINT, NAV HAZARD & fills
   -- nav hazard data
BUILD_NAV_HAZARD_SPECIAL_POINT ( OTHER_TRACK );
ACTIVE_TRACK := OTHER_TRACK;
ADD_TRACK_TO_DBASE ( ACTIVE TRACK, TRACK DB );
end;
or
......BUILD_GENERAL_SPECIAL_POINT.....
accept BUILD_GENERAL_SPECIAL_POINT
( OBS : in GLOBAL OBSERVATION ) do
-- Restore previous ACTIVE_TRACK to TRACK DATABASE before creating
-- new one
RESTORE_ALTERED_TRACK_TO_DATABASE ( ACTIVE_TRACK, TRACK_DB );
CREATE_TRACK ( OBS, LAST TRK NUM, OTHER TRACK );
  -- Changes TRACK CATEGORY to SPECIAL POINT, GENERAL
BUILD_GENERAL_SPECIAL_POINT ( OTHER_TRACK );
ACTIVE TRACK := OTHER TRACK;
ADD TRACK_TO DBASE ( ACTIVE TRACK, TRACK DB );
end;
or
.....BUILD_PATH....
accept BUILD_PATH
( PTS : in WAYPOINT ARRAY ) do
-- Restore previous ACTIVE TRACK to TRACK DATABASE before creating
-- new one
RESTORE_ALTERED TRACK TO_DATABASE ( ACTIVE_TRACK, TRACK_DB );
```

```
-- Use 1st path waypoint as last observation's position
OBS.POSITION := PTS ( 0 ).POSITION;
OBS.OBSERVATION TIME := NOW;
OBS.COURSE_AND_SPEED := MAKE CARTESIAN VECTOR 2 ( 0.0, 0.0 );
CREATE_TRACK ( OBS, LAST_TRK_NUM, OTHER_TRACK );
   -- Changes TRACK CATEGORY to PATH & fills points
BUILD_PATH ( OTHER_TRACK, PTS );
ACTIVE TRACK := OTHER TRACK;
ADD_TRACK_TO_DBASE ( ACTIVE_TRACK, TRACK_DB );
end:
or
.....BUILL_ABSOLUTE_CIRCLE_REGION.....
accept BUILD ABSOLUTE CIRCLE REGION
( RAD : in DISTANCE;
CTR : in GLOBAL POSITION ) do
-- Restore previous ACTIVE_TRACK to TRACK_DATABASE before creating
-- new one
RESTORE ALTERED TRACK TO DATABASE ( ACTIVE TRACK, TRACK DB );
   -- Use circle center position as last observation's position
OBS.POSITION := CTR;
OBS.OBSERVATION TIME := NOW;
OBS.COURSE AND SPEED := MAKE CARTESIAN VECTOR 2 ( 0.0, 0.0 );
CREATE TRACK ( OBS, LAST TRK NUM, OTHER TRACK );
   -- Changes TRACK CATEGORY to REGION, CIRCLE, ABSOLUTE & fills
   -- circle data
BUILD_ABSCLUTE_CIRCLE_REGION ( OTHER TRACK, RAD, CTR );
ACTIVE TRACK := OTHER TRACK;
ADD_TRACK_TO_DBASE ( ACTIVE_TRACK, TRACK_DB );
end;
```

```
or
......BUILD_RELATIVE_CIRCLE_REGION.......
accept BUILD_RELATIVE_CIRCLE_REGION
( RAD : in DISTANCE;
CTR : in RELATIVE POSITION;
REF_TRK_NUM : in NATURAL ) do
  -- Get region's reference TRACK's position
FIND_TRACK_IN_DBASE ( REF_TRK_NUM, ACTIVE_TRACK, TRACK_DB );
OBS := MOST RECENT OBSERVATION ( ACTIVE TRACK );
CREATE_TRACK ( GBS, LAST TRK NUM, OTHER TRACK );
  -- Changes TRACK CATEGORY to REGION, CIRCLE, RELATIVE & fills
  -- circle data
BUILD RELATIVE CIRCLE REGION ( OTHER TRACK, RAD, CTR, REF TRK NUM );
ACTIVE TRACK := OTHER TRACK;
ADD_TRACK_TO_DBASE ( ACTIVE_TRACK, TRACK_DB );
end;
or
.....BUILD_ABSOLUTE_POLYGON_REGION.....
accept BUILD_ABSOLUTE_POLYGON_REGION
( AVA : in ABSOLUTE VERTEX ARRAY ) do
-- Restore previous ACTIVE TRACK to TRACK DATABASE before creating
-- new one
RESTORE_ALTERED TRACK TO DATABASE ( ACTIVE_TRACK, TRACK DB );
-- Use 1st polygon point as last observation's position
OBS.POSITION := AVA ( 0 );
OBS.OBSERVATION TIME := NOW;
OBS.COURSE AND SPEED := MAKE CARTESIAN VECTOR 2 ( 0.0, 0.0 );
CREATE TRACK ( OBS, LAST TRK NUM, OTHER TRACK );
```

```
-- Changes TRACK_CATEGORY to REGION, POLYGON, ABSOLUTE & fills
  -- vertex points
BUILD_ABSOLUTE_POLYGON_REGION ( OTHER_TRACK, AVA );
ACTIVE TRACK := OTHER TRACK;
ADD TRACK TO DBASE ( ACTIVE TRACK, TRACK DB );
end;
or
......BUILD_RELATIVE_POLYGON_REGION....................
accept BUILD_RELATIVE_POLYGON_REGION
( RVA : in RELATIVE VERTEX ARRAY;
REF_TRK_NUM : in NATURAL ) do
  -- Get region's reference TRACK's position
FIND_TRACK_IN_DBASE ( REF_TRK_NUM, ACTIVE_TRACK, TRACK_DB );
OBS := MOST_RECENT_OBSERVATION ( ACTIVE TRACK );
CREATE_TRACK ( OBS, LAST_TRK_NUM, OTHER TRACK );
  -- Changes TRACK_CATEGORY to REGION, POLYGON, RELATIVE & fills
  -- vertex points
BUILD_RELATIVE_POLYGON_REGION ( OTHER_TRACK, RVA, REF_TRK_NUM );
ACTIVE TRACK := OTHER TRACK;
ADD_TRACK_TO_DBASE ( ACTIVE_TRACK, TRACK DB );
end;
or
.....CHANGE_COURSE.....
accept CHANGE_COURSE
( TRK_NUM : in NATURAL;
CRS : in ANGLE ) do
FIND TRACK IN DBASE ( TRK NUM, ACTIVE TRACK, TRACK DB );
CHANGE_COURSE ( ACTIVE_TRACK, CRS );
```

```
end;
or
accept CHANGE_SPEED
( TRK NUM : in NATURAL;
SPD : in SPEED ) do
FIND_TRACK_IN_DBASE ( TRK_NUM, ACTIVE TRACK, TRACK DB );
CHANGE_SPEED ( ACTIVE_TRACK, SPD );
end;
or
.....CHANGE_GLOBAL_POSITION................
accept CHANGE_GLOBAL_POSITION
( TRK NUM : in NATURAL;
POS : in GLOBAL_POSITION ) do
FIND_TRACK_IN_DBASE ( TRK_NUM, ACTIVE_TRACK, TRACK_DB );
CHANGE_GLOBAL_POSITION ( ACTIVE_TRACK, POS );
end;
or
..... MAKE_DISTANCE_ATOMIC_FILTER.....
accept MAKE_DISTANCE_ATOMIC FILTER
( DAF_ATTRIB_ID : in DISTANCE_ATTRIBUTE ID;
DAF_LIMIT : in DISTANCE;
DAF_REF TRK NUM : in NATURAL;
DAF_RELATION : in RELATION ID ) do
  -- Find reference TRACK in database
FIND_TRACK_IN_DBASE ( DAF_REF TRK NUM, ACTIVE TRACK, TRACK DB );
MAKE_DISTANCE_ATOMIC_FILTER ( DAF_ATTRIB_ID, DAF_LIMIT,
ACTIVE_TRACK, DAF_RELATION, DIST_AT_FILT );
ADD_ATOMIC_FILTER_TO_AND_FILTER ( DIST_AT_FILT, AND FILTUR );
```

```
end;
or --
accept MAKE TRACK CATEGORY ATOMIC FILTER
( TCAF_DESIRED_TRK_CAT : in TRACK_CATEGORY;
TCAF_EQ_REL_ID : in EQUALITY_RELATION ID ) do
MAKE TRACK CATEGORY ATOMIC FILTER ( TCAF DESIRED TRK CAT,
          TCAF_EQ_REL_ID, TRK_CAT_AT_FILT );
ADD ATOMIC FILTER TO AND FILTER ( TRK CAT AT FILT, AND FILTUR );
end;
or
..... MAKE_PLATFORM_IDENTITY_ATOMIC_FILTER.....
accept MAKE_PLATFORM_IDENTITY_ATOMIC_FILTER
( PIAF_DESIRED PLAT_ID : in IDENTITY_TYPE;
PIAF_EQ_REL_ID : in EQUALITY RELATION ID ) do
MAKE PLATFORM IDENTITY ATOMIC FILTER ( PIAF DESIRED PLAT ID,
          PIAF_EQ_REL_ID, PLTFM_ID_AT_FILT );
ADD ATOMIC FILTER TO AND FILTER ( PLTFM ID AT FILT, AND FILTUR );
end;
or
.....ADD_AND_FILTER_TO_FILTER....
accept ADD AND FILTER TO FILTER do
ADD_AND_FILTER_TO_FILTER ( AND_FILTUR, FILTUR );
end;
or
```

```
accept CLEAR_FILTER do
CLEAR FILTER ( FILTUR );
end;
or
accept WRITE FILTER do
WRITE FILTER ( FILTUR );
end;
or
.....FILL_TACPLOT.....
accept FILL_TACPLOT do
  EMPTY TACPLOT;
-- For all TRACKS in the database
for I in 0 .. LAST_TRK_NUM loop
FIND_TRACK_IN_DBASE ( I, ACTIVE_TRACK, TRACK_DB );
  -- If TRACK is found
if TRACK_DATABASE_PKG.ACTIVE_TRACK ( TRACK_DB ) then
   -- Things get tricky when the TRACK is a RELATIVE REGION.
   -- We need to retrieve the reference TRACK's position to
    -- calculate the REGION's current position
if TRK_CATEGORY ( ACTIVE_TRACK ) = REGION then
if REGION_PLCMT ( ACTIVE_TRACK ) = RELATIVE_TO TRACK then
    -- Store the REGION's track number
TNUM := TRACK_ID_NUMBER ( ACTIVE_TRACK );
if REGION CATEG ( ACTIVE_TRACK ) = CIRCLE then
```

```
-- Find the reference's position
FIND TRACK IN DBASE ( RELATIVE CIRCLE REFERENCE TRK_NUM
          ( ACTIVE TRACK ), ACTIVE TRACK, TRACK DB );
POS := CURRENT POSITION ( ACTIVE TRACK );
OBS := MOST_RECENT_OBSERVATION ( ACTIVE_TRACK );
    -- Make the REGION the ACTIVE TRACK again
FIND TRACK IN DBASE ( TNUM, ACTIVE TRACK, TRACK DB );
     -- Update the REGION's reference position
UPDATE_RELATIVE_CIRCLE_REFERENCE_TRK_POS ( ACTIVE_TRACK,
              POS ):
else -- RELATIVE POLYGON
     -- Find the reference's position
FIND TRACK IN DBASE ( RELATIVE REGION_REFERENCE TRK_NUM
          ( ACTIVE TRACK ), ACTIVE TRACK, TRACK DB );
POS := CURRENT POSITION ( ACTIVE TRACK );
OBS := MOST_RECENT_OBSERVATION ( ACTIVE_TRACK );
     -- Make the REGION the ACTIVE_TRACK again
FIND TRACK IN DBASE ( TNUM, ACTIVE TRACK, TRACK DB );
     -- Update the REGION's reference position
UPDATE_RELATIVE_REGION_REFERENCE_TRK_POS ( ACTIVE_TRACK,
              POS );
end if;
     -- If the RELATIVE REGION's course and speed don't match
     -- the reference's, add an observation
if MOST RECENT OBSERVATION ( ACTIVE TRACK ) /= OBS then
ADD_TRACK_OBSERVATION ( ACTIVE_TRACK, OBS );
end if:
end if;
end if;
    -- Test the TRACK against the FILTER
PASSED FILTER := TEST FILTER ( FILTUR, ACTIVE TRACK );
```

```
-- If TRACK passes FILTER, add it to TACPLOT
   if PASSED_FILTER then
ADD TACPLOT_ELEMENT ( ACTIVE_TRACK );
   end if;
end if;
end loop;
end;
or
accept SET SENSOR STATUS
( SENSER : in SENSOR;
SENSER STATUS : in STATUS ) do
SET STATUS ( SYSTUM_STATUS, SENSER, SENSER_STATUS );
end;
or
accept GET_SENSOR_STATUS
( SENSER : in SENSOR;
SENSER_STATUS : out STATUS ) do
SENSER_STATUS := GET_STATUS ( SYSTUM_STATUS, SENSER );
end;
or
accept SHUTDOWN do
PURGE_ENTIRE_DBASE ( TRACK_DB );
  WRITE_TRACK_ARCHIVES_TO_TEXT_FILE;
  WRITE_FILTER_ARCHIVES_TO_TEXT_FILE;
  abort GPS_UPDATE_TASK;
```

```
end;
end select;
end loop;
end INTEGRATION_SYSTEM;
task body GPS UPDATE TASK is
SECONDS : constant DURATION := 1.0;
-- Update required every 4 seconds
INTERVAL : constant DURATION := 4 * SECONDS;
NEXT_GPS UPDATE : CALENDAR.TIME := CALENDAR.CLOCK + INTERVAL;
OBS : GLOBAL_OBSERVATION;
SENSER_STATUS : STATUS;
begin
loop
delay DURATION ( NEXT_GPS_UPDATE - CALENDAR.CLOCK );
INTEGRATION_SYSTEM.GET_SENSOR_STATUS ( GPS, SENSER_STATUS );
if SENSER STATUS = UP then
 -- Get OWNSHIP's position from GPS
OBS := GET_GPS_UPDATE;
INTEGRATION_SYSTEM.ADD TRACK_OBSERVATION ( 0, OBS );
end if;
NEXT GPS_UPDATE := NEXT_GPS_UPDATE + INTERVAL;
end loop;
exception
```

```
when STATUS_ERROR + CONSTRAINT_ERROR =>
 SET_STATUS ( SYSTUM_STATUS, GPS, DOWN );
 end GPS_UPDATE_TASK;
.....LINK_CYCLE.....
task body LINK_CYCLE is
 SECONDS : constant DURATION := 1.0;
 -- Update required every 4 seconds
 INTERVAL : constant DURATION := 4 * SECONDS;
 NEXT_LINK_UPDATE : CALENDAR.TIME := CALENDAR.CLOCK + INTERVAL;
 begin
 loop
 accept START_LINK_UPDATE;
 NEXT_LINK_UPDATE := NEXT_LINK_UPDATE + INTERVAL;
 delay DURATION ( NEXT_LINK_UPDATE - CALENDAR.CLOCK );
 end loop;
 end LINK_CYCLE;
begin
null;
end INTEGRATION_SYSTEM_PKG;
```

## **APPENDIX C**

## TRACK PACKAGE

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines abstract data type TRACK and associated
-- functions and procedures
with ANGLE PKG, SPEED PKG, DISTANCE PKG, VELOCITY PKG,
ABSOLUTE_TIME_PKG,
 GLOBAL POSITION PKG, GLOBAL OBSERVATION PKG, VSTRINGS,
RELATIVE_POSITION_PKG, DIRECT_IO;
use ANGLE_PKG, SPEED_PKG, DISTANCE PKG, VELOCITY_PKG, ABSOLUTE TIME PKG,
GLOBAL POSITION PKG, GLOBAL OBSERVATION PKG, RELATIVE POSITION PKG;
package TRACK PKG is
 -- Longest length of AMPL_INFO
AMP LEN: constant INTEGER := 80;
 -- Longest length of V NAME & S CLASS/A CLASS
 VES_AND_CLASS_LEN : constant INTEGER := 80;
 -- Maximum allowable points in a path
MAX_PTS_IN_PATH : constant NATURAL := 50;
```

```
-- Maximum number of history points of a TRACK to be displayed to the
MAX_HISTORY_PTS : constant NATURAL := 500;
-- Maximum allowable number of vertices in a polygon REGION TRACK
MAX_VERTICES_IN_POLYGON : constant NATURAL := 20;
subtype NUM PATH PTS is
NATURAL range 0 .. MAX_PTS_IN_PATH;
subtype NUM HISTORY PTS is
NATURAL range 0 .. MAX HISTORY PTS;
subtype NUM VERTICES is
NATURAL range 0 .. MAX VERTICES IN POLYGON;
-- TRACK history points
type GLOB OBS ARRAY is
array ( NUM_HISTORY_PTS range <> ) of GLOBAL_OBSERVATION;
type WAYPOINT TYPE is
record
POSITION: GLOBAL POSITION; -- Position of waypoint
TIME_TO: ABSOLUTE_TIME; -- Time to arrive at waypoint
end record;
type WAYPOINT ARRAY is
array ( NUM_PATH_PTS range <> ) of WAYPOINT_TYPE;
type RELATIVE VERTEX ARRAY is
array ( NUM VERTICES range <> ) of RELATIVE POSITION;
type ABSOLUTE_VERTEX_ARRAY is
array ( NUM VERTICES range <> ) of GLOBAL POSITION;
type TRACK is private;
type TRACK CATEGORY is
( UNKNOWN, SURFACE_PLATFORM, SUBSURFACE_PLATFORM, AIR_PLATFORM,
REGION, PATH, SPECIAL POINT, MAN IN WATER, NON DISPLAYABLE );
```

```
type IDENTITY TYPE is
 ( FRIENDLY, HOSTILE, NEUTRAL, UNKNOWN );
type CONTROL TYPE is
 ( LINK, LOCAL );
type SPECIAL POINT CATEGORY is
 ( GENERAL, WAYPOINT, NAV_HAZARD );
type REGION_CATEGORY is
 ( CIRCLE, POLYGON );
type REGION_PLACEMENT is
 ( ABSOLUTE, RELATIVE_TO_TRACK );
package AMP_STR is new VSTRINGS ( AMP_LEN );
use AMP_STR;
package V AND C STR is new VSTRINGS ( VES AND CLASS LEN );
use V_AND_C_STR;
-- Creates a TRACK with its first observation
procedure CREATE TRACK
 ( GO : in GLOBAL OBSERVATION;
LAST_TRACK_ID : in out NATURAL;
TRK : out TRACK );
-- Deletes TRACK and sends its TRACK_TYPE data, as well as its
-- GLOBAL OBSERVATIONs to secondary storage
procedure DELETE TRACK AND SEND TO HISTORY
 ( TRK : in out TRACK );
-- Creates TRK FILE & OBS FILE
procedure CREATE TRACK FILES;
-- Retrieves archived TRACK info from secondary storage. Reformats it
into
-- a human readable format and writes it to a secondary storage text
file.
procedure WRITE TRACK ARCHIVES TO TEXT FILE;
-- Adds an observation of a TRACK to an existing TRACK object
```

```
procedure ADD_TRACK_OBSERVATION
( TRK : in out TRACK;
GO : in GLOBAL OBSERVATION );
-- Changes/sets TRACK's IDENTITY TYPE
procedure SET_TRACK_IDENTITY
( TRK : in out TRACK;
TID : in IDENTITY TYPE );
-- Changes/sets TRACK's AMPLIFYING INFO
procedure SET AMPL INFO
( TRK : out TRACK;
AMP : in AMP STR. VSTRING );
-- Changes/sets TRACK's CLASS
procedure SET_PLATFORM_CLASS
( TRK : in out TRACK;
PC : in V_AND_C_STR.VSTRING ); -- Class name
-- Changes/sets TRACK's VESSEL NAME
procedure SET VESSEL NAME
( TRK : in out TRACK;
VES : in V_AND_C_STR.VSTRING );-- Vessel name
-- Changes/sets TRACK's ALTITUDE
procedure SET_ALTITUDE
( TRK : in out TRACK;
ALT : in DISTANCE ); -- Altitude in yards
-- Changes/sets TRACK's CONTROL_TYPE
procedure SET_CONTROL
( TRK : out TRACK;
CON : in CONTROL_TYPE );-- LINK/LOCAL control
-- Changes TRACK's TRACK_CATEGORY
procedure CHANGE TRACK CATEGORY
( TRK1 : in out TRACK;
CAT : in TRACK_CATEGORY );
-- Builds a WAYPOINT
procedure BUILD_WAYPOINT_SPECIAL POINT
```

```
( TRK : in out TRACK;
POS : in GLOBAL POSITION;
TYME : in ABSOLUTE TIME ); -- Time to arrive at waypoint
 -- Builds a NAV HAZARD
procedure BUILD_NAV_HAZARD_SPECIAL_POINT
 ( TRK : in out TRACK );
-- Builds a GENERAL SPECIAL POINT
procedure BUILD GENERAL SPECIAL POINT
 ( TRK : in out TRACK );
 -- Builds a PATH
procedure BUILD PATH
 ( TRK : in out TRACK;
PTS : in WAYPOINT_ARRAY ); -- Points on the path
-- Builds an ABSOLUTE CIRCLE REGION whose center is an absolute
-- GLOBAL_POSITION
procedure BUILD ABSOLUTE CIRCLE REGION
 ( TRK : in out TRACK;
RAD : in DISTANCE; -- Radius of circle
CTR : in GLOBAL_POSITION ); -- Center of circle
  - Builds a CIRCLE REGION whose center is relative to a reference TRACK
procedure BUILD_RELATIVE_CIRCLE_REGION
 ( TRK : in out TRACK;
 RAD : in DISTANCE; -- Radius of circle
 CTR : in RELATIVE POSITION; -- Center of circle relative
              -- to reference TRACK
REF : in NATURAL ); -- Reference track number
 -- Builds an ABSOLUTE POLYGON REGION whose vertices are absolute
 -- GLOBAL POSITIONS
procedure BUILD ABSOLUTE POLYGON REGION
 ( TRK : in out TRACK;
AVA : in ABSOLUTE_VERTEX_ARRAY );
 -- Builds a POLYGON REGION whose vertices are relative to a reference
TRACK
procedure BUILD_RELATIVE_POLYGON_REGION
```

```
( TRK : in out TRACE;
RVA : in RELATIVE_VERTEX_ARRAY;
REF : in NATURAL ); -- reference track number
-- Returns an array of the TRACK's history points as reflected in the
-- TRACK_DATABASE
procedure TRACK HISTORY
( TRK : in TRACK;
HISTORY PTS ARRAY : in out GLOB OBS ARRAY );
-- Changes the TRACK's course and adds a new observation
-- Usually only invoked on OWNSHIP's TRACK
procedure CHANGE COURSE
( TRK : in out TRACK;
CRS : in ANGLE );
-- Changes the TRACK's speed and adds a new observation
-- Usually only invoked on OWNSHIP's TRACK
procedure CHANGE SPEED
( TRK : in out TRACK;
SPD : in SPEED );
-- Changes TRACK's position without recomputing course and speed
-- Used as a correction measure
procedure CHANGE GLOBAL POSITION
( TRK : in out TRACK;
GP : in GLOBAL_POSITION );
-- Returns TRACK number as generated by the system
function TRACK_ID_NUMBER
( TRK : TRACK ) return NATURAL;
-- Returns TRACK's IDENTITY_TYPE
function TRACK IDENTITY
( TRK : TRACK ) return IDENTITY TYPE;
-- Returns TRACK's AMPLIFYING INFO
function AMPL INFO
( TRK : TRACK ) return AMP STR.VSTRING;
-- Returns TRACK's CLASS
```

```
function PLATFORM CLASS
 ( TRK : TRACK ) return V_AND_C_STR.VSTRING;
-- Returns TRACK vessel's name
 function VESSEL NAME
 ( TRK : TRACK ) return V AND C STR. VSTRING;
-- Returns TRACK's TRACK_CATEGORY
 function TRK CATEGORY
 ( TRK : TRACK ) return TRACK_CATEGORY;
-- Returns TRACK's CONTROL TYPE
 function CONTROL
 ( TRK : TRACK ) return CONTROL TYPE;
 -- Returns TRACK's true course as reported/calculated in its
 -- MOST RECENT OBSERVATION
 function TRUE_COURSE
 ( TRK : TRACK ) return ANGLE;
 -- Returns TRACK's true speed as reported/calculated in its
 -- MOST RECENT OBSERVATION
 function TRUE SPEED
 ( TRK : TRACK ) return SPEED;
 -- Returns TRACK's true course and speed as reported/calculated in its
 -- MOST RECENT_OBSERVATION
 function TRUE VELOCITY
 ( TRK : TRACK ) return VELOCITY;
 -- Returns target TRACK's relative motion (course and speed) as seen
 -- from the reference TRACK
 function TARGET RELATIVE VELOCITY
 ( REFERENCE TRACK,
 TARGET_TRACK : TRACK ) return VELOCITY;
 -- Returns target TRACK's relative course as seen from the reference
TRACK
function RELATIVE COURSE
 ( REFERENCE TRACK,
 TARGET_TRACK : TRACK ) return ANGLE;
```

```
-- Returns target TRACK's relative speed as seen from the reference
TRACK
 function RELATIVE_SPEED
 ( REFERENCE TRACK,
 TARGET TRACK: TRACK) return SPEED;
 -- Returns TRACK's altitude in yards
 function ALTITUDE
 ( TRK : TRACK ) return DISTANCE;
 -- Returns TRACK's current DR ( Dead Reckoning ) position as calculated
 -- from its MOST_RECENT_OBSERVATION ( last known position, course,
speed,
 -- and time
 function CURRENT POSITION
 ( TRK : TRACK ) return GLOBAL POSITION;
 -- Returns bearing to target TRACK from reference TRACK with respect to
 -- reference TRACK's heading ( not true north )
 function RELATIVE BEARING
 ( REFERENCE TRACK,
 TARGET TRACK : TRACK ) return ANGLE;
 -- Returns bearing to target TRACK from reference TRACK with respect to
true
 -- north
 function TRUE_BEARING
 ( REFERENCE TRACK,
 TARGET TRACK : TRACK ) return ANGLE;
 -- Returns TRACK's last entered GLOBAL_OBSERVATION
 function MOST_RECENT_OBSERVATION
 ( TRK : TRACK ) return GLOBAL_OBSERVATION;
 -- Returns category of SPECIAL POINT TRACK
 function SPEC POINT CATEGORY
 ( TRK : TRACK ) return SPECIAL POINT CATEGORY;
 -- Returns a GLOBAL OBSERVATION based on TRACK's relative position to
 -- reference TRACK. The TRACK's course and speed are calculated based
 -- on its new position and its MOST_RECENT_OBSERVATION
```

```
function MAKE_GLOBAL_OBSERVATION
 ( OWNSHIP TRACK : TRACK;
 TARGET_TRACK : TRACK;
 TGT_REL_POS : RELATIVE_POSITION ) return GLOBAL_OBSERVATION;
 -- Returns category of REGION TRACK
 function REGION CATEG
 ( TRK : TRACK ) return REGION_CATEGORY;
 -- Returns method of REGION placement ( ABSOLUTE, RELATIVE TO TRACK )
 function REGION PLCMT
 ( TRK : TRACK ) return REGION_PLACEMENT;
 -- Returns radius of CIRCLE REGION in yards
 function CIRCLE RADIUS
 ( TRK : TRACK ) return DISTANCE;
 -- Returns location of ABSOLUTE CIRCLE REGION center
 function ABS_CIRCLE_CENTER
 ( TRK : TRACK ) return GLOBAL POSITION;
 -- Returns bearing and range from reference TRACK to RELATIVE CIRCLE
REGION
 -- center
 function REL CIRCLE CENTER
 ( TRK : TRACK ) return RELATIVE POSITION;
 -- Returns all waypoints of a PATH
 function PATH POINTS
 ( TRK : TRACK ) return WAYPOINT_ARRAY;
 -- Return location of and time to waypoint
 function WAYPNT
 ( TRK : TRACK ) return WAYPOINT TYPE;
 -- Returns all vertices ( bearings and ranges from reference TRACK ) of
 -- RELATIVE POLYGON REGION
 function REL REGION VERTICES
 ( TRK : TRACK ) return RELATIVE_VERTEX_ARRAY;
```

```
-- Returns all vertices (earth coordinates) of an ABSOLUTE POLYGON
REGION
 function ABS_REGION_VERTICES
 ( TRK : TRACK ) return ABSOLUTE VERTEX ARRAY;
 -- Returns reference TRACK number of a RELATIVE CIRCLE REGION
 function RELATIVE CIRCLE REFERENCE TRK NUM
 ( TRK : TRACK ) return NATURAL;
 -- Returns the position of the reference TRACK of a RELATIVE CIRCLE
REGION
 function RELATIVE_CIRCLE REFERENCE_TRK POS
 ( TRK : TRACK ) return GLOBAL POSITION;
 -- Returns reference TRACK number of a RELATIVE POLYGON REGION
 function RELATIVE REGION REFERENCE TRK NUM
 ( TRK : TRACK ) return NATURAL;
 -- Returns the position of the reference TRACK of a RELATIVE POLYGON
REGION
 function RELATIVE REGION REFERENCE TRK POS
 ( TRK : TRACK ) return GLOBAL POSITION;
 -- Updates position of RELATIVE CIRCLE REGION's reference TRACK
procedure UPDATE RELATIVE CIRCLE REFERENCE TRK POS
 ( TRK : in out TRACK;
GP : in GLOBAL POSITION );
 -- Updates position of RELATIVE POLYGON REGION's reference TRACK
procedure UPDATE_RELATIVE REGION_REFERENCE TRK POS
 ( TRK : in out TRACK;
GP : in GLOBAL POSITION );
pragma INLINE ( CREATE TRACK, DELETE TRACK AND SEND TO HISTORY,
     CREATE_TRACK_FILES, WRITE_TRACK ARCHIVES TO TEXT FILE,
     ADD_TRACK_OBSERVATION, SET_TRACK IDENTITY, SET AMPL INFO,
     SET PLATFORM CLASS, SET VESSEL NAME, SET ALTITUDE,
     SET CONTROL, CHANGE TRACK CATEGORY,
     BUILD WAYPOINT_SPECIAL_POINT, BUILD NAV_HAZARD SPECIAL POINT,
     BUILD_GENERAL_SPECIAL_POINT, BUILD_PATH,
     BUILD_ABSOLUTE_CIRCLE_REGION, BUILD RELATIVE CIRCLE REGION,
     BUILD_ABSOLUTE_POLYGON_REGION, BUILD RELATIVE POLYGON REGION,
```

```
TRACK_HISTORY, CHANGE_COURSE, CHANGE_SPEED,
      CHANGE GLOBAL POSITION, TRACK_ID_NUMBER, TRACK_IDENTITY,
      AMPL_INFO, PLATFORM_CLASS, VESSEL_NAME, TRK CATEGORY, CONTROL,
      TRUE_COURSE, TRUE_SPEED, TRUE_VELOCITY,
      TARGET RELATIVE VELOCITY, RELATIVE_COURSE, RELATIVE_SPEED,
      ALTITUDE, CURRENT POSITION, RELATIVE BEARING, TRUE BEARING,
     MOST_RECENT_OBSERVATION, SPEC_POINT_CATEGORY,
     MAKE_GLOBAL_OBSERVATION, REGION CATEG, REGION PLCMT,
      CIRCLE_RADIUS, ABS_CIRCLE_CENTER, REL_CIRCLE_CENTER,
      PATH_POINTS, WAYPNT, REL_REGION_VERTICES, ABS_REGION_VERTICES,
      RELATIVE CIRCLE REFERENCE TRK NUM,
      RELATIVE CIRCLE REFERENCE TRK POS,
      RELATIVE REGION REFERENCE TRK NUM,
      RELATIVE REGION REFERENCE TRK POS,
      UPDATE RELATIVE CIRCLE REFERENCE TRK POS,
     UPDATE RELATIVE REGION REFERENCE TRK POS );
private
type SPECIAL POINT TYPE
 ( S_P_CAT : SPECIAL_POINT_CATEGORY := GENERAL ) is
record
case S P CAT is
when WAYPOINT =>
WAYPT : WAYPOINT TYPE;
when others =>
null;
end case;
end record;
type PATH TYPE
 ( PTS : NUM_PATH_PTS := 0 ) is
record
WAYPTS : WAYPOINT_ARRAY ( 0 .. PTS );
end record;
type REL_VERTEX TYPE
 ( PTS : NUM_VERTICES := 0 ) is
record
VERTICES : RELATIVE_VERTEX_ARRAY ( 0 .. PTS );
end record;
```

```
type ABS VERTEX TYPE
( PTS : NUM VERTICES := 0 ) is
record
VERTICES : ABSOLUTE_VERTEX_ARRAY ( 0 .. PTS );
end record;
type REGION TYPE
( REG_CAT : REGION_CATEGORY := CIRCLE;
REG_PLACEMT : REGION_PLACEMENT := ABSOLUTE ) is
record
case REG CAT is
when CIRCLE =>
RADIUS : DISTANCE; -- Circle radius
case REG_PLACEMT is
when ABSOLUTE =>
ABS_CENTER : GLOBAL_POSITION; -- Circle center posit
when RELATIVE_TO_TRACK =>
REL CENTER : RELATIVE_POSITION; -- Circle center posit
             -- relative to ref trk
REFERENCE TRACK1 : NATURAL; -- Ref track number
REF TRK_POSITION1 : GLOBAL_POSITION; -- Ref track position
end case;
when POLYGON =>
case REG_PLACEMT is
when ABSOLUTE =>
ABS_VERTICES : ABS_VERTEX_TYPE; -- Vertex positions
when RELATIVE TO TRACK =>
REL_VERTICES : REL_VERTEX_TYPE;-- Vertex positions
             -- relative to ref trk
REFERENCE TRACK2 : NATURAL; -- Ref track number
REF_TRK_POSITION2 : GLOBAL_POSITION; -- Ref track position
end case;
end case;
end record;
type TRACK TYPE
( CATEGORY : TRACK CATEGORY := UNKNOWN ) is
record
TRACK_ID : NATURAL; -- Track number
AMPL INFO : AMP STR. VSTRING := AMP STR. NUL;
```

```
CONTROL : CONTROL TYPE := LOCAL;
case CATEGORY is
when SURFACE PLATFORM | SUBSURFACE_PLATFORM =>
S CLASS : V AND C STR. VSTRING; -- Vessel class name
S ID : IDENTITY TYPE := UNKNOWN;
V_NAME : V_AND_C_STR.VSTRING; -- Vessel's name
when AIR PLATFORM =>
A CLASS : V AND C STR. VSTRING; -- Aircraft class name
A_ID : IDENTITY_TYPE := UNKNOWN;
ALTITUDE : DISTANCE;
when SPECIAL POINT =>
S P TYPE : SPECIAL POINT TYPE;
when PATH =>
P_TYPE : PATH_TYPE;
when REGION =>
R TYPE : REGION TYPE;
when others =>
null;
end case;
end record;
subtype SURFACE_TRACK_TYPE is TRACK_TYPE ( SURFACE_PLATFORM );
subtype SUBSURFACE TRACK TYPE is TRACK TYPE (SUBSURFACE_PLATFORM);
subtype AIR TRACK TYPE is TRACK TYPE ( AIR PLATFORM );
subtype REGION_TRACK_TYPE is TRACK_TYPE ( REGION );
subtype PATH_TRACK_TYPE is TRACK_TYPE ( PATH );
subtype SPECIAL POINT TRACK TYPE is TRACK TYPE ( SPECIAL POINT );
subtype MAN IN WATER TRACK TYPE is TRACK TYPE ( MAN IN WATER );
subtype NON DISPLAYABLE TRACK TYPE is TRACK TYPE ( NON DISPLAYABLE );
-- Linked list structure that stores a TRACK's GLOBAL OBSERVATIONS
type TRACK OBS;
type TRACK_OBS_PTR is access TRACK_OBS;
type TRACK OBS is
record
GLO_OBS : GLOBAL_OBSERVATION;
NEXT OBS : TRACK OBS PTR;
end record;
type TRACK is
```

```
record
TRACK_DATA : TRACK_TYPE;
TRK_OBS : TRACK_OBS_PTR;-- Pointer to first
            -- observation
end record;
 -- Structure used to write TRACK observations to DIRECT_IO file
type T_OBS is
 record
T_NUM : NATURAL; -- Track number
G_O : GLOBAL_OBSERVATION;
end record;
package TRACK_DATA_OUT is new DIRECT_IO ( TRACK_TYPE );
package TRACK OBS OUT is new DIRECT IO ( T OBS );
use TRACK_DATA_OUT, TRACK_OBS_OUT;
end TRACK PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
with UNCHECKED_DEALLOCATION, RELATIVE_TIME PKG, VECTOR 2 PKG, DIRECT 10,
MATH, TEXT IO;
use RELATIVE_TIME_PKG, VECTOR_2 PKG, TEXT IO;
package body TRACK PKG is
......CREATE_TRACK.....
procedure CREATE TRACK
( GO : in GLOBAL OBSERVATION;
```

```
LAST_TRACK_ID : in out NATURAL; -- Track number ( global var )
TRK : out TRACK ) is
T O : TRACK_OBS_PTR;
NEW TRK : TRACK;
begin
NEW_TRK.TRACK_DATA.TRACK_ID := LAST_TRACK_ID;
T O := new TRACK_OBS;
T O.GLO_OBS := GO;
NEW_TRK.TRK_OBS := T_O;
LAST_TRACK_ID := LAST_TRACK_ID + 1;-- Increment for next TRACK
TRK := NEW TRK;
end CREATE TRACK;
..... DELETE TRACK_AND SEND TO_HISTORY.....
procedure DELETE TRACK_AND SEND_TO_HISTORY
( TRK : in out TRACK ) is
procedure FREE OBS is
new UNCHECKED_DEALLOCATION ( TRACK_OBS, TRACK_OBS_PTR );
T1, T2 : TRACK_OBS_PTR;
T DATA : TRACK_TYPE;
T_O : T_OBS;
TRK_FILE : TRACK_DATA_OUT.FILE_TYPE; -- File for TRACK_DATA
OBS_FILE : TRACK_OBS_OUT.FILE_TYPE; -- File for TRACK observations
T INDEX: NATURAL; -- Index counter for TRK FILE
O_INDEX : NATURAL; -- Index counter for OBS_FILE
begin
-- Open DIRECT_IO archive files
TRACK DATA OUT. OPEN ( TRK FILE, INOUT FILE, "TRK FILE" );
TRACK_OBS_OUT.OPEN ( OBS_FILE, INOUT_FILE, "OBS_FILE" );
```

```
-- Get sizes of both files & set write indices to their sizes + 1
T INDEX := NATURAL ( TRACK DATA OUT.SIZE ( TRK FILE ) ) + 1;
O_INDEX := NATURAL ( TRACK OBS OUT.SIZE ( OBS FILE ) ) + 1;
T DATA := TRK.TRACK DATA;
-- Write TRACK DATA to file
TRACK DATA OUT.WRITE ( TRK FILE, T DATA, TRACK DATA OUT.POSITIVE COUNT
( T INDEX ) );
-- Get pointer to first TRACK observation
T1 := TRK.TRK OBS;
-- Assign TRACK number to TRACK observation node about to be written so
-- it can later be retrieved & correlated to its TRACK DATA
T O.T NUM := T DATA.TRACK ID;
-- Write all TRACK observations to file, freeing allocated memory along
-- the way
while T1 /= null loop
T_O.G_O := T1.GLO_OBS;
TRACK_OBS OUT.WRITE ( OBS_FILE, T_O, TRACK_OBS OUT.POSITIVE COUNT
( O INDEX ) );
O_INDEX := O_INDEX + 1;
T2 := T1.NEXT OBS;
FREE OBS ( T1 );
T1 := T2;
end loop;
TRACK DATA OUT.CLOSE ( TRK FILE );
TRACK_OBS_OUT.CLOSE ( OBS_FILE );
end DELETE_TRACK AND SEND TO HISTORY;
procedure CREATE TRACK FILES is
TRK FILE : TRACK_DATA_OUT.FILE_TYPE;
OBS_FILE : TRACK_OBS_OUT.FILE TYPE;
```

```
begin
TRACK_DATA_OUT.CREATE ( TRK_FILE, INOUT_FILE, "TRK_FILE" );
TRACK_OBS_OUT.CREATE ( OBS_FILE, INOUT_FILE, "OBS_FILE" );
TRACK DATA OUT.CLOSE ( TRK_FILE );
TRACK_OBS_OUT.CLOSE ( OBS_FILE );
end CREATE_TRACK_FILES;
......write_track_archives_to_text_file.....
procedure WRITE_TRACK ARCHIVES TO_TEXT_FILE is
T DATA : TRACK TYPE;
T O : T OBS;
TRK NUM : NATURAL; -- Track number
FINISHED: BOOLEAN: = FALSE; -- Flag to show when finished writing
T_CAT : TRACK_CATEGORY;
AMP INFO : AMP_STR.VSTRING;
CTL : CONTROL TYPE;
CLASS : V_AND_C_STR.VSTRING;
NAME : V AND C STR. VSTRING;
IDENT : IDENTITY TYPE;
SPEC PT : SPECIAL POINT CATEGORY;
GLO POS : GLOBAL POSITION;
REL_POS : RELATIVE_POSITION;
ABS TIME : ABSOLUTE TIME;
NAT NUM : NATURAL;
LAT_DIR : NORTH_SOUTH;
LONG DIR : EAST WEST;
LAT D,
LAT M,
LAT S : NATURAL;
LONG_D,
LONG M,
LONG_S : NATURAL;
Y, M, D : NATURAL;
S : FLOAT;
REG CAT : REGION CATEGORY;
REG_PL : REGION_PLACEMENT;
DASHES : STRING ( 1 .. 80 ) := ( OTHERS => '=' );
```

```
DOTS : STRING ( 1 .. 80 ) := ( OTHERS => \'.' );
TRK FILE : TRACK DATA OUT.FILE TYPE;
OBS_FILE : TRACK_OBS_OUT.FILE_TYPE;
TEXT FILE : TEXT IO.FILE TYPE;
-- Prints TRACK observation points as earth coordinates to text file
procedure PRINT GLOBAL POSITION is
begin
GET_LATITUDE ( GLO_POS, LAT_DIR, LAT_D, LAT M, LAT S );
GET_LONGITUDE ( GLO_POS, LONG_DIR, LONG D, LONG_M, LONG_S );
PUT ( TEXT_FILE, NATURAL' IMAGE ( LAT_D ) );
PUT ( TEXT_FILE, NATURAL'IMAGE ( LAT_M ) );
PUT ( TEXT_FILE, NATURAL'IMAGE ( LAT_S ) );
if LAT DIR = N then
PUT ( TEXT FILE, " N " );
PUT ( TEXT FILE, " S " );
end if;
PUT ( TEXT_FILE, NATURAL'IMAGE ( LONG D ) );
PUT ( TEXT_FILE, NATURAL'IMAGE ( LONG_M ) );
PUT ( TEXT_FILE, NATURAL'IMAGE ( LONG S ) );
if LONG_DIR = W then
PUT ( TEXT_FILE, " W" );
PUT ( TEXT FILE, " E" );
end if;
end PRINT_GLOBAL POSITION;
-- Prints time of TRACK observation as mm/dd/yy hh:mm:ss
```

```
procedure PRINT OBSERVATION TIME is
begin
Y := YEAR ( ABS TIME );
M := MONTH ( ABS_TIME );
D := DAY ( ABS_TIME );
 S := TIME_OF_DAY ( ABS_TIME );
PUT ( TEXT FILE, NATURAL' IMAGE ( M ) );
PUT ( TEXT FILE, "/" );
PUT ( TEXT FILE, NATURAL' IMAGE ( D ) );
PUT ( TEXT FILE, "/" );
PUT ( TEXT_FILE, NATURAL'IMAGE ( Y - 1900 ) );
PUT ( TEXT FILE, " " );
PUT ( TEXT_FILE, NATURAL'IMAGE ( HOURS ( TIME_OF_DAY ( ABS TIME ) ) ) );
PUT ( TEXT FILE, ':' );
PUT ( TEXT_FILE, NATURAL'IMAGE ( MINUTES ( TIME_OF_DAY ( ABS_TIME ) ) )
);
PUT ( TEXT FILE, ':');
PUT ( TEXT_FILE, NATURAL'IMAGE ( NATURAL ( SECONDS ( TIME_OF_DAY
 ( ABS_TIME ) ) ) );
end PRINT_OBSERVATION_TIME;
begin -- WRITE TRACK ARCHIVES TO TEXT FILE
-- Open DIRECT IO TRACK archive files
TRACK_DATA_OUT.OPEN ( TRK_FILE, INOUT_FILE, "TRK_FILE" );
TRACK_OBS_OUT.OPEN ( OBS_FILE, INOUT_FILE, "OBS_FILE" );
 -- Create text file for TRACK history
 TEXT_IO.CREATE ( TEXT_FILE, NAME => "TRACKS.HIS" );
while NOT TRACK DATA OUT. END OF FILE ( TRK FILE ) loop
-- Read in all unique TRACK_DATA records one at a time
TRACK_DATA_OUT.READ ( TRK_FILE, T_DATA );
 TRK_NUM := T_DATA.TRACK_ID; -- Get TRACK number to identify its
```

```
-- Read in & write TRACK DATA info to text file
T_CAT := T_DATA.CATEGORY;
AMP INFO := T DATA.AMPL INFO;
PUT_LINE ( TEXT_FILE, DASHES );
PUT ( TEXT_FILE, "TRACK NUMBER :" );
FUT ( TEXT FILE, NATURAL' IMAGE ( TRK_NUM ) );
SET COL ( TEXT FILE, 40 );
PUT ( TEXT_FILE, "CONTROL : " );
if T_DATA.CONTROL = LINK then
PUT ( TEXT_FILE, "LINK" );
else
PUT ( TEXT FILE, "LOCAL" );
end if;
TEXT_IO.NEW_LINE ( TEXT_FILE );
PUT ( TEXT FILE, "AMPLIFYING INFO : " );
PUT ( TEXT_FILE, AMP_STR.STR ( AMP_INFO ) );
TEXT IO.NEW LINE ( TEXT FILE );
PUT ( TEXT FILE, "TRACK CATEGORY : " );
case T_CAT is
when UNKNOWN =>
PUT ( TEXT_FILE, "UNKNOWN" );
TEXT IO.NEW LINE ( TEXT FILE );
PUT_LINE ( TEXT_FILE, DASHES );
when SURFACE_PLATFORM =>
CLASS := T_DATA.S CLASS;
NAME := T DATA.V NAME;
IDENT := T_DATA.S_ID;
PUT ( TEXT_FILE, "SURFACE_PLATFORM" );
TEXT_IO.NEW LINE ( TEXT FILE );
PUT ( TEXT_FILE, "CLASS : " );
PUT ( TEXT_FILE, V_AND C STR.STR ( CLASS ) );
TEXT_IO.NEW_LINE ( TEXT_FILE );
```

PUT ( TEXT FILE, "IDENTITY : " );

-- observations in OBS\_FILE

```
case IDENT is
when UNKNOWN =>
  PUT ( TEXT FILE, "UNKNOWN" );
when FRIENDLY =>
PUT ( TEXT FILE, "FRIENDLY" );
when HOSTILE =>
  PUT ( TEXT_FILE, "HOSTILE" );
when NEUTRAL =>
  PUT ( TEXT_FILE, "NEUTRAL" );
end case;
  TEXT IO.NEW LINE ( TEXT FILE );
  PUT ( TEXT FILE, "VESSEL NAME : " );
  PUT ( TEXT FILE, V AND C STR.STR ( NAME ) );
  TEXT IO.NEW LINE ( TEXT FILE );
  PUT LINE ( TEXT FILE, DASHES );
when SUBSURFACE PLATFORM =>
  PUT ( TEXT_FILE, "SUBSURFACE_PLATFORM" );
  CLASS := T DATA.S CLASS;
  NAME := T DATA.V NAME;
  IDENT := T DATA.S ID;
  TEXT_IO.NEW_LINE ( TEXT_FILE );
  PUT ( TEXT_FILE, "CLASS : " );
  PUT ( TEXT_FILE, V_AND_C_STR.STR ( CLASS ) );
  TEXT_IO.NEW_LINE ( TEXT_FILE );
  PUT ( TEXT FILE, "IDENTITY : " );
  case IDENT is
  when UNKNOWN =>
  PUT ( TEXT FILE, "UNKNOWN" );
  when FRIENDLY ≈>
  PUT ( TEXT_FILE, "FRIENDLY" );
  when HOSTILE =>
  PUT ( TEXT FILE, "HOSTILE" );
  when NEUTRAL =>
  PUT ( TEXT FILE, "NEUTRAL" );
  end case;
  TEXT_IO.NEW_LINE ( TEXT FILE );
```

```
PUT ( TEXT FILE, "VESSEL NAME : " );
  PUT ( TEXT_FILE, V_AND_C_STR.STR ( NAME ) );
  TEXT IO.NEW LINE ( TEXT FILE );
PUT_LINE ( TEXT_FILE, DASHES );
when AIR_PLATFORM =>
  PUT ( TEXT_FILE, "AIR_PLATFORM" );
  CLASS := T DATA.A CLASS;
  IDENT := T_DATA.A_ID;
  TEXT_IO.NEW_LINE ( TEXT_FILE );
  PUT ( TEXT FILE, "CLASS : " );
  PUT ( TEXT_FILE, V_AND_C_STR.STR ( CLASS ) );
  TEXT_IO.NEW_LINE ( TEXT_FILE );
  PUT ( TEXT FILE, "IDENTITY : " );
  case IDENT is
  when UNKNOWN =>
  PUT ( TEXT FILE, "UNKNOWN" );
  when FRIENDLY =>
  PUT ( TEXT FILE, "FRIENDLY" );
  when HOSTILE =>
  PUT ( TEXT_FILE, "HOSTILE" );
  when NEUTRAL =>
  PUT ( TEXT FILE, "NEUTRAL" );
  end case;
  TEXT_IO.NEW_LINE ( TEXT_FILE );
PUT LINE ( TEXT FILE, DASHES );
when REGION =>
  REG_CAT := T DATA.R TYPE.REG_CAT;
  REG_PL := T_DATA.R TYPE.REG PLACEMT;
  PUT ( TEXT_FILE, "REGION" );
  SET_COL ( TEXT_FILE, 35 );
  case reg cat is
  when CIRCLE =>
  PUT ( TEXT FILE, "CIRCLE" );
  SET_COL ( TEXT_FILE, 45 );
```

```
case REG PL is
when ABSOLUTE =>
GLO_POS := T_DATA.R_TYPE.ABS_CENTER;
  PUT ( TEXT FILE, "ABSOLUTE" );
  TEXT IO.NEW LINE ( TEXT_FILE );
  PUT ( TEXT FILE, "CIRCLE CENTER :" );
  PRINT GLOBAL POSITION;
when RELATIVE TO TRACK =>
  PUT ( TEXT FILE, "RELATIVE TO TRACK" );
  NAT_NUM := T_DATA.R_TYPE.REFERENCE_TRACK1;
  PUT ( TEXT FILE, NATURAL' IMAGE ( NAT NUM ) );
  TEXT IO.NEW LINE ( TEXT FILE );
  PUT LINE ( TEXT FILE, "BRG / RG FROM" );
  PUT ( TEXT FILE, "REFERENCE TRACK :");
  NAT NUM := NATURAL ( RADIANS TO DEGREES ( BEARING TO
     ( T DATA.R TYPE.REL CENTER ) ) );
  PUT ( TEXT FILE, NATURAL' IMAGE (NAT NUM));
  PUT ( TEXT_FILE, '/' );
  NAT NUM := NATURAL ( RANGE OF ( T DATA.R TYPE.REL_CENTER ) );
  PUT ( TEXT FILE, NATURAL' IMAGE ( NAT NUM ) );
end case;
TEXT IO.NEW LINE ( TEXT FILE );
PUT ( TEXT FILE, "CIRCLE RADIUS :" );
NAT_NUM := NATURAL ( T_DATA.R_TYPE.RADIUS );
PUT ( TEXT FILE, NATURAL' IMAGE ( NAT NUM ) );
TEXT_IO.NEW_LINE ( TEXT FILE );
when POLYGON ≈>
PUT ( TEXT FILE, "POLYGON" );
SET_COL ( TEXT FILE, 45 );
case REG PL is
when ABSOLUTE =>
  PUT ( TEXT FILE, "ABSOLUTE" );
  TEXT IO.NEW LINE ( TEXT_FILE );
  PUT ( TEXT FILE, "POLYGON VERTICES :" );
```

```
TEXT IO.NEW LINE ( TEXT FILE );
  NAT_NUM := NATURAL ( T_DATA.R_TYPE.ABS_VERTICES.PTS );
     for I in 0 .. NAT_NUM loop
     GLO_POS := T_DATA.R_TYPE.ABS_VERTICES.VERTICES (1);
    PRINT GLOBAL POSITION;
     TEXT_IO.NEW LINE ( TEXT FILE );
     end loop;
  when RELATIVE_TO_TRACK =>
     PUT ( TEXT FILE, "RELATIVE TO TRACK" );
    NAT_NUM := T_DATA.R_TYPE.REFERENCE_TRACK1;
     PUT ( TEXT FILE, NATURAL' IMAGE ( NAT NUM ) );
     TEXT IO.NEW LINE ( TEXT FILE );
     PUT_LINE(TEXT_FILE, "POLYGON VERTICES" );
     PUT ( TEXT_FILE, "(BRG/RG FM REF TRK) :");
     TEXT IO.NEW LINE ( TEXT FILE );
    NAT_NUM := NATURAL ( T_DATA.R_TYPE.REL_VERTICES.PTS );
     for I in 0 .. NAT NUM loop
    REL_POS := T_DATA.R_TYPE.REL_VERTICES.VERTICES (1);
     NAT_NUM := NATURAL ( RADIANS TO DEGREES ( BEARING TO
          ( REL POS ) ) );
    PUT ( TEXT FILE, NATURAL' IMAGE ( NAT NUM ) );
    PUT ( TEXT FILE, '/' );
    NAT_NUM := NATURAL ( RANGE_OF ( REL POS ) );
     PUT ( TEXT_FILE, NATURAL'IMAGE ( NAT_NUM ) );
    TEXT_IO.NEW_LINE ( TEXT FILE );
    end loop;
  end case;
  end case;
PUT LINE ( TEXT FILE, DASHES );
when PATH =>
  PUT ( TEXT_FILE, "PATH" );
  TEXT_IO.NEW_LINE ( TEXT_FILE );
  NAT_NUM := T_DATA.P_TYPE.PTS;
```

```
for I in 0 .. NAT NUM loop
   GLO POS := T_DATA.P TYPE.WAYPTS ( I ).POSITION;
   ABS_TIME := T_DATA.P_TYPE.WAYPTS ( I ).TIME_TO;
   PUT ( TEXT FILE, "PATH POINT POSITION :" );
   PRINT GLOBAL POSITION;
   TEXT_IO.NEW_LINE ( TEXT_FILE );
PUT ( TEXT_FILE, "TIME TO PATH POINT :" );
  PRINT_OBSERVATION_TIME;
   TEXT IO.NEW LINE ( TEXT FILE );
   end loop;
PUT LINE ( TEXT FILE, DASHES );
when SPECIAL POINT =>
  SPEC_PT := T_DATA.S_P_TYPE.S_P_CAT;
  PUT ( TEXT_FILE, "SPECIAL POINT" );
SET_COL ( TEXT FILE, 40 );
  case SPEC_PT is
  when GENERAL =>
  PUT ( TEXT_FILE, "GENERAL" );
  when WAYPOINT =>
  GLO_POS := T_DATA.S P TYPE.WAYPT.POSITION;
  ABS_TIME := T_DATA.S_P_TYPE.WAYPT.TIME_TO;
  PUT ( TEXT_FILE, "WAYPOINT" );
  TEXT_IO.NEW_LINE ( TEXT_FILE );
  PUT ( TEXT_FILE, "WAYPOINT POSITION :" );
  PRINT_GLOBAL_POSITION;
  TEXT_IO.NEW_LINE ( TEXT_FILE );
PUT ( TEXT_FILE, "TIME TO WAYPOINT :" );
  PRINT_OBSERVATION_TIME;
  when NAV HAZARD =>
  PUT ( TEXT_FILE, "NAV_HAZARD" );
  end case;
  TEXT_IO.NEW_LINE ( TEXT_FILE );
PUT_LINE ( TEXT_FILE, DASHES );
```

```
when MAN_IN_WATER =>
   PUT ( TEXT_FILE, "MAN_IN_WATER" );
   TEXT IO.NEW LINE ( TEXT FILE );
 PUT LINE ( TEXT FILE, DASHES );
 when NON DISPLAYABLE =>
   PUT ( TEXT FILE, "NON DISPLAYABLE" );
   TEXT IO.NEW LINE ( TEXT FILE );
 PUT_LINE ( TEXT_FILE, DASHES );
 end case;
 -- Since we know the TRACK number of the current TRACK being read/
 -- we can now identify its observations in OBS_FILE by searching on its
 -- TRACK number. Also, since a TRACK and its observations are dropped
 -- at the same time, the observations for any particular TRACK will be
 -- contiguous in the file.
 while NOT TRACK_OBS_OUT.END_OF_FILE ( OBS_FILE ) loop
 exit when FINISHED;
 TRACK_OBS_OUT.READ ( OBS FILE, T O );
  if TRK_NUM = T_O.T_NUM then
  -- A match on TRACK number is found in the OBS FILE,
   -- All observations will be together, so keep reading until a
mismatch
   -- is found
   while NOT FINISHED loop
   -- Read in & write all TRACK's observations
   GLO_POS := T_O.G O.POSITION;
   ABS_TIME := T_O.G O.OBSERVATION TIME;
   PUT ( TEXT FILE, "OBSERVATION POSITION :" );
   PRINT_GLOBAL_POSITION;
   TEXT_IO.NEW_LINE ( TEXT FILE );
   PUT ( TEXT_FILE, "TIME OF OBSERVATION :" );
```

```
PRINT OBSERVATION_TIME;
  TEXT_IO.NEW_LINE ( TEXT_FILE );
  PUT ( TEXT FILE, "OBSERVED COURSE :" );
  NAT_NUM := NATURAL ( RADIANS_TO_DEGREES ( COURSE
( T_O.G_O.COURSE_AND SPEED ) ) );
  PUT ( TEXT_FILE, NATURAL' IMAGE ( NAT NUM ) );
  TEXT_IO.NEW LINE ( TEXT FILE );
  PUT ( TEXT_FILE, "OBSERVED SPEED :" );
  NAT_NUM := NATURAL ( SPEED IN KNOTS ( SPD
( T_O.G_O.COURSE_AND_SPEED ) ));
  PUT ( TEXT_FILE, NATURAL'IMAGE ( NAT NUM ) );
  TEXT_IO.NEW_LINE ( TEXT FILE );
  PUT_LINE ( TEXT_FILE, DOTS );
if NOT TRACK_OBS_OUT.END OF FILE (OBS_FILE) then
  -- Get next TRACK observation
  TRACK_OBS_OUT.READ ( OBS_FILE, T_O );
  if TRK_NUM /= T_O.T_NUM then
    -- Mismatch on TRACK number
  FINISHED := TRUE;
   -- Write next TRACK info on new page
  TEXT_IO.NEW_PAGE ( TEXT FILE );
  end if;
  else -- No more TRACK observations
  FINISHED := TRUE;
  TEXT_IO.NEW_PAGE ( TEXT_FILE );
end if;
end loop;
end if;
end loop;
```

```
-- Go back to the start of OBS_FILE to start reading observations for
-- the next TRACK
TRACK OBS OUT.RESET ( OBS FILE );
-- Reset flag
FINISHED := FALSE;
end loop;
TRACK_DATA_OUT.CLOSE ( TRK_FILE );
TRACK_OBS_OUT.CLOSE ( OBS_FILE );
TEXT_IO.CLOSE ( TEXT_FILE );
end WRITE TRACK ARCHIVES TO TEXT FILE;
......ADD_TRACK_OBSERVATION.....
procedure ADD TRACK OBSERVATION
( TRK : in out TRACK;
GO : in GLOBAL OBSERVATION ) is
T_O : TRACK_OBS_PTR;
begin
-- Add observation to head of list
T_O := new TRACK_OBS;
T_O.GLO_OBS := GO;
T_O.NEXT_OBS := TRK.TRK_OBS;
TRK.TRK_OBS := T_O;
end ADD_TRACK_OBSERVATION;
.....SET_TRACK_IDENTITY.....
procedure SET TRACK IDENTITY
( TRK : in out TRACK;
TID : in IDENTITY TYPE ) is
begin
```

```
case TRK.TRACK DATA.CATEGORY is
when SURFACE PLATFORM | SUBSURFACE_PLATFORM =>
 TRK.TRACK_DATA.S_ID := TID;
when AIR PLATFORM =>
 TRK.TRACK_DATA.A_ID := TID;
when others =>
 null;
end case;
end SET TRACK IDENTITY;
.....SET_AMPL_INFO.....
procedure SET_AMPL_INFO
( TRK : out TRACK;
AMP : in AMP STR.VSTRING ) is
begin
TRK.TRACK DATA.AMPL INFO := AMP;
end SET_AMPL_INFO;
.....SET_PLATFORM_CLASS......
procedure SET_PLATFORM_CLASS
( TRK : in out TRACK;
PC : in V AND C STR. VSTRING ) is
begin
case TRK.TRACK DATA.CATEGORY is
when SURFACE_PLATFORM | SUBSURFACE_PLATFORM =>
  TRK.TRACK DATA.S CLASS := PC;
when AIR PLATFORM =>
  TRK.TRACK_DATA.A_CLASS := PC;
when others =>
 null;
end case;
end SET_PLATFORM_CLASS;
......SET_VESSEL_NAME...............
```

```
procedure SET_VESSEL_NAME
( TRK : in out TRACK;
VES : in V_AND_C_STR.VSTRING ) is
begin
if ( TRK.TRACK_DATA.CATEGORY = SURFACE_PLATFORM ) or
( TRK.TRACK DATA.CATEGORY = SUBSURFACE_PLATFORM ) then
TRK.TRACK DATA.V NAME := VES;
end if;
end SET_VESSEL_NAME;
.....SET_ALTITUDE........
procedure SET ALTITUDE
( TRK : in out TRACK;
ALT : in DISTANCE ) is
begin
if TRK.TRACK_DATA.CATEGORY = AIR_PTATFORM then
TRK.TRACK DATA.ALTITUDE := ALT;
end if;
end SET_ALTITUDE;
.....SET_CONTROL....
procedure SET_CONTROL
( TRK : out TRACK;
CON : in CONTROL_TYPE ) is
TRK.TRACK_DATA.CONTROL := CON;
end SET_CONTROL;
.....CHANGE_TRACK_CATEGORY.....
procedure CHANGE TRACK CATEGORY
( TRK1 : in out TRACK;
CAT : in TRACK_CATEGORY ) is
```

```
TRK2 : TRACK;
SFC : SURFACE TRACK TYPE;
SUB : SUBSURFACE_TRACK_TYPE;
AIR : AIR_TRACK_TYPE;
REG : REGION_TRACK_TYPE;
SPP : SPECIAL POINT TRACK TYPE;
PTH : PATH_TRACK_TYPE;
MIW : MAN_IN_WATER_TRACK_TYPE;
NON: NON DISPLAYABLE TRACK TYPE;
begin
case CAT is
when SURFACE_PLATFORM =>
 TRK2.TRACK DATA := SFC;
when SUBSURFACE PLATFORM =>
 TRK2.TRACK_DATA := SUB;
when AIR PLATFORM =>
 TRK2.TRACK DATA := AIR;
when REGION =>
 TRK2.TRACK_DATA := REG;
when SPECIAL POINT =>
 TRK2.TRACK DATA := SPP;
when PATH =>
 TRK2.TRACK DATA := PTH;
when MAN IN WATER =>
 TRK2.TRACK_DATA := MIW;
when NON DISPLAYABLE =>
 TRK2.TRACK DATA := NON;
when others =>
 null;
end case;
TRK2.TRACK_DATA.TRACK_ID := TRK1.TRACK_DATA.TRACK ID;
TRK2.TRACK_DATA.AMPL_INFO := TRK1.TRACK_DATA.AMPL_INFO;
TRK2.TRACK_DATA.CONTROL := TRK1.TRACK_DATA.CONTROL;
TRK2.TRK_OBS := TRK1.TRK_OBS;
TRK1 := TRK2;
end CHANGE_TRACK_CATEGORY;
```

```
.....BUILD_WAYPOINT_SPECIAL_POINT.....
procedure BUILD_WAYPOINT_SPECIAL_POINT
( TRK : in out TRACK;
POS : in GLOBAL_POSITION;
TYME : in ABSOLUTE TIME ) is
WP : SPECIAL POINT TYPE ( WAYPOINT );
begin
CHANGE_TRACK CATEGORY ( TRK, SPECIAL_POINT );
WP.WAYPT.POSITION := POS;
WP.WAYPT.TIME_TO := TYME;
TRK.TRACK_DATA.S_P_TYPE := WP;
end BUILD_WAYPOINT_SPECIAL_POINT;
.....BUILD_NAV_HAZARD_SPECIAL_POINT.....
procedure BUILD NAV HAZARD SPECIAL POINT
( TRK : in out TRACK ) is
NH : SPECIAL POINT TYPE ( NAV_HAZARD );
begin
CHANGE_TRACK_CATEGORY ( TRK, SPECIAL_POINT );
TRK.TRACK_DATA.S_P_TYPE := NH;
end BUILD_NAV_HAZARD_SPECIAL_POINT;
.....BUILD_GENERAL_SPECIAL_POINT......
procedure BUILD GENERAL SPECIAL POINT
( TRK : in out TRACK ) is
GEN : SPECIAL_POINT_TYPE;
begin
```

```
CHANGE_TRACK_CATEGORY ( TRK, SPECIAL_POINT );
TRK.TRACK_DATA.S_P_TYPE := GEN;
end BUILD GENERAL SPECIAL POINT;
BUILD_PATH.....
procedure BUILD_PATH
( TRK : in out TRACK;
PTS : in WAYPOINT_ARRAY ) is
N : NUM_PATH_PTS := PTS'LAST;
PTH : PATH_TYPE ( N );
begin
CHANGE_TRACK_CATEGORY ( TRK, PATH );
PTH.WAYPTS := PTS;
TRK.TRACK_DAIA.P_TYPE := PTH;
end BUILD PATH;
.....BUILD_ABSOLUTE_CIRCLE_REGION.....
procedure BUILD_ABSOLUTE_CIRCLE_REGION
( TRK : in out TRACK;
RAD : in DISTANCE;
CTR : in GLOBAL_POSITION ) is
ABS_CIRCLE : REGION_TYPE;
begin
CHANGE_TRACK CATEGORY ( TRK, REGION );
ABS_CIRCLE.RADIUS := RAD;
ABS CIRCLE.ABS CENTER := CTR;
TRK.TRACK_DATA.R_TYPE := ABS_CIRCLE;
end BUILD_ABSOLUTE CIRCLE REGION;
```

```
.....BUILD_RELA'TIVE_CIRCLE_REGION.....
procedure BUILD_RELATIVE_CIRCLE REGION
( TRK : in out TRACK;
RAD : in DISTANCE;
CTR : in RELATIVE FOSITION;
REF : in NATURAL ) is
REL_CIRCLE : REGION_TYPE ( CIRCLE, RELATIVE_TO_TRACK );
begin
CHANGE TRACK CATEGORY ( TRK, REGION );
REL_CIRCLE.RADIUS := RAD;
REL_CIRCLE.REL_CENTER := CTR;
REL CIRCLE.REFERENCE TRACK1 := REF;
TRK.TRACK_DATA.R_TYPE := REL_CIRCLE;
end BUILD_RELATIVE_CIRCLE_REGION;
.....BUILD_ABSOLUTE_POLYGON_REGION.......
procedure BUILD ABSOLUTE POLYGON REGION
( TRK : in out TRACK;
AVA : in ABSOLUTE_VERTEX_ARRAY ) is
N : NUM VERTICES := AVA'LAST;
AV TYPE : ABS VERTEX TYPE ( N );
ABS_POLY : REGION_TYPE ( POLYGON, ABSOLUTE );
begin
CHANGE_TRACK_CATEGORY ( TRK, REGION );
AV TYPE. VERTICES := AVA;
ABS_POLY.ABS_VERTICES := AV_TYPE;
TRK.TRACK_DATA.R TYPE := ABS POLY;
end BUILD_ABSOLUTE_POLYGON_REGION;
.....BUILD_RELATIVE_POLYGON_REGION.....
procedure BUILD_RELATIVE_POLYGON_REGION
```

```
( TRK : in out TRACK;
RVA : in RELATIVE VERTEX ARRAY;
REF : in NATURAL ) is
N : NUM_VERTICES := RVA'LAST;
RV_TYPE : REL_VERTEX_TYPE ( N );
REL POLY : REGION TYPE ( POLYGON, RELATIVE_TO_TRACK );
begin
CHANGE_TRACK_CATEGORY ( TRK, REGION );
RV TYPE. VERTICES := RVA;
REL_POLY.REL_VERTICES := RV_TYPE;
REL POLY.REFERENCE TRACK2 := REF;
TRK.TRACK_DATA.R_TYPE := REL_POLY;
end BUILD_RELATIVE_POLYGON_REGION;
......TRACK HISTORY.....
procedure TRACK_HISTORY
( TRK : in TRACK;
HISTORY_PTS_ARRAY : in out GLOB_OBS_ARRAY ) is
-- Points to first TRACK observation
NEXT_OBSERVATION_PTR : TRACK_OBS_PTR := TRK.TRK_OBS;
begin
-- Read in as many observations as the user requested ( as indicated by
-- the size of the array
for I in HISTORY PTS ARRAY'RANGE loop
-- If there are less TRACK observations than the user requested
if NEXT_OBSERVATION_PTR = null then
return;
end if;
-- Fill array element with current observation
HISTORY PTS ARRAY ( I ) := NEXT OBSERVATION PTR.GLO OBS;
```

```
-- Point to next observation
NEXT_OBSERVATION_PTR := NEXT_OBSERVATION_PTR.NEXT_OBS;
end loop;
end TRACK_HISTORY;
.....CHANGE_COURSE.....
procedure CHANGE_COURSE
( TRK : in out TRACK;
CRS : in ANGLE ) is
-- TRACK's current speed
TRUE_SPD : SPEED := TRUE_SPEED ( TRK );
-- TRACK's current position
TRK_POS : GLOBAL_POSITION := CURRENT_POSITION ( TRK );
NEW_OBS : GLOBAL_OBSERVATION;
NEW_CRS_SPD : VELOCITY;
begin
NEW_CRS_SPD := MAKE_VELOCITY ( TRUE_SPD, CRS );
NEW_OBS.OBSERVATION_TIME := NOW;
NEW_OBS.POSITION := TRK_POS;
NEW_OBS.COURSE_AND_SPEED := NEW CRS SPD;
-- Since we're changing TRACK's course, need to add a new observation
ADD_TRACK_OBSERVATION ( TRK, NEW OBS );
end CHANGE_COURSE;
......CHANGE_SPEED.....
procedure CHANGE_SPEED
( TRK : in out TRACK;
SPD : in SPEED ) is
```

```
-- TRACK's current course
TRUE CRS : ANGLE := TRUE COURSE ( TRK );
-- TRACK's current position
TRK POS : GLOBAL POSITION := CURRENT POSITION ( TRK );
NEW OBS : GLOBAL OBSERVATION;
NEW_CRS_SPD : VELOCITY;
begin
NEW_CRS_SPD := MAKE VELOCITY ( SPD, TRUE_CRS );
NEW_OBS.OBSERVATION_TIME := NOW;
NEW_OBS.POSITION := TRK_POS;
NEW OBS.COURSE AND SPEED := NEW CRS SPD;
-- Since we're changing TRACK's speed, need to add a new observation
ADD_TRACK_OBSERVATION ( TRK, NEW_OBS );
end CHANGE SPEED;
procedure CHANGE GLOBAL_POSITION
( TRK : in out TRACK;
GP : in GLOBAL_POSITION ) is
-- TRACK's current course and speed
TRUE_VEL : VELOCITY := TRUE_VELOCITY ( TRK );
NEW OBS : GLOBAL OBSERVATION;
begin
NEW OBS.OBSERVATION TIME := NOW;
NEW_OBS.COURSE_AND_SPEED := TRUE_VEL;
NEW OBS.POSITION := GP;
-- Since we're changing TRACK's course and speed, need to add a new
-- observation
```

```
ADD TRACK OBSERVATION ( TRK, NEW OBS );
end CHANGE GLOBAL POSITION;
.....TRACK_ID_NUMBER.....
function TRACK_ID_NUMBER
( TRK : TRACK ) return NATURAL is
begin
return TRK.TRACK_DATA.TRACK_ID;
end TRACK ID NUMBER;
.....track_identity.....
function TRACK IDENTITY
( TRK : TRACK ) return IDENTITY_TYPE is
begin
case TRK.TRACK_DATA.CATEGORY is
when SURFACE_PLATFORM | SUBSURFACE_PLATFORM =>
return TRK.TRACK_DATA.S_ID;
when AIR_PLATFORM =>
return TRK.TRACK DATA.A ID;
when others =>
null;
end case;
end TRACK_IDENTITY;
function AMPL INFO
( TRK : TRACK ) return AMP_STR.VSTRING is
begin
return TRK.TRACK DATA.AMPL INFO;
end AMPL_INFO;
```

```
.....PLATFORM_CLASS.....
function PLATFORM CLASS
( TRK : TRACK ) return V_AND_C_STR.VSTRING is
begin
case TRK.TRACK_DATA.CATEGORY is
when SURFACE_PLATFORM | SUBSURFACE_PLATFORM =>
return TRK.TRACK DATA.S CLASS;
when AIR_PLATFORM =>
return TRK.TRACK_DATA.A_CLASS;
when others =>
null;
end case;
end PLATFORM_CLASS;
function VESSEL_NAME
( TRK : TRACK ) return V_AND_C_STR.VSTRING is
begin
if ( TRK.TRACK_DATA.CATEGORY = SURFACE_PLATFORM ) or
( TRK.TRACK DATA.CATEGORY = SUBSURFACE PLATFORM ) then
return TRK.TRACK DATA.V NAME;
end if;
end VESSEL_NAME;
......TRK_CATEGORY.....
function TRK_CATEGORY
( TRK : TRACK ) return TRACK_CATEGORY is
begin
return TRK.TRACK_DATA.CATEGORY;
end TRK CATEGORY;
```

```
.....CONTROL
function CONTROL
( TRK : TRACK ) return CONTROL_TYPE is
begin
return TRK.TRACK_DATA.CONTROL;
end CONTROL;
.....TRUE_COURSE.....
function TRUE COURSE
( TRK : TRACK ) return ANGLE is
begin
return COURSE ( MOST RECENT OBSERVATION ( TRK ).COURSE AND SPEED );
end TRUE_COURSE;
.....TRUE_SPEED.....
function TRUE SPEED
( TRK : TRACK ) return SPEED is
begin
return SPD ( MOST_RECENT_OBSERVATION ( TRK ).COURSE AND SPEED );
end TRUE SPEED;
.....TRUE_VELOCITY.....
function TRUE VELOCITY
( TRK : TRACK ) return VELOCITY is
begin
return MOST_RECENT_OBSERVATION ( TRK ).COURSE_AND_SPEED;
end TRUE_VELOCITY;
..... TARGET_RELATIVE_VELOCITY......
function TARGET RELATIVE VELOCITY
( REFERENCE_TRACK,
TARGET_TRACK : TRACK ) return VELOCITY is
```

```
REF_TRUE_VELOCITY,
TGT TRUE VELOCITY: VELOCITY;
begin
-- Get target & reference TRACK's true velocity
REF_TRUE_VELOCITY := TRUE_VELOCITY ( REFERENCE_TRACK );
TGT_TRUE_VELOCITY := TRUE_VELOCITY ( TARGET_TRACK );
-- The difference in the 2 true velocity vectors gives relative velocity
return VECTOR 2 PKG."-" ( TGT_TRUE_VELOCITY, REF TRUE VELOCITY );
end TARGET_RELATIVE_VELOCITY;
.....RELATIVE_COURSE.....
function RELATIVE COURSE
( REFERENCE TRACK,
TARGET_TRACK : TRACK ) return ANGLE is
begin
return COURSE ( TARGET_RELATIVE_VELOCITY
( REFERENCE TRACK, TARGET TRACK ) );
end RELATIVE_COURSE;
function RELATIVE_SPEED
( REFERENCE TRACK,
TARGET_TRACK : TRACK ) return SPEED is
return SPD ( TARGET_RELATIVE_VELOCITY ( REFERENCE_TRACK, TARGET_TRACK )
end RELATIVE SPEED;
.....ALTITUDE.....
function ALTITUDE
( TRK : TRACK ) return DISTANCE is
begin
```

```
if TRK.TRACK_DATA.CATEGORY = AIR_PLATFORM then
 return TRK.TRACK DATA.ALTITUDE;
 end if;
 end ALTITUDE;
.....CURRENT_POSITION.....
 function CURRENT POSITION
 ( TRK : TRACK ) return GLOBAL POSITION is
 TIME_DIFFTRENCE : RELATIVE_TIME;
 TRACK SPEED : SPEED := TRUE_SPEED ( TRK );
 TRACK_COURSE : ANGLE := TRUE_COURSE ( TRK );
 DEAD_RECKONING_DISTANCE : DISTANCE;
 DEAD RECKONING POSITION: RELATIVE POSITION;
 LAST_GLOBAL_POSITION : GLOBAL POSITION;
begin
 -- Get time difference between last TRACK observation and now in order
to
 -- compute distance traveled
TIME DIFFERENCE := NOW - MOST_RECENT_OBSERVATION ( TRK
).OBSERVATION TIME;
 -- Compute distance traveled based on last known speed and time
difference
DEAD_RECKONING_DISTANCE := TRACK_SPEED * TIME DIFFERENCE;
-- Make a RELATIVE 1081110N vector
DEAD_RECKONING_POSITION := RELATIVE_POSITION ( MAKE POLAR VECTOR 2 (
FLOAT
 ( DEAD_RECKONING_DISTANCE ), TRACK_COURSE ) );
 -- Get TRACK's last known GLOBAL POSITION
LAST_GLOBAL_POSITION := MOST RECENT OBSERVATION ( TRK ) .POSITION;
 -- We can now find the TRACK's current position based on last
 -- GLOBAL_POSITION and the relative position from that point
 return FIND_GLOBAL_POSITION ( DEAD_RECKONING POSITION,
```

```
LAST_GLOBAL_POSITION );
end CURRENT POSITION;
.....RELATIVE_BEARING...........
function RELATIVE BEARING
 ( REFERENCE_TRACK,
TARGET_TRACK : TRACK ) return ANGLE is
REFERENCE_TRUE_COURSE : ANGLE := TRUE_COURSE ( REFERENCE_TRACK );
REFERENCE POSITION : GLOBAL POSITION := CURRENT POSITION
 ( REFERENCE TRACK );
TARGET POSITION : GLOBAL POSITION := CURRENT POSITION
 ( TARGET_TRACK );
BEARING TO TARGET : ANGLE;
REL_BEARING : ANGLE;
begin
-- Relative bearing to a target means we assume reference TRACK's
-- heading to be 000.0 ( no matter what course it is actually on ).
-- The target TRACK's relative bearing from the reference TRACK is a
-- function of the target TRACK's true bearing from the reference TRACK
-- and the reference TRACK's true course.
-- Get true bearing to the target
BEARING TO TARGET := BEARING TO ( FIND RELATIVE POSITION
          ( TARGET_POSITION, REFERENCE_POSITION ) );
-- Compute relative bearing
REL_BEARING := MATH.PI * 2.0 - REFERENCE_TRUE_COURSE +
BEARING_TO_TARGET;
-- Correct for angle > 360.0
if REL BEARING >= MATH.PI * 2.0 then
REL_BEARING := REL_BEARING - MATH.PI * 2.0;
end if;
return REL BEARING;
```

```
end RELATIVE BEARING;
.....true_bearing.....
function TRUE BEARING
( REFERENCE_TRACK,
TARGET TRACK : TRACK ) return ANGLE is
REFERENCE POSITION : GLOBAL_POSITION := CURRENT_POSITION
( REFERENCE TRACK );
TARGET POSITION : GLOBAL POSITION := CURRENT POSITION
( TARGET TRACK );
begin
return BEARING_TO ( FIND_RELATIVE_POSITION
    ( TARGET POSITION, REFERENCE POSITION ) );
end TRUE BEARING;
function MOST_RECENT_OBSERVATION
( TRK : TRACK ) return GLOBAL OBSERVATION is
begin
return TRK.TRK_OBS.GLO_OBS;
end MOST_RECENT_OBSERVATION;
.....SPEC_POINT_CATEGORY...........
function SPEC_POINT_CATEGORY
( TRK : TRACK ) return SPECIAL POINT CATEGORY is
begin
return TRK.TRACK DATA.S P TYPE.S P CAT;
end SPEC_POINT_CATEGORY;
function MAKE_GLOBAL_OBSERVATION
( OWNSHIP_TRACK : TRACK;
```

```
TARGET_TRACK : TRACK;
TGT REL POS : RELATIVE POSITION ) return GLOBAL_OBSERVATION is
GO : GLOBAL OBSERVATION;
OP : GLOBAL POSITION := CURRENT POSITION ( OWNSHIP_TRACK );
GP_1,
GP 2 : GLOBAL POSITION;
TP : TRACK_OBS_PTR := TARGET_TRACK.TRK_OBS;
CRS_1 : ANGLE;
SPD 1 : SPEED;
RP_1 : RELATIVE_POSITION;
RT : RELATIVE TIME;
begin
-- Get target TRACK's position based on reference TRACK's position
-- and the target's relative position from the reference
GP 1 := FIND GLOBAL POSITION ( TGT REL_POS, OP );
GO.POSITION := GP 1;
GO.OBSERVATION TIME := NOW;
-- In order to compute course and speed, we need at least 1 previous
-- observation with which to compare against its new observation
if TP = null then -- No previous observations
GO.COURSE_AND_SPEED := MAKE_VELOCITY ( 0.0, 0.0 );
else
GP 2 := TP.GLO OBS.POSITION;
-- Compute time difference between last observation and new one
RT := GO.OBSERVATION_TIME - TP.GLO_OBS.OBSERVATION_TIME;
-- Find the position difference between the 2 observations
RP_1 := FIND_RELATIVE_POSITION ( GP_1, GP_2 );
-- Get the new course and speed
CRS_1 := BEARING_TO ( RP_1 );
SPD_1 := RANGE_OF ( RP_1 ) / RT;
GO.COURSE_AND_SPEED := MAKE_VELOCITY ( SPD_1, CRS_1 );
```

```
end if;
return GO;
end MAKE_GLOBAL_OBSERVATION;
function REGION_CATEG
( TRK : TRACK ) return REGION_CATEGORY is
begin
if TRK\_CATEGORY ( TRK ) = REGION then
return TRK.TRACK DATA.R TYPE.REG CAT;
end if;
end REGION_CATEG;
function REGION PLCMT
( TRK : TRACK ) return REGION_PLACEMENT is
begin
if TRK_CATEGORY ( TRK ) = REGION then
return TRK.TRACK_DATA.R_TYPE.REG_PLACEMT;
end if;
end REGION_PLCMT;
function CIRCLE_RADIUS
( TRK : TRACK ) return DISTANCE is
begin
if ( TRK CATEGORY ( TRK ) = REGION ) and then
( TRK.TRACK_DATA.R_TYPE.REG_CAT = CIRCLE ) then
```

```
return TRK.TRACK_DATA.R_TYPE.RADIUS;
end if;
end CIRCLE_RADIUS;
function ABS_CIRCLE_CENTER
( TRK : TRACK ) return GLOBAL_POSITION is
begin
if ( TRK CATEGORY ( TRK ) = REGION ) and then
( REGION_CATEG ( TRK ) = CIRCLE ) and then
( REGION_PLCMT ( TRK ) = ABSOLUTE ) then
return TRK.TRACK_DATA.R_TYPE.ABS_CENTER;
end if;
end ABS_CIRCLE CENTER;
.....REL_CIRCLE_CENTER..........
function REL CIRCLE CENTER
( TRK : TRACK ) return RELATIVE POSITION is
begin
if ( TRK\_CATEGORY ( TRK ) = REGION ) and then
( REGION_CATEG ( TRK ) = CIRCLE ) and then
( REGION PLCMT ( TRK ) = RELATIVE TO TRACK ) then
return TRK.TRACK DATA.R TYPE.REL CENTER;
end if;
end REL CIRCLE CENTER;
              function PATH POINTS
( TRK : TRACK ) return WAYPOINT_ARRAY is
begin
```

```
if TRK CATEGORY ( TRK ) = PATH then
return TRK.TRACK_DATA.P_TYPE.WAYPTS;
end if;
end PATH POINTS;
......WAYPNT.....
function WAYPNT
( TRK : TRACK ) return WAYPOINT TYPE is
begin
if ( TRK_CATEGORY ( TRK ) = SPECIAL_POINT ) and then
( SPEC_POINT_CATEGORY ( TRK ) = WAYPOINT ) then
return TRK.TRACK DATA.S P TYPE.WAYPT;
end if;
end WAYPNT;
.....REL_REGION_VERTICES........
function REL_REGION_VERTICES
( TRK : TRACK ) return RELATIVE VERTEX ARRAY is
begin
if ( TRK\_CATEGORY ( TRK ) = REGION ) and then
( REGION\_CATEG ( TRK ) = POLYGON ) and then
 ( REGION_PLCMT ( TRK ) = RELATIVE_TO_TRACK ) then
return TRK.TRACK DATA.R TYPE.REL VERTICES.VERTICES;
end if;
end REL REGION VERTICES;
                ......ABS_REGION_VERTICES........
function ABS_REGION_VERTICES
( TRK : TRACK ) return ABSOLUTE_VERTEX_ARRAY is
begin
if ( TRK\_CATEGORY ( TRK ) = REGION ) and then
```

```
( REGION CATEG ( TRK ) = POLYGON ) and then
( REGION\_PLCMT ( TRK ) = ABSOLUTE ) then
return TRK.TRACK DATA.R TYPE.ABS VERTICES.VERTICES;
end if;
end ABS_REGION_VERTICES;
( TRK : TRACK ) return NATURAL is
begin
if ( TRK CATEGORY ( TRK ) = REGION ) and then
( REGION CATEG ( TRK ) = CIRCLE ) and then
( REGION PLCMT ( TRK ) = RELATIVE TO TRACK ) then
return TRK.TRACK_DATA.R TYPE.REFERENCE TRACK1;
end if;
end RELATIVE CIRCLE_REFERENCE_TRK_NUM;
function RELATIVE_CIRCLE_REFERENCE TRK POS
( TRK : TRACK ) return GLOBAL POSITION is
begin
if ( TRK_CATEGORY ( TRK ) = REGION ) and then
( REGION_CATEG ( TRK ) = CIRCLE ) and then
( REGION_PLCMT ( TRK ) = RELATIVE_TO_TRACK ) then
return TRK.TRACK_DATA.R_TYPE.REF_TRK_POSITION1;
end if;
end RELATIVE CIRCLE REFERENCE TRK POS;
 function RELATIVE_REGION_REFERENCE_TRK_NUM
( TRK : TRACK ) return NATURAL is
begin
```

```
if ( TRK CATEGORY ( TRK ) = REGION ) and then
 ( REGION\_CATEG ( TRK ) = POLYGON ) and then
 ( REGION PLCMT ( TRK ) = RELATIVE_TO_TRACK ) then
return TRK.TRACK DATA.R TYPE.REFERENCE_TRACK2;
end if:
end RELATIVE REGION REFERENCE TRK NUM;
                ...RELATIVE REGION REFERENCE TRK POS.....
function RELATIVE_REGION_REFERENCE_TRK_POS
( TRK : TRACK ) return GLOBAL POSITION is
begin
if ( TRK CATEGORY ( TRK ) = REGION ) and then
 ( REGION CATEG ( TRK ) = POLYGON ) and then
 ( REGION_PLCMT ( TRK ) = RELATIVE TO_TRACK ) then
return TRK.TRACK DATA.R TYPE.REF TRK POSITION2;
end if;
end RELATIVE REGION REFERENCE TRK POS;
procedure UPDATE_RELATIVE_CIRCLE_REFERENCE_TRK_POS
( TRK : in out TRACK;
GP : in GLOBAL POSITION ) is
begin
TRK.TRACK DATA.R TYPE.REF TRK POSITION1 := GP;
end UPDATE_RELATIVE_CIRCLE_REFERENCE_TRK_POS;
......UPDATE_RELATIVE_REGION_REFERENCE_TRK POS......
procedure UPDATE_RELATIVE_REGION_REFERENCE_TRK_POS
( TRK : in out TRACK;
GP : in GLOBAL_POSITION ) is
begin
TRK.TRACK_DATA.R TYPE.REF TRK POSITION2 := GP;
end UPDATE RELATIVE REGION REFERENCE TRK POS;
end TRACK_PKG;
```

## APPENDIX D

## **FILTER PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines abstract data type FILTER and associated
-- functions & procedures
with TRACK_PKG, DISTANCE_PKG, ABSOLUTE_TIME_PKG, DIRECT_IO;
use TRACK_PKG, DISTANCE_PKG, ABSOLUTE_TIME_PKG;
package FILTER_PKG is
 -- An ATOMIC_FILTER is based on 1 of the 3 below attributes
 type FILTER CATEGORY is
 ( DISTANCE FILTER,
 TRACK_CATEGORY_FILTER,
 PLATFORM_IDENTITY_FILTER );
 -- An ATOMIC_FILTER based on DISTANCE FILTER is further based on the
 -- attributes below
type DISTANCE ATTRIBUTE ID is
 ( RANGE FROM REFERENCE TRACK,
ALTITUDE ); -- from ownship
type RELATION ID is
```

```
( EQUAL, NOT EQUAL, LESS, LESS OR EQUAL, GREATER, GREATER OR EQUAL );
 subtype EQUALITY RELATION ID is
 RELATION_ID range EQUAL .. NOT_EQUAL;
 -- Each AND FILTER is a set of ATOMIC FILTERS
 type ATOMIC FILTER
 ( FILTER_TYPE : FILTER_CATEGORY := DISTANCE FILTER ) is private;
 -- a track passes an AND FILTER iff it passes every ATOMIC FILTER in
 -- the list.
 type AND FILTER is private;
 -- a track passes a FILTER iff it passes at least one AND FILTER in
 -- the list.
 type FILTER is private;
 -- Makes an ATOMIC FILTER based on DISTANCE attributes
 procedure MAKE_DISTANCE_ATOMIC_FILTER
 ( DAF ATTRIB ID : in DISTANCE ATTRIBUTE ID;
DAF LIMIT : in DISTANCE;
DAF_REF_TRACK : in TRACK;
 DAF RELATION : in RELATION ID;
ATOMIC FILTUR : out ATOMIC FILTER );
 -- Makes an ATOMIC_FILTER based on TRACK CATEGORY attributes
procedure MAKE TRACK CATEGORY ATOMIC FILTER
 ( TCAF_DESIRED_TRK_CAT : in TRACK_CATEGORY;
TCAF_EQ_REL_ID : in EQUALITY RELATION ID;
ATOMIC FILTUR : out ATOMIC FILTER );
 -- Makes an ATOMIC_FILTER based on IDENTITY_TYPE attributes
procedure MAKE_PLATFORM_IDENTITY_ATOMIC_FILTER
 ( PIAF DESIRED PLAT ID : in IDENTITY TYPE;
 PIAF EQ REL ID : in EQUALITY RELATION ID;
ATOMIC_FILTUR : out ATOMIC_FILTER );
 -- Once the ATOMIC FILTER is built, it is added to the current
AND FILTER
procedure ADD_ATOMIC_FILTER_TO_AND_FILTER
 ( ATOMIC_FILTUR : in ATOMIC FILTER;
```

```
AND FILTUR : in out AND FILTER );
 -- Once the AND FILTER is filled with desired ATOMIC FILTERs, it is
added to
 -- the FILTER
 procedure ADD AND FILTER TO FILTER
 ( AND FILTUR : in out AND FILTER;
 FILTUR : in out FILTER );
 -- Clears the old FILTER to make way for a new one
 procedure CLEAR FILTER
 ( F : in out FILTER );
 -- Creates a DIRECT IO file that stores all FILTERs used during the
session
 procedure CREATE_FILTER_FILE;
 -- Once a new FILTER is created, it is written to the file created in
the
 -- above procedure
 procedure WRITE FILTER
 (F: in FILTER);
 -- Compares a TRACK to the current FILTER to determine whether or not to
 -- pass it to the TACPLOT ( user display )
 function TEST FILTER
 ( F : FILTER;
 T : TRACK ) return BOOLEAN;
 -- Everything in the active database is passed to TACPLOT
 function EVERYTHING return FILTER;
 -- Retrieves all FILTERs written to DIRECT IO file and writes them to a
 -- human readable text file for historical purposes
 procedure WRITE_FILTER_ARCHIVES TO TEXT FILE;
 pragma INLINE ( MAKE DISTANCE ATOMIC FILTER,
     MAKE_TRACK CATEGORY ATOMIC FILTER,
     MAKE_PLATFORM IDENTITY ATOMIC FILTER,
     ADD_ATOMIC_FILTER_TO AND_FILTER, ADD_AND_FILTER_TO_FILTER,
     CLEAR_FILTER, WRITE_FILTER, TEST_FILTER, EVERYTHING );
```

## private

```
type ATOMIC FILTER
( FILTER TYPE : FILTER CATEGORY := DISTANCE FILTER ) is
case FILTER_TYPE is
when DISTANCE FILTER =>
D_ATTRIB_ID : DISTANCE_ATTRIBUTE_ID;
D LIMIT : DISTANCE;
REFERENCE TRACK: TRACK;
D RELATION : RELATION ID;
when TRACK CATEGORY FILTER =>
DESIRED TRK CAT : TRACK CATEGORY;
EQ REL ID1 : EQUALITY_RELATION_ID;
when PLATFORM IDENTITY_FILTER =>
DESIRED PLAT ID : IDENTITY TYPE;
EQ REL ID2 : EQUALITY RELATION ID;
end case;
end record;
-- Data structure used to link up all ATOMIC_FILTERs of an AND_FILTER
type ATOMIC FILTER NODE;
type ATOMIC FILTER PTR is access ATOMIC FILTER NODE;
type ATOMIC FILTER NODE is
record
ATM_FILTER : ATOMIC_FILTER;
NEXT ATOMIC FILTER : ATOMIC FILTER PTR;
end record;
type AND FILTER is
record
FIRST ATOMIC FILTER : ATOMIC FILTER PTR;
end record;
-- Data structure used to link up all AND FILTERs of a FILTER
type AND_FILTER_NODE;
type AND_FILTER_PTR is access AND FILTER_NODE;
type AND FILTER_NODE is
record
AND FLTR : AND FILTER;
NEXT AND FILTER : AND FILTER PTR;
```

```
end record;
type FILTER is
record
FIRST_AND_FILTER : AND_FILTER_PTR;
end record;
-- Each ATOMIC_FILTER within the FILTER is written to the DIRECT_IO file
-- in the record format below
type ATOMIC_FILTER_OUT is
record
FILTER_NUM : POSITIVE; -- Number of the FILTER that the
          -- ATOMIC FILTER belongs to
AND_FILTER_NUM : NATURAL; -- Number of the AND_FILTER that the
          -- ATOMIC FILTER belongs to
ATOMIC_FILTUR : ATOMIC_FILTER;
TIME_OUT : ABSOLUTE_TIME; -- Date & time the FILTER was written
          -- to the file
end record;
package FILTER_INOUT is new DIRECT IO ( ATOMIC FILTER OUT );
use FILTER INOUT;
end FILTER_PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
with GLOBAL_POSITION_PKG, RELATIVE POSITION PKG, UNCHECKED DEALLOCATION,
ABSOLUTE TIME PKG, RELATIVE TIME PKG, TEXT 10;
use GLOBAL_POSITION_PKG, RELATIVE_POSITION_PKG, ABSOLUTE TIME PKG,
RELATIVE TIME PKG;
```

```
......MAKE_DISTANCE_ATOMIC_FILTER.....
procedure MAKE_DISTANCE_ATOMIC_FILTER
 ( DAF ATTRIB ID : in DISTANCE ATTRIBUTE ID;
DAF LIMIT : in DISTANCE;
DAF_REF_TRACK : in TRACK;
DAF_RELATION : in RELATION_ID;
ATOMIC_FILTUR : out ATOMIC FILTER ) is
begin
ATOMIC FILTUR.D ATTRIB ID := DAF ATTRIB ID;
ATOMIC_FILTUR.D_LIMIT := DAF_LIMIT;
ATOMIC FILTUR. REFERENCE TRACK := DAF REF TRACK;
ATOMIC FILTUR.D RELATION := DAF RELATION;
end MAKE_DISTANCE_ATOMIC FILTER;
......MAKE_TRACK_CATEGORY_ATOMIC_FILTER.....
procedure MAKE_TRACK CATEGORY ATOMIC FILTER
( TCAF_DESIRED_TRK_CAT : in TRACK_CATEGORY;
TCAF_EQ_REL_ID : in EQUALITY RELATION ID;
ATOMIC_FILTUR : out ATOMIC FILTER ) is
TCAF : ATOMIC_FILTER ( TRACK_CATEGORY_FILTER );
begin
TCAF.DESIRED_TRK_CAT := TCAF_DESIRED TRK CAT;
TCAF.EQ_REL_ID1 := TCAF_EQ_REL_ID;
ATOMIC FILTUR := TCAF;
end MAKE_TRACK_CATEGORY ATOMIC FILTER;
..... MAKE_PLATFORM_IDENTITY_ATOMIC_FILTER.........
procedure MAKE_PLATFORM_IDENTITY ATOMIC FILTER
( PIAF_DESIRED_PLAT_ID : in IDENTITY TYPE;
```

package body FILTER PKG is

```
PIAF EQ REL ID : in EQUALITY RELATION ID;
ATOMIC FILTUR : out ATOMIC FILTER ) is
PIAF : ATOMIC FILTER ( PLATFORM IDENTITY FILTER );
begin
PIAF.DESIRED_PLAT ID := PIAF DESIRED PLAT ID;
PIAF.EQ REL ID2 := PIAF EQ REL ID;
ATOMIC_FILTUR := PIAF;
end MAKE PLATFORM IDENTITY ATOMIC FILTER;
.....ADD ATOMIC FILTER TO AND FILTER.....
procedure ADD_ATOMIC_FILTER_TO_AND_FILTER
( ATOMIC_FILTUR : in ATOMIC FILTER;
AND FILTUR : in out AND FILTER ) is
ATOMIC FILTUR PTR : ATOMIC FILTER PTR;
begin
ATOMIC_FILTUR PTR := new ATOMIC FILTER NODE;
ATOMIC FILTUR PTR.ATM FILTER := ATOMIC FILTUR;
-- If the newly-created ATOMIC_FILTER is the first to be added to the
 -- current AND FILTER, its position is recorded as such in the
AND FILTER.
-- All subsequent ATOMIC_FILTERs are appended to the head of the
-- AND_FILTER linked list of ATOMIC FILTERS
if AND FILTUR.FIRST ATOMIC FILTER /= null then
ATOMIC_FILTUR_PTR.NEXT_ATOMIC_FILTER := AND_FILTUR.FIRST_ATOMIC_FILTER;
end if;
AND_FILTUR.FIRST ATOMIC_FILTER := ATOMIC FILTUR PTR;
end ADD_ATOMIC_FILTER_TO_AND_FILTER;
```

```
procedure ADD_AND_FILTER_TO_FILTER
( AND FILTUR : in out AND FILTER;
FILTUR : in out FILTER ) is
AFP : AND_FILTER_PTR;
ANF : AND FILTER := AND FILTUR;
begin
AFP := new AND FILTER_NODE;
AFP.AND_FLTR := ANF;
-- If the newly-filled AND FILTER is the first to be added to the
-- current FILTER, its position is recorded as such in the FILTER.
-- All subsequent AND_FILTERs are appended to the head of the
-- FILTER linked list of AND FILTERS
if FILTUR.FIRST_AND_FILTER /= null then
AFP.NEXT_AND FILTER := FILTUR.FIRST_AND FILTER;
end if;
FILTUR.FIRST_AND_FILTER := AFP;
AND FILTUR.FIRST_ATOMIC_FILTER := null; -- Reset for new AND_FILTER
end ADD_AND_FILTER_TO_FILTER;
procedure CLEAR FILTER
(F: in out FILTER) is
procedure FREE ATOMIC_FILTER is
new UNCHECKED DEALLOCATION( ATOMIC FILTER NODE, ATOMIC FILTER PTR );
procedure FREE_AND_FILTER is
new UNCHECKED_DEALLOCATION( AND_FILTER NODE, AND_FILTER PTR );
ATFP : ATOMIC FILTER_PTR;
```

```
ANFP : AND_FILTER_PTR;
NEXT ATOMIC_PTR : ATOMIC_FILTER_PTR;
NEXT AND PTR : AND FILTER_PTR;
begin
-- Don't bother clearing an already empty FILTER
if F.FIRST AND FILTER = null then
return;
else
-- Start the clear operation at the first AND_FILTER
ANFP := F.FIRST AND FILTER;
-- Keep clearing until no more AND_FILTERs
while ANFP /= null loop
NEXT_AND_PTR := ANFP.NEXT_AND_FILTER;
 -- Get the first ATOMIC FILTER of this AND FILTER
ATFP := ANFP.AND FLTR.FIRST ATOMIC FILTER;
 -- Clear all the ATOMIC_FILTERs of this AND_FILTER
while ATFP /= null loop
NEXT ATOMIC PTR := ATFP.NEXT ATOMIC FILTER;
FREE_ATOMIC FILTER ( ATFP );
ATFP := NEXT_ATOMIC_PTR;
end loop;
-- Clear the AND_FILTER
FREE_AND_FILTER ( ANFP );
 -- Get the next AND_FILTER
ANFP := NEXT_AND PTR;
end loop;
end if;
F.FIRST_AND_FILTER := null;
```

```
procedure CREATE FILTER FILE is
FILTER_FILE : FILTER_INOUT.FILE_TYPE; -- Archive file
begin
FILTER INOUT.CREATE ( FILTER FILE, INOUT FILE, "FILTER FILE" );
FILTER_INOUT.CLOSE ( FILTER_FILE );
end CREATE_FILTER_FILE;
procedure WRITE_FILTER
(F: in FILTER) is
FILTER_FILE : FILTER_INOUT.FILE_TYPE; -- Archive file
FLTR_NUM : POSITIVE; -- Number of FILTERs in archive
F INDEX : NATURAL; -- Write index
AND FLTR NUM : NATURAL := 1; -- Number of AND FILTERS
ATOMIC_FLTR_OUT : ATOMIC_FILTER_OUT; -- Archive element structure
ATFP : ATOMIC FILTER PTR;
ANFP : AND FILTER PTR;
WRITE_TIME : ABSOLUTE_TIME := NOW; -- Time of write operation
AF_OUT : ATOMIC FILTER OUT;
begin
-- Open archive file & find end of file to determine where to write the
-- next FILTER
FILTER_INOUT.OPEN ( FILTER FILE, INOUT FILE, "FILTER FILE" );
F_INDEX := NATURAL ( FILTER INOUT.SIZE ( FILTER FILE ) ) + 1;
-- Read last FILTER in file to get its FILTER number, then add 1 to
-- new FILTER number
if FILTER_INOUT.SIZE ( FILTER_FILE ) > 0 then
FILTER_INOUT.READ ( FILTER_FILE, AF_OUT, POSITIVE COUNT
```

end CLEAR FILTER;

```
( SIZE ( FILTER_FILE ) ) );
FLTR NUM := AF OUT.FILTER NUM + 1;
else
FLTR_NUM := 1;
end if;
-- Set write index
FILTER_INOUT.SET_INDEX ( FILTER_FILE, POSITIVE_COUNT ( F_INDEX ) );
-- Get first AND FILTER
ANFP := F.FIRST_AND_FILTER;
-- Assign values to output structure
ATOMIC_FLTR_OUT.FILTER_NUM := FLTR_NUM;
ATOMIC_FLTR OUT.TIME OUT := WRITE TIME;
-- There will be no AND FILTERs if the FILTER is set to accept all
TRACKs
if ANFP = null then
ATOMIC FLTR OUT.AND FILTER NUM := 0;
FILTER INOUT. WRITE ( FILTER FILE, ATOMIC FLTR OUT,
        POSITIVE_COUNT ( F_INDEX ) );
else
-- While there are still AND FILTERs left to write
while ANFP /= null loop
  -- Assign AND FILTER number to output structure
ATOMIC FLTR OUT. AND FILTER NUM := AND FLTR NUM;
  -- Get first ATOMIC_FILTER of this AND_FILTER
ATFP := ANFP.AND FLTR.FIRST ATOMIC FILTER;
  -- While there are still ATOMIC FILTERs left to write
while ATFP /= null loop
   -- Assign ATOMIC FILTER to output structure
ATOMIC_FLTR_OUT.ATOMIC_FILTUR := ATFP.ATM_FILTER;
   -- Write output structure to archive file
FILTER_INOUT.WRITE ( FILTER FILE, ATOMIC FLTR OUT,
```

```
POSITIVE_COUNT ( F_INDEX ) );
   -- Increment write index
F INDEX := F INDEX + 1;
   -- Get next ATOMIC FILTER
ATFP := ATFP.NEXT_ATOMIC_FILTER;
end loop;
 -- Increment AND_FILTER number for next AND_FILTER
AND_FLTR_NUM := AND_FLTR_NUM + 1;
 -- Get next AND FILTER
ANFP := ANFP.NEXT AND FILTER;
end loop;
end if;
FILTER_INOUT.CLOSE ( FILTER_FILE );
end WRITE FILTER;
function TEST FILTER
( F : FILTER;
T : TRACK ) return BOOLEAN is
B : BOOLEAN := FALSE;
AF : ATOMIC_FILTER;
ATFP : ATOMIC FILTER PTR;
ANFP : AND_FILTER_PTR;
-- Tests input TRACK against one ATOMIC_FILTER and returns the result
function TEST ATOMIC FILTER
 ( ATF : ATOMIC_FILTER ) return BOOLEAN is
TGT POS : GLOBAL POSITION;
REF POS : GLOBAL POSITION;
```

```
T CATEG : TRACK CATEGORY := TRK_CATEGORY ( T );
T ID : IDENTITY TYPE;
begin
case ATF.FILTER TYPE is
 -- ATOMIC FILTER based on distance-type attributes
when DISTANCE FILTER =>
case ATF.D_ATTRIB_ID is
  -- Distance-type attribute is range from a reference TRACK
when RANGE_FROM_REFERENCE_TRACK =>
  -- Get reference & target positions
REF PO: := CURRENT POSITION ( ATF.REFERENCE TRACK );
TGT POS := CURRENT POSITION ( T );
case ATF.D RELATION is
    -- Range from reference TRACK must be equal to the input
    -- parameter value in order to pass
when EQUAL =>
if RANGE OF ( FIND RELATIVE POSITION
        ( TGT POS, REF POS ) ) = ATF.D LIMIT then
return TRUE;
else
return FALSE;
end if;
    -- Range from reference TRACK must not be equal to the input
    -- parameter value in order to pass
when NOT EQUAL =>
if RANGE OF ( FIND RELATIVE POSITION
        ( TGT_PCS, REF_POS ) ) /= ATF.D_LIMIT then
return TRUE;
else
return FALSE;
end if;
```

```
-- Range from reference TRACK must be less than the input
   -- parameter value in order to pass
when LESS =>
if RANGE OF ( FIND RELATIVE POSITION
       ( TGT POS, REF POS ) ) < ATF.D_LIMIT then
return TRUE;
else
return FALSE;
end if;
   -- Range from reference TRACK must be less than or equal to the
   -- input parameter value in order to pass
   when LESS_OR_EQUAL =>
     if RANGE OF ( FIND RELATIVE POSITION
       ( TGT POS, REF POS ) ) <= ATF.D LIMIT then
     return TRUE;
     else
     return FALSE;
     end if;
    -- Range from reference TRACK must be greater than the input
    -- parameter value in order to pass
    when GREATER =>
     if RANGE_OF ( FIND RELATIVE POSITION
       ( TGT POS, REF POS ) ) > ATF.D_LIMIT then
     return TRUE;
     else
     return FALSE;
     end if;
    -- Range from reference TRACK must be greater than or equal to
    -- the input parameter value in order to pass
    when GREATER OR EQUAL =>
     if RANGE OF ( FIND RELATIVE POSITION
       ( TGT_POS, REF_POS ) ) >= ATF.D_LIMIT then
     return TRUE;
     else
     return FALSE;
     end if;
end case;
```

```
-- Distance-type attribute is altitude
when ALTITUDE =>
  -- Since altitude applies only to aircraft, others will fail this
  -- test
if TRK_CATEGORY ( T ) /= AIR_PLATFORM then
return FALSE;
end if;
case ATF.D RELATION is
   -- Altitude must be equal to the input parameter value in order
    -- to pass
when EQUAL =>
if ALTITUDE ( T ) = ATF.D_LIMIT then
return TRUE;
else
return FALSE;
end if;
    -- Altitude must not be equal to the input parameter value in
   -- order to pass
   when NOT EQUAL ≈>
    if ALTITUDE ( T ) /= ATF.D LIMIT then
    return TRUE;
    else
    return FALSE;
    end if:
    -- Altitude must be less than the input parameter value in order
    -- to pass
    when LESS =>
    if ALTITUDE ( T ) < ATF.D LIMIT then
    return TRUE;
    else
    return FALSE;
    end if;
    -- Altitude must be less than or equal to the input parameter
    -- value in order to pass
```

```
when LESS_OR_EQUAL =>
    if ALTITUDE ( T ) <= ATF.D_LIMIT then
    return TRUE;
    else
    return FALSE;
    end if;
    -- Altitude must be greater than the input parameter value in
   -- order to pass
   when GREATER =>
    if ALTITUDE ( T ) > ATF.D_LIMIT then
    return TRUE;
    else
    return FALSE;
    end if;
   -- Altitude must be greater than or equal to the input parameter
    -- value in order to pass
   when GREATER OR EQUAL =>
    if ALTITUDE ( T ) >= ATF.D_LIMIT then
    return TRUE;
    else
    return FALSE;
    end if;
end case;
  end case;
  -- ATOMIC_FILTER based on category-type attributes
when TRACK_CATEGORY_FILTER =>
case ATF.EQ_REL_ID1 is
  -- TRACK_CATEGORY must be equal to the input parameter value in
  -- order to pass
when EQUAL =>
if T_CATEG = ATF.DESIRED_TRK_CAT then
return TRUE;
else
return FALSE;
```

```
end if;
  -- TRACK CATEGORY must not be equal to the input parameter value
  -- in order to pass
  when NOT EQUAL =>
  if T_CATEG /= ATF.DESIRED_TRK_CAT then
  return TRUE;
  else
  return FALSE;
  end if;
end case;
  -- ATOMIC FILTER based on category-type attributes
  when PLATFORM_IDENTITY FILTER =>
  -- IDENTITY applies only to platforms below
if ( T_CATEG = SURFACE_PLATFORM ) OR
  ( T CATEG = SUBSURFACE PLATFORM ) OR
  ( T_CATEG = AIR PLATFORM ) then
T_ID := TRACK_IDENTITY ( T );
  case ATF.EQ REL ID2 is
  -- IDENTITY_TYPE must be equal to the input parameter value
  -- in order to pass
  when EQUAL =>
     if T_ID = ATF.DESIRED_PLAT_ID then
    return TRUE;
     else
     return FALSE;
     end if;
  -- IDENTITY TYPE must not be equal to the input parameter value
  -- in order to pass
  when NOT EQUAL =>
     if T ID /= ATF.DESIRED PLAT ID then
     return TRUE;
     else
     return FALSE;
```

```
end if;
  end case;
  else -- Non-applicable TRACK types
  -- Since IDENTITY doesn't apply to other TRACKs, if the
  -- ATOMIC_FILTER requires an equality relation to an IDENTITY
  -- it must always fail. Likewise, a non-equal parameter must
  -- always succeed.
if ATF.EQ_REL_ID2 = EQUAL then
return FALSE;
else
return TRUE;
end if;
  end if;
end case;
end TEST_ATOMIC_FILTER;
begin -- TEST_FILTER
-- All TRACKs pass an 'EVERYTHING' FILTER
if F = EVERYTHING then
return TRUE;
else
-- Get first AND FILTER
ANFP := F.FIRST_AND_FILTER;
-- Test all AND_FILTERs ( if necessary )
while ANFP /= null loop
 -- Get first ATOMIC_FILTER of this AND_FILTER
ATFP := ANFP.AND_FLTR.FIRST_ATOMIC FILTER;
 -- Test all ATOMIC_FILTERs of this AND_FILTER ( if necessary )
while ATFP /= null loop
```

```
AF := ATFP.ATM FILTER;
  -- Test the TRACK against this ATOMIC_FILTER
B := TEST ATOMIC_FILTER ( AF );
  -- A failure of one ATOMIC_FILTER in an AND_FILTER constitutes a
  -- failure of the entire AND FILTER, so move on to the next
  -- AND FILTER
if B = FALSE then
exit;
end if;
  -- Get next ATOMIC_FILTER ( previous one passed )
ATFP := ATFP.NEXT_ATOMIC_FILTER;
end loop;
 -- If the TRACK passed all ATOMIC FILTERs of the previous AND FILTER,
 -- no need to continue. It passes the FILTER.
if B = TRUE then
return B;
end if;
-- TRACK did not pass the previous AND_FILTER, so get the next one.
ANFP := ANFP.NEXT_AND_FILTER;
end loop;
end if;
return B;
end TEST_FILTER;
.....EVERYTHING.....
function EVERYTHING return FILTER is
F : FILTER;
begin
```

```
return F;
end EVERYTHING;
procedure WRITE_FILTER_ARCHIVES_TO_TEXT_FILE is
AF : ATOMIC FILTER;
FC : FILTER_CATEGORY;
TC : TRACK CATEGORY;
PID : IDENTITY TYPE;
RID : RELATION_ID;
   : EQUALITY RELATION ID;
FILTER_FILE : FILTER_INOUT.FILE_TYPE; -- Archive file
FILTER_HIS_FILE : TEXT_IO.FILE_TYPE;-- Text file of all FILTERs
FLTR_NUM : POSITIVE; -- FILTER number in file
F_INDEX : NATURAL;
AND FLTR NUM : NATURAL; -- AND FILTER number in FILTER
ATOMIC_FLTR_OUT : ATOMIC_FILTER_OUT;
WRITE_TIME : ABSOLUTE TIME; -- Time FILTER archived
FINISHED : BOOLEAN := FALSE; -- Flags when no more FILTERs
DASHES : STRING ( 1.. 80 ) := ( others \Rightarrow '=' );
-- Writes time of archive to text file
procedure PRINT TIME OUT is
Y, M, D : NATURAL;
S : FLOAT;
begin
Y := YEAR ( WRITE_TIME );
M := MONTH ( WRITE TIME );
D := DAY ( WRITE TIME );
S := TIME_OF DAY ( WRITE TIME );
TEXT IO.PUT ( FILTER HIS FILE, NATURAL'IMAGE ( M ) );
TEXT [IO.PUT ( FILTER HIS FILE, "/" );
TEXT IO.PUT ( FILTER HIS FILE, NATURAL'IMAGE ( D ) );
TEXT_IO.PUT ( FILTER HIS FILE, "/" );
```

```
TEXT IO.PUT (FILTER HIS FILE, NATURAL'IMAGE (Y - 1900));
TEXT IO.PUT ( FILTER HIS FILE, " " );
 TEXT IO.PUT ( FILTER HIS FILE, NATURAL' IMAGE
      ( HOURS ( TIME OF DAY ( WRITE_TIME ) ) ));
TEXT IO.PUT ( FILTER HIS FILE, ':');
 TEXT_IO.PUT ( FILTER_HIS_FILE, NATURAL'IMAGE
      ( MINUTES ( TIME OF DAY ( WRITE TIME ) ) );
TEXT_IO.PUT ( FILTER HIS FILE, ':' );
 TEXT IO.PUT ( FILTER HIS FILE, NATURAL' IMAGE
      ( NATURAL ( SECONDS ( TIME OF DAY ( WRITE TIME ) ) ) );
end PRINT TIME OUT;
begin -- WRITE FILTER ARCHIVES TO TEXT FILE
 -- Open archive & create text files
FILTER_INOUT.OPEN ( FILTER FILE, INOUT FILE, "FILTER FILE" );
 TEXT IO.CREATE ( FILTER HIS FILE, NAME => "FILTER.HIS" );
 -- Read in first archived FILTER
FILTER INOUT.READ ( FILTER FILE, ATOMIC FLTR OUT );
 -- Read in all archived FILTERs and convert them to human-readable
format
-- for output to text file
while NOT FINISHED loop
FLTR NUM := ATOMIC FLTR OUT.FILTER NUM;
WRITE_TIME := ATOMIC_FLTR_OUT.TIME_OUT;
TEXT IO.PUT ( FILTER HIS FILE, "FILTER NUMBER :" );
TEXT_IO.PUT ( FILTER HIS FILE, POSITIVE' IMAGE ( FLTR NUM ) );
TEXT_IO.SET_COL ( FILTER HIS FILE, 35 );
PRINT TIME OUT;
TEXT IO.NEW LINE (FILTER HIS FILE, 2);
while ( FLTR NUM = ATOMIC FLTR OUT.FILTER NUM ) AND ( NOT FINISHED )
AND_FLTR_NUM := ATOMIC FLTR OUT.AND FILTER NUM;
if AND FLTR NUM = 0 then
TEXT_IO.PUT_LINE ( FILTER_HIS_FILE, " ALL TRACKS ACCEPTED" );
TEXT_IO.NEW_LINE ( FILTER HIS FILE );
```

```
if NOT FILTER INOUT. END OF FILE (FILTER FILE) then
FILTER_INOUT.READ ( FILTER_FILE, ATOMIC_FLTR_OUT );
else
FINISHED := TRUE;
end if;
else
TEXT_IO.PUT ( FILTER_HIS_FILE, " AND_FILTER NUMBER :" );
TEXT_IO.PUT ( FILTER_HIS_FILE, POSITIVE' IMAGE ( AND_FLTR_NUM ) );
TEXT IO.NEW LINE ( FILTER HIS FILE );
while ( AND_FLTR_NUM = ATOMIC_FLTR_OUT.AND_FILTER_NUM ) AND
  ( NOT FINISHED ) loop
AF := ATOMIC_FLTR_OUT.ATOMIC_FILTUR;
FC := AF.FILTER_TYPE;
TEXT_IO.SET_COL ( FILTER_HIS_FILE, 7 );
case FC is
when DISTANCE FILTER =>
RID := AF.D RELATION;
if AF.D_ATTRIB_ID = RANGE_FROM_REFERENCE_TRACK then
TEXT_IO.PUT ( FILTER_HIS_FILE, "RANGE FROM REFERENCE TRACK" );
TEXT IO.PUT ( FILTER HIS FILE, NATURAL'IMAGE
( TRACK_ID_NUMBER ( AF.REFERENCE_TRACK ) ) );
TEXT IO.PUT ( FILTER HIS FILE, "ALTITUDE" );
end if;
case RID is
when EQUAL =>
TEXT_IO.PUT ( FILTER_HIS_FILE, " =" );
when NOT EQUAL =>
TEXT_IO.PUT ( FILTER_HIS_FILE, " <>" );
when LESS =>
TEXT IO.PUT ( FILTER HIS FILE, " <" );
when LESS_OR_EQUAL =>
TEXT_IO.PUT ( FILTER_HIS_FILE, " <=" );</pre>
when GREATER =>
TEXT_IO.PUT ( FILTER_HIS_FILE, " >" );
```

```
when GREATER OR EQUAL =>
TEXT_IO.PUT ( FILTER_HIS_FILE, " >=" );
end case;
TEXT_IO.PUT ( FILTER_HIS_FILE, NATURAL' IMAGE ( NATURAL
       ( AF.D LIMIT ) ) );
TEXT_IO.PUT_LINE ( FILTER_HIS_FILE, " yards" );
when TRACK CATEGORY FILTER =>
TC := AF.DESIRED_TRK_CAT;
EQ := AF.EQ REL ID1;
TEXT IO.PUT ( FILTER HIS FILE, "TRACK CATEGORY" );
case EQ is
when EQUAL =>
TEXT_IO.PUT ( FILTER_HIS_FILE, " = " );
when NOT EQUAL =>
TEXT IO.PUT ( FILTER HIS_FILE, " <> " );
end case;
case TC is
when TRACK PKG.UNKNOWN =>
TEXT IO.PUT ( FILTER HIS FILE, "UNKNOWN" );
when SURFACE PLATFORM =>
TEXT_IO.PUT ( FILTER_HIS_FILE, "SURFACE_PLATFORM" );
when SUBSURFACE PLATFORM =>
TEXT IO.PUT ( FILTER HIS FILE, "SUBSURFACE PLATFORM" );
when AIR PLATFORM =>
TEXT [IO.PUT ( FILTER HIS_FILE, "AIR PLATFORM" );
when REGION =>
TEXT IO.PUT ( FILTER HIS FILE, "REGION" );
when SPECIAL_POINT =>
TEXT IO.PUT ( FILTER HIS FILE, "SPECIAL POINT" );
when PATH =>
TEXT_IO.PUT ( FILTER_HIS_FILE, "PATH" );
when MAN_IN_WATER =>
TEXT_IO.PUT ( FILTER_HIS_FILE, "MAN IN_WATER" );
when NON DISPLAYABLE =>
TEXT IO.PUT ( FILTER HIS FILE, "NON DISPLAYABLE" );
end case;
```

```
TEXT_IO.NEW_LINE ( FILTER_HIS_FILE );
when PLATFORM IDENTITY FILTER =>
PID := AF.DESIRED_PLAT_ID;
EQ := AF.EQ REL ID2;
TEXT IO.PUT ( FILTER HIS FILE, "PLATFORM IDENTITY" );
case EQ is
when EQUAL =>
TEXT_IO.PUT ( FILTER_HIS_FILE, " = " );
when NOT_EQUAL =>
TEXT IO.PUT ( FILTER HIS FILE, " <> " );
end case;
case PID is
when TRACK PKG.UNKNOWN =>
TEXT IO.PUT ( FILTER_HIS_FILE, "UNKNOWN" );
when FRIENDLY =>
TEXT IO.PUT ( FILTER HIS FILE, "FRIENDLY" );
when HOSTILE =>
TEXT IO.PUT ( FILTER HIS FILE, "HOSTILE" );
when NEUTRAL =>
TEXT_IO.PUT ( FILTER HIS_FILE, "NEUTRAL" );
end case;
TEXT_IO.NEW_LINE ( FILTER_HIS_FILE );
end case;
if NOT FILTER_INOUT.END_OF_FILE ( FILTER_FILE ) then
FILTER_INOUT.READ ( FILTER FILE, ATOMIC FLTR OUT );
else
FINISHED := TRUE;
end if;
end loop;
TEXT_IO.NEW_LINE ( FILTER_HIS_FILE );
end if;
```

#### APPENDIX E

#### **CPA PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Sefines data type CPA TYPE and associated function
with VECTOR 2 PKG, ABSOLUTE TIME PKG, TRACK PKG;
use VECTOR 2 PKG, ABSOLUTE TIME PKG, TRACK PKG;
package CPA PKG is
type CPA TYPE is
record
CPA_BEARING_AND_RANGE : VECTOR_2; -- Bearing & range to target from
          -- reference at CPA
 TIME_OF CPA : ABSOLUTE TIME; -- Time when CPA occurs
end record;
-- Finds Closest Point of Approach of target track to the reference
track
 function FIND CPA
 ( TARGET_TRK, REFERENCE_TRACK : TRACK ) return CPA_TYPE;
pragma INLINE ( FIND CPA );
end CPA PKG;
```

```
with ANGLE PKG, SPEED_PKG, DISTANCE_PKG, GLOBAL_POSITION_PKG,
RELATIVE_TIME_PKG,
 VELOCITY PKG, RELATIVE POSITION PKG, MATH;
use ANGLE_PKG, SPEED_PKG, DISTANCE_PKG, GLOBAL_POSITION_PKG,
RELATIVE_TIME_PKG,
 VELOCITY PKG, RELATIVE POSITION PKG;
package body CPA PKG is
 function FIND_CPA
 ( TARGET TRK, REFERENCE TRACK : TRACK ) return CPA TYPE is
 CPA_TO_TARGET : CPA TYPE;
 TGT BEARING : ANGLE; -- true brg to target
 TGT_RANGE : DISTANCE; -- range to target (yds)
 TGT_REL_SPEED : SPEED; -- rel spd of target
 TGT_REL_COURSE : ANGLE; -- rel crs of target
 PERPENDICULAR_1, -- perp of tgt rel crs
 PERPENDICULAR 2 : ANGLE; -- perp of tgt rel crs
 P1 DIFF, -- diff bet tgt rel crs
 P2 DIFF : ANGLE; -- & the perpendiculars
 CPA_BEARING : ANGLE; -- bearing to target at cpa
 CPA RANGE : DISTANCE; -- range to target at cpa
 CPA_TIME : RELATIVE TIME; -- time in secs to cpa
 ALPHA: ANGLE; -- angle bet bearing to
            -- tgt & bearing to cpa
 BRAVO : ANGLE; -- angle bet bearing to
            -- tgt & tgt rel crs
 REL_VELOCITY : VELOCITY;
 LAST_TGT_POSITION,
 LAST_REF_POSITION,
 OPENING POS TGT,
 OPENING_POS_REF : GLOBAL POSITION;
 OPENING_RG : DISTANCE;
 OBS_TIME : ABSOLUTE TIME := NOW;
```

begin

```
-- Get current positions of target & reference tracks
LAST REF POSITION := CURRENT POSITION ( REFERENCE TRACK );
LAST TGT POSITION := CURRENT POSITION ( TARGET_TRK );
-- Find present bearing & range to target
TGT BEARING := BEARING TO ( FIND RELATIVE_POSITION
      ( LAST TGT POSITION, LAST REF POSITION ) );
TGT_RANGE := RANGE_OF ( FIND_RELATIVE_POSITION
        ( LAST TGT POSITION, LAST_REF_POSITION ));
-- Get target's relative course & speed
REL_VELOCITY := TARGET_RELATIVE_VELOCITY ( REFERENCE_TRACK, TARGET_TRK
TGT REL COURSE := COURSE ( REL VELOCITY );
TGT REL SPEED := SPD ( REL VELOCITY );
-- Get target's & reference's position again to determine if they
-- are opening one another
OPENING POS REF := CURRENT POSITION ( REFERENCE_TRACK );
OPENING POS TGT := CURRENT POSITION ( TARGET_TRK );
OPENING RG := RANGE OF ( FIND RELATIVE POSITION
        ( OPENING POS TGT, OPENING POS REF ) );
 -- If target & reference are opening or if the target has no relative
speed,
-- no CPA possible
 if ( OPENING RG > TGT RANGE ) or ( TGT REL SPEED = 0.0 ) then
 CPA_BEARING := TGT_BEARING;
 CPA RANGE := TGT RANGE;
 CPA TIME := 0.0;
 else
 -- The bearing to the target at cpa will be 90 degrees +/- the target's
 -- relative course. The problem is finding out which one applies. To
 -- determine the correct one, computations are made on both
perpendiculars
 -- The perpendicular closest to the target's bearing is the cpa bearing.
 -- Subtract 90 degrees from target's relative course to get perpl
 PERPENDICULAR 1 := TGT REL COURSE - MATH.PI / 2.0;
```

```
-- If target's relative course < 270, add 90 degrees to get perp2,
-- otherwise subtract 90 degrees
if TGT REL COURSE < MATH.PI * 3.0 / 2.0 then
PERPENDICULAR_2 := TGT_REL_COURSE + MATH.PI / 2.0;
PERPENDICULAR 2 := PERPENDICULAR 1 - MATH.PI;
end if;
-- If computed perpl is negative, add 360 degrees to correct
if PERPENDICULAR 1 < 0.0 then
PERPENDICULAR_1 := MATH.PI * 2.0 + PERPENDICULAR_1;
end if;
-- If computed perp2 is negative, add 360 degrees to correct
if PERPENDICULAR_2 < 0.0 then
PERPENDICULAR_2 := MATH.PI * 2.0 + PERPENDICULAR_2;
end if;
-- Compute absolute difference between target's bearing & perpl
P1 DIFF := ABS ( TGT BEARING - PERPENDICULAR 1 );
-- If difference is > 180 degrees in one direction, it is < 180 in
-- the other direction, so choose the shortest one
if P1 DIFF > MATH.PI then
P1_DIFF := MATH.PI * 2.0 - P1 DIFF;
end if;
-- Compute absolute difference between target's bearing & perp2
P2_DIFF := ABS ( TGT_BEARING - PERPENDICULAR_2 );
-- If difference is > 180 degrees in one direction, it is < 180 in
-- the other direction, so choose the shortest one
if P2 DIFF > MATH.PI then
P2_DIFF := MATH.PI * 2.0 - P2_DIFF;
end if;
-- The smallest difference determines the correct perpendicular to use
-- as cpa bearing
if P1 DIFF < P2 DIFF then
CPA BEARING := PERPENDICULAR 1;
```

```
elsif P1_DIFF > P2_DIFF then
CPA_BEARING := PERPENDICULAR_2;
else
-- ** CBDR ** ( Constant Bearing, Decreasing Range ) Crash coming!
CPA BEARING := TGT BEARING;
end if;
-- Need to find angle between cpa bearing and target's current bearing
-- so we can compute the distance from target's current position and
-- its position at cpa
ALPHA := ABS ( CPA_BEARING - TGT_BEARING );
-- If the angle is > 180 degrees in one direction, it is < 180 in
-- the other direction, so choose the shortest one
if ALPHA > MATH.PI then
ALPHA := MATH.PI * 2.0 - ALPHA;
end if;
-- The angle between the target's relative course and its bearing at cpa
-- is 90 degrees. We just computed a second angle ( ALPHA ) of the
-- triangle, so the remaining angle of the triangle is 90 degrees minus
-- ALPHA. This angle ( BRAVO ) gives us the angle between the target's
-- relative course and the true bearing to the target.
BRAVO := MATH.PI / 2.0 - ALPHA;
-- Compute range to target at cpa and time of cpa
if ALPHA = 0.0 then -- ** CBDR **
CPA_TIME := TGT_RANGE / TGT_REL SPEED;
CPA RANGE := 0.0;
else
CPA RANGE := TGT RANGE * DISTANCE ( SIN ( BRAVO ) );
-- Pythagorean Theorem used
CPA_TIME := SQRT ( TGT_RANGE * TGT_RANGE - CPA RANGE * CPA RANGE ) /
       TGT REL SPEED;
end if;
end if;
CPA_TO_TARGET.CPA_BEARING_AND_RANGE := MAKE POLAR VECTOR 2
( CPA_RANGE, CPA_BEARING );
```

```
CPA_TO_TARGET.TIME_OF_CPA := CPA_TIME + OBS_TIME;
return CPA_TO_TARGET;
end FIND_CPA;
end CPA_PKG;
```

### **APPENDIX F**

#### **VELOCITY PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines data subtype VELOCITY and associated functions
with VECTOR 2 PKG, SPEED PKG, ANGLE PKG;
use VECTOR 2 PKG, SPEED PKG, ANGLE PKG;
package VELOCITY PKG is
 subtype VELOCITY is VECTOR 2; -- Course and speed vector
 -- Returns course & speed vector, given course & speed values
 function MAKE VELOCITY
 ( SPD : SPEED;
 COURSE: ANGLE) return VELOCITY renames
VECTOR_2_PKG.MAKE_POLAR_VECTOR_2;
 -- Returns course attribute of a velocity vector
 function COURSE
 ( V : VELOCITY ) return ANGLE renames VECTOR_2_PKG.DIRECTION;
 -- Returns speed attribute of a velocity vector
 function SPD
```

```
( V : VELOCITY ) return SPEED renames VECTOR_2_PKG.LENGTH;
pragma INLINE ( MAKE_VELOCITY, COURSE, SPD );
end VELOCITY_PKG;
```

## **APPENDIX G**

#### **VECTOR 2 PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines abstract data type VECTOR_2 and associated
functions
with ANGLE PKG, MATH;
use ANGLE PKG;
package VECTOR_2_PKG is
type VECTOR_2 is private;
function SQRT (F: FLOAT) return FLOAT renames MATH.SQRT;
-- Returns a vector, given a length and an angle in radians
 function MAKE_POLAR_VECTOR_2
 ( LENGTH : FLOAT;
DIRECTION: ANGLE) return VECTOR 2;
-- Returns the length attribute of a given VECTOR_2
 function LENGTH
 ( V : VECTOR_2 ) return FLOAT;
```

```
-- Returns the angle attribute of a given VECTOR 2
function DIRECTION
( V : VECTOR_2 ) return ANGLE;
-- Returns a vector, given its end point in terms of X & Y coordinates
function MAKE_CARTESIAN_VECTOR_2
( X, Y : FLOAT ) return VECTOR 2;
-- Returns the X-coordinate of a vector
function X_COORDINATE
( V : VECTOR 2 ) return FLOAT;
-- Returns the Y-coordinate of a vector
function Y COORDINATE
( V : VECTOR_2 ) return FLOAT;
-- Returns the resultant sum of 2 vectors
function "+"
( V1, V2 : VECTOR 2 ) return VECTOR 2;
-- Returns the resultant difference of 2 vectors
function "-"
( V1, V2 : VECTOR 2 ) return VECTOR 2;
-- Returns the resultant dot product of 2 vectors
function DOT PRODUCT
( V1, V2 : VECTOR 2 ) return FLOAT;
-- Returns the resultant product of a vector and a scale factor
function "+"
( V : VECTOR 2;
SCALE_FACTOR : FLOAT ) return VECTOR 2;
-- Returns a vector rotated about a given angle
function ROTATE
( V : VECTOR 2;
A : ANGLE ) return VECTOR_2;
-- Returns a normalized vector
function NORMALIZE
( V : VECTOR 2 ) return VECTOR 2;
```

```
pragma INLINE
( MAKE_POLAR_VECTOR_2, LENGTH, DIRECTION, MAKE_CARTESIAN_VECTOR_2,
X_COORDINATE, Y_COORDINATE, "+", "-", DOT_PRODUCT, ROTATE, NORMALIZE );
private
type VECTOR_2 is
record
X, Y : FLOAT;
end record;
ZERO : constant VECTOR_2 := ( 0.0, 0.0 );
end VECTOR 2 PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
package body VECTOR_2_PKG is
function MAKE_FOLAR_VECTOR 2
( LENGTH : FLOAT;
DIRECTION: ANGLE) return VECTOR 2 is
V : VECTOR 2;
begin
V.X := LENGTH * SIN ( DIRECTION );
V.Y := LENGTH * COS ( DIRECTION );
return V;
```

```
end MAKE POLAR VECTOR 2;
LENGTH.....
function LENGTH
( V : VECTOR_2 ) return FLOAT is
begin
return SQRT ( V.X * V.X + V.Y * V.Y );
end LENGTH;
.....DIRECTION....
function DIRECTION
( V : VECTOR_2 ) return ANGLE is
X, Y : FLOAT;
A : ANGLE;
begin
X := V.X;
Y := V.Y;
if X = 0.0 then
if Y >= 0.0 then
return DEGREES TO RADIANS ( 0.0 );
return DEGREES_TO_RADIANS ( 180.0 );
end if;
elsif Y / X < 0.0 then -- Either X or Y is negative
if Y < 0.0 then -- Y is negative
return DEGREES_TO_RADIANS ( 90.0 ) - ARCTAN ( Y \neq X );
else -- X is negative
return DEGREES_TO_RADIANS ( 270.0 ) - ARCTAN ( Y / X );
end if;
```

```
else
if X < 0.0 then -- X and Y are both negative
return DEGREES_TO_RADIANS ( 270.0 ) - ARCTAN ( Y / X );
else -- X and Y are both positive ( Y could be 0.0 )
return DEGREES_TC_RADIANS ( 90.0 ) - ARCTAN ( Y / X );
end if;
end if;
end DIRECTION;
.....MAKE_CARTESIAN_VECTOR_2.....
function MAKE CARTESIAN VECTOR 2
( X, Y : FLOAT ) return VECTOR_2 is
V : VECTOR 2;
begin
V.X := X;
V.Y := Y;
return V;
end MAKE_CARTESIAN_VECTOR_2;
.....X_COORDINATE.....
function X COORDINATE
( V : VECTOR_2 ) return FLOAT is
begin
return V.X;
end X_COORDINATE;
.....Y_COORDINATE.....
function Y_COORDINATE
( V : VECTOR 2 ) return FLOAT is
begin
```

```
return V.Y;
end Y COORDINATE;
function "+"
( V1, V2 : VECTOR_2 ) return VECTOR_2 is
V : VECTOR 2;
begin
V.X := V1.X + V2.X;
V.Y := V1.Y + V2.Y;
return V;
end "+";
 function "-"
( V1, V2 : VECTOR 2 ) return VECTOR 2 is
V : VECTOR 2;
begin
V.X := V1.X - V2.X;
V.Y := V1.Y - V2.Y;
return V;
end "-";
......DOT_PRODUCT.....
function DOT PRODUCT
( V1, V2 : VECTOR_2 ) return FLOAT is
begin
return V1.X * V2.X + V1.Y * V2.Y;
end DOT_PRODUCT;
```

```
function "*"
( V : VECTOR_2;
SCALE FACTOR: FLOAT) return VECTOR 2 is
V2 : VECTOR 2;
begin
-- Length ( result ) = length ( v ) * scale_factor
-- Direction ( result ) = direction ( v )
V2.X := V.X * SCALE_FACTOR;
V2.Y := V.Y * SCALE_FACTOR;
return V2;
end "*";
.....ROTATE.....
function ROTATE
( V : VECTOR 2;
A : ANGLE ) return VECTOR 2 is
D : ANGLE;
V2 : VECTOR 2;
begin
-- Direction ( result ) = direction ( v ) + a
-- Length ( result ) = length ( v )
D := DIRECTION (V) + A;
V2.X := LENGTH (V) * SIN (D);
V2.Y := LENGTH (V) * COS (D);
return V2;
end ROTATE;
```

```
function NORMALIZE
( V : VECTOR_2 ) return VECTOR_2 is

D : ANGLE;
V2 : VECTOR_2;

begin

-- Direction ( result ) = direction ( v )
-- Length ( result ) = 1.0

D := DIRECTION ( V );
V2.X := COS ( D );
V2.Y := SIN ( D );
return V2;
end NORMALIZE;
--
end VECTOR_2_PKG;
```

## **APPENDIX H**

#### **VECTOR 3 PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines abstract data type VECTOR 3 and associated
functions
with ANGLE PKG, MATH;
use ANGLE PKG;
package VECTOR 3 PKG is
type VECTOR_3 is private;
function SQRT ( F : FLOAT ) return FLOAT renames MATH.SQRT;
-- Returns a vector, given a length, an angle in radians, and an azimuth
-- in radians
function MAKE_POLAR_VECTOR_3
 ( LENGTH : FLOAT;
THETA : ANGLE;
PHI : AZIMUTH ) return VECTOR_3;
-- Returns the length attribute of a given VECTOR 2
 function LENGTH
```

```
( V : VECTOR_3 ) return FLOAT;
 function THETA
 ( V : VECTOR 3 ) return ANGLE;
 function PHI
 ( V : VECTOR 3 ) return AZIMUTH;
 -- Returns a vector, given its end point in terms of X, Y, & Z
coordinates
 function MAKE_CARTESIAN_VECTOR_3
 ( X, Y, Z : FLOAT ) return VECTOR_3;
 -- Returns the X-coordinate of a vector
 function X_COORDINATE
 ( V : VECTOR_3 ) return FLOAT;
 -- Returns the Y-coordinate of a vector
 function Y_COORDINATE
 ( V : VECTOR 3 ) return FLOAT;
 -- Returns the Z-coordinate of a vector
 function Z_COORDINATE
 ( V : VECTOR_3 ) return FLOAT;
 -- Returns the resultant sum of 2 vectors
 function "+"
 ( V1, V2 : VECTOR_3 ) return VECTOR_3;
 -- Returns the resultant difference of 2 vectors
 function "-"
 ( V1, V2 : VECTOR_3 ) return VECTOR 3;
 -- Returns the resultant dot product of 2 vectors
 function DOT PRODUCT
 ( V1, V2 : VECTOR_3 ) return FLOAT;
 function CROSS PRODUCT
 ( V1, V2 : VECTOR_3 ) return VECTOR 3;
 -- Length ( result ) = length ( v ) * scale_factor
```

```
function SCALE
 ( V : VECTOR_3;
SCALE_FACTOR : FLOAT ) return VECTOR_3;
-- Returns a normalized vector
-- length ( result ) = 1.0
function NORMALIZE
 ( V : VECTOR_3 ) return VECTOR_3;
pragma INLINE ( MAKE_POLAR_VECTOR_3, LENGTH, THETA, PHI,
    MAKE CARTESIAN VECTOR 3, X COORDINATE, Y COORDINATE,
    Z COORDINATE, "+", "-", DOT PRODUCT, CROSS PRODUCT, SCALE,
    NORMALIZE );
private
type VECTOR_3 is
record
X, Y, Z : FLOAT;
end record;
ZERO : constant VECTOR_3 := ( 0.0, 0.0, 0.0 );
end VECTOR 3 PKG;
----
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
******
package body VECTOR 3 PKG is-
function MAKE_POLAR_VECTOR_3
( LENGTH : FLOAT;
THETA : ANGLE;
```

```
PHI: AZIMUTH) return VECTOR 3 is
V : VECTOR 3;
R : FLOAT;
begin
R := LENGTH * COS ( PHI );
V.X := R * COS ( THETA );
V.Y := R * SIN ( THETA );
V.Z := LENGTH * SIN ( PHI );
return V;
end MAKE_POLAR_VECTOR_3;
LENGTH.....
function LENGTH
( V : VECTOR_3 ) return FLOAT is
R : FLOAT;
begin
R := SQRT ( V.X * V.X + V.Y * V.Y );
return SQRT ( R * R + V.Z * V.Z );
end LENGTH;
.....THETA.....
function THETA
( V : VECTOR 3 ) return ANGLE is
begin
return ARCTAN ( V.Y / V.X );
end THETA;
-....PHI....
function PHI
( V : VECTOR_3 ) return AZIMUTH is
R : FLOAT;
```

```
begin
R := SQRT ( V.X * V.X + V.Y * V.Y );
return AZIMUTH ( ARCTAN ( V.Z / R ) );
end PHI;
function MAKE_CARTESIAN_VECTOR_3
( X, Y, Z : FLOAT ) return VECTOR_3 is
V : VECTOR_3;
begin
V.X := X;
V.Y := Y;
V.Z := Z;
return V;
end MAKE_CARTESIAN_VECTOR_3;
.....X_COORDINATE.....
function X COORDINATE
( V : VECTOR_3 ) return FLOAT is
begin
return V.X;
end X_COORDINATE;
.....Y_COORDINATE.....
function Y_COORDINATE
( V : VECTOR_3 ) return FLOAT is
begin
return V.Y;
end Y_COORDINATE;
```

```
.....z_COORDINATE.....
function Z COORDINATE
( V : VECTOR_3 ) return FLOAT is
begin
return V.Z;
end Z_COORDINATE;
function "+"
( V1, V2 : VECTOR_3 ) return VECTOR_3 is
V : VECTOR 3;
begin
V.X := Vi.X + V2.X;
V.Y := V1.Y + V2.Y;
V.Z := V1.Z + V2.Z;
return V;
end "+";
function "-"
( V1, V2 : VECTOR_3 ) return VECTOR_3 is
V : VECTOR 3;
begin
V.X := V1.X - V2.X;
V.Y := V1.Y - V2.Y;
V.Z := V1.Z - V2.Z;
return V;
end "-";
```

```
.....DOT_PRODUCT.....
function DOT PRODUCT
( V1, V2 : VECTOR_3 ) return FLOAT is
begin
return V1.X * V2.X + V1.Y * V2.Y + V1.Z * V2.Z;
end DOT PRODUCT;
function CROSS_PRODUCT
( V1, V2 : VECTOR_3 ) return VECTOR_3 is
V : VECTOR 3;
begin
V.X := V1.Y * V2.Z ~ V1.Z * V2.Y;
V.Y := V1.Z * V2.X - V1.X * V2.Z;
V.Z := V1.X * V2.Y - V1.Y * V2.X;
return V;
end CROSS_PRODUCT;
......SCALE......
function SCALE
( V : VECTOR_3;
SCALE_FACTOR : FLOAT ) return VECTOR_3 is
V3 : VECTOR_3;
begin
-- length ( result ) = length ( v ) * scale_factor
V3.X := V.X * SCALE_FACTOR;
V3.Y := V.Y * SCALE FACTOR;
V3.Z := V.Z * SCALE FACTOR;
return V3;
end SCALE;
```

```
.....NORMALIZE.....
function NORMALIZE
( V : VECTOR_3 ) return VECTOR_3 is
R : FLOAT;
PHI : AZIMUTH;
THETA : ANGLE;
V3 : VECTOR_3;
begin
-- length ( result ) = 1.0
THETA := ARCTAN ( V.Y / V.X );
R := SQRT (V.X * V.X + V.Y * V.Y);
PHI := AZIMUTH ( ARCTAN ( V.Z / R ) );
V3.Z := SIN ( ANGLE ( PHI ) );
R := COS (ANGLE (PHI));
V3.Y := R * SIN ( THETA );
V3.X := R * COS (THETA);
return V3;
end NORMALIZE;
               end VECTOR_3_PKG;
```

#### **APPENDIX I**

# **SPEED PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines data type SPEED and associated functions
with MATH;
use MATH;
package SPEED_PKG is
subtype SPEED is FLOAT; -- Units : yards per second
-- Returns yards per second, given knots ( nautical miles per hour )
function MAKE_SPEED
 ( KNOTS : FLOAT ) return SPEED;
-- Returns knots, given yards per second
function SPEED_IN_KNOTS
 ( S : SPEED ) return FLOAT;
pragma INLINE
 ( MAKE_SPEED, SPEED_IN_KNOTS );
end SPEED_PKG;
```

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
package body SPEED_PKG is
YDS_IN_KNOT : constant FLOAT := 6080.2 / 3.0;
SECONDS IN HOUR : constant FLOAT := 3600.0;
function MAKE_SPEED
( KNOTS : FLOAT ) return SPEED is
begin
return ( KNOTS * YDS_IN_KNOT ) / SECONDS_IN_HOUR;
end MAKE_SPEED;
......SPEED_IN_KNOTS.....
function SPEED_IN_KNOTS
( S : SPEED ) return FLOAT is
begin
return ( S * SECONDS IN HOUR ) / YDS IN KNOT;
end SPEED_IN_KNOTS;
end SPEED PKG;
```

## APPENDIX J

#### **ANGLE PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines data subtypes ANGLE, AZIMUTH, and associated
-- functions
with MATH;
use MATH;
package ANGLE PKG is
subtype ANGLE is
FLOAT range -2.0 * PI .. 2.0 * PI; -- Units of radians
subtype AZIMUTH is
ANGLE range -1.0 * PI .. PI; -- Units of radians
function DEGREES_TO_RADIANS ( X : FLOAT ) return ANGLE;
-- Converts compass degree value to its equivalent radian value
function RADIANS_TO_DEGREES ( A : ANGLE ) return FLOAT;
 -- Converts radian value to its equivalent compass degree value
function SIN ( A : ANGLE ) return FLOAT renames MATH.SIN;
 function COS ( A : ANGLE ) return FLOAT renames MATH.COS;
```

```
function ARCTAN ( A : ANGLE ) return FLOAT renames MATH.ARCTAN;
function ARCSIN ( A : ANGLE ) return FLOAT renames MATH.ARCSIN;
pragma INLINE ( DEGREES TO RADIANS, RADIANS TO DEGREES, SIN, COS,
ARCTAN,
    ARCSIN );
end ANGLE PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
package body ANGLE PKG is
CONVERSION FACTOR : constant FLOAT := 180.0 / PI;
..... DEGREES TO RADIANS.........
function DEGREES TO RADIANS ( X : FLOAT ) return ANGLE is
begin
return ANGLE ( X / CONVERSION FACTOR );
end DEGREES TO RADIANS;
function RADIANS TO DEGREES ( A : ANGLE ) return FLOAT is
F : FLOAT;
begin
F := FLOAT ( A ) * CONVERSION_FACTOR;
if F < 0.0 then
return 360.0 + F;
end if;
return F;
RADIANS_TO_DEGREES; .....
end ANGLE_PKG;
```

### **APPENDIX K**

#### ABSOLUTE TIME PACKAGE

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines abstract data type ABSOLUTE_TIME and associated
-- functions
with RELATIVE TIME PKG;
use RELATIVE TIME PKG;
package ABSOLUTE_TIME_PKG is
 type ABSOLUTE TIME is private;
 function NOW return ABSOLUTE_TIME;
 -- Converts CALENDAR.CLOCK time to ABSOLUTE TIME
 function MAKE_ABSOLUTE_TIME
 ( YEAR, MONTH, DAY : NATURAL;
 TIME_OF_DAY : RELATIVE TIME ) return ABSOLUTE TIME;
 -- Accepts numerical values of year, month, day, and the time of day
 -- ( represented in seconds ). Converts inputted values to {\tt ABSOLUTE\_TIME}
 function YEAR
 ( T : ABSOLUTE TIME ) return NATURAL;
```

```
-- Returns the value of the year contained in the ABSOLUTE TIME input
 function MONTH
 ( T : ABSOLUTE_TIME ) return NATURAL;
 -- Returns the value of the month contained in the ABSOLUTE TIME input
 function DAY
 ( T : ABSOLUTE_TIME ) return NATURAL;
 -- Returns the value of the day contained in the ABSOLUTE TIME input
 function TIME_OF_DAY
 ( T : ABSOLUTE_TIME ) return RELATIVE_TIME;
 -- Returns the value of the time of day ( in seconds ) contained in the
 -- ABSOLUTE_TIME input
 function "+"
 ( ABT : ABSOLUTE TIME;
 RT : RELATIVE_TIME ) return ABSOLUTE_TIME;
 function "+"
 ( RT : RELATIVE TIME;
 ABT : ABSOLUTE_TIME ) return ABSOLUTE_TIME;
 function "-"
 ( T1, T2 : ABSOLUTE TIME ) return RELATIVE TIME;
 function "<"
 ( T1, T2 : ABSOLUTE_TIME ) return BOOLEAN;
 pragma INLINE
 ( MAKE ABSOLUTE TIME, YEAR, MONTH, DAY, TIME OF DAY );
private
 type ABSOLUTE TIME is
 record
 ABS YEAR : NATURAL;
 ABS_MONTH : NATURAL;
 ABS DAY : NATURAL;
 ABS_HOUR : NATURAL;
 ABS MINUTE : NATURAL;
```

```
ABS_SECONDS : FLOAT;
end record;
BEGINNING : constant ABSOLUTE_TIME := NOW;
end ABSOLUTE_TIME_PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
with CALENDAR;
use CALENDAR;
package body ABSOLUTE TIME PKG is
.....NOW......
 function NOW return ABSOLUTE TIME is
ABT : ABSOLUTE_TIME;
 SEC : DAY DURATION;
CT : TIME;
begin
 CT := CLOCK; -- Get system time clock value now
 SEC := SECONDS ( CT ); -- Convert time to seconds
 ABT.ABS_YEAR := NATURAL ( YEAR ( CT ) );
 ABT.ABS_MONTH := NATURAL ( MONTH ( CT ) );
 ABT.ABS DAY := NATURAL ( DAY ( CT ) );
 ABT.ABS_HOUR := NATURAL ( FLOAT ( SEC ) ) / 3600;
 ABT.ABS_MINUTE := NATURAL ( FLOAT ( SEC ) -
```

```
FLOAT ( ABT.ABS_HOUR * 3600 ) ) / 60;
ABT.ABS_SECONDS := FLOAT ( SEC ) - FLOAT ( ( ABT.ABS_HOUR * 3600 ) +
( ABT.ABS_MINUTE * 60 ) );
return ABT;
end NOW;
......MAKE_ABSOLUTE_TIME.....
function MAKE_ABSOLUTE_TIME
( YEAR, MONTH, DAY : NATURAL;
TIME OF DAY : RELATIVE TIME ) return ABSOLUTE TIME is
ABT : ABSOLUTE TIME;
begin
ABT.ABS YEAR := YEAR;
ABT.ABS MONTH := MONTH;
ABT.ABS_DAY := DAY;
ABT.ABS_HOUR := NATURAL ( TIME_OF_DAY ) / 3600;
ABT.ABS MINUTE := ( NATURAL ( TIME OF DAY ) -
ABT.ABS_HOUR * 3600 ) / 60;
ABT.ABS_SECONDS := FLOAT ( TIME_OF_DAY ) -
FLOAT ( ( ABT.ABS_HOUR * 3600 ) +
( ABT.ABS_MINUTE * 60 ) );
return ABT;
end MAKE ABSOLUTE TIME;
.....YEAR......
function YEAR
( T : ABSOLUTE_TIME ) return NATURAL is
begin
return T.ABS_YEAR;
end YEAR;
```

```
function MONTH
( T : ABSOLUTE_TIME ) return NATURAL is
begin
return T.ABS_MONTH;
end MONTH;
( T : ABSOLUTE_TIME ) return NATURAL is
return T.ABS_DAY;
end DAY;
function TIME_OF_DAY
( T : ABSOLUTE TIME ) return RELATIVE_TIME is
RT : RELATIVE_TIME;
begin
RT := RELATIVE_TIME ( T.ABS_HOUR * 3600 + T.ABS_MINUTE * 60 ) +
RELATIVE_TIME ( T.ABS_SECONDS );
return RT;
end TIME_OF_DAY;
function "+"
( ABT : ABSOLUTE_TIME;
RT : RELATIVE_TIME ) return ABSOLUTE_TIME is
RABT : ABSOLUTE TIME;
RTM : RELATIVE_TIME;
```

```
TM : TIME;
Y : YEAR NUMBER;
M : MONTH NUMBER;
D : DAY NUMBER;
S : DAY DURATION;
begin
-- Use CALENDAR functions to get year, month, day of ABT
Y := YEAR NUMBER ( ABT.ABS YEAR );
M := MONTH NUMBER ( ABT.ABS MONTH );
D := DAY NUMBER ( ABT.ABS_DAY );
-- Convert hours, minutes, seconds of ABT to seconds ( RELATIVE_TIME )
RTM := MAKE RELATIVE TIME ( ABT.ABS HOUR,
        ABT.ABS MINUTE,
        ABT.ABS SECONDS );
-- Convert RELATIVE TIME type of RTM to DAY DURATION subtype,
-- then represent all values in terms of CALENDAR.TIME
S := DAY DURATION ( RTM );
TM := TIME_OF (Y, M, D, S);
-- Use CALENDAR "+" function to add input objects
TM := CALENDAR."+" ( TM, DURATION ( RT ) );
-- Extract necessary values to fill ABSOLUTE TIME returned variable
Y := YEAR (TM);
M := MONTH (TM);
D := DAY (TM);
S := SECONDS (TM);
-- Fill ABSOLUTE TIME returned variable
RABT.ABS YEAR := NATURAL ( Y );
RABT.ABS MONTH := NATURAL ( M );
RABT.ABS_DAY := NATURAL ( D );
RABT.ABS HOUR := HOURS ( RELATIVE TIME ( S ) );
RABT.ABS_MINUTE := MINUTES ( RELATIVE TIME ( S ) );
RABT.ABS_SECONDS := SECONDS ( RELATIVE_TIME ( S ) );
return RABT;
```

```
end "+";
....."+"......
function "+"
( RT : RELATIVE_TIME;
ABT : ABSOLUTE TIME ) return ABSOLUTE TIME is
RABT : ABSOLUTE_TIME;
RTM : RELATIVE TIME;
TM : TIME;
Y : YEAR_NUMBER;
M : MONTH NUMBER;
D : DAY NUMBER;
S : DAY DURATION;
begin
-- Use CALENDAR functions to get year, month, day of ABT
Y := YEAR_NUMBER ( ABT.ABS_YEAR );
M := MONTH NUMBER ( ABT.ABS MONTH );
D := DAY_NUMBER ( ABT.ABS_DAY );
-- Convert hours, minutes, seconds of ABT to seconds ( RELATIVE TIME )
RTM := MAKE_RELATIVE_TIME ( ABT.ABS_HOUR,
ABT. ABS MINUTE,
        ABT.ABS_SECONDS );
-- Convert RELATIVE TIME type of RTM to DAY DURATION subtype,
-- then represent all values in terms of CALENDAR.TIME
S := DAY_DURATION ( RTM );
TM := TIME OF (Y, M, D, S);
-- Use CALENDAR "+" function to add input objects
TM := CALENDAR."+" ( TM, DURATION ( RT ) );
-- Extract necessary values to fill ABSOLUTE TIME returned variable
Y := YEAR (TM);
M := MONTH (TM);
D := DAY (TM);
```

```
S := SECONDS (TM);
-- Fill ABSOLUTE TIME returned variable
RABT.ABS_YEAR := NATURAL ( Y );
RABT.ABS_MONTH := NATURAL ( M );
RABT.ABS_DAY := NATURAL ( D );
RABT.ABS HOUR := HOURS ( RELATIVE TIME ( S ) );
RABT.ABS_MINUTE := MINUTES ( RELATIVE_TIME ( S ) );
RABT.ABS_SECONDS := SECONDS ( RELATIVE_TIME ( S ) );
return RABT;
end "+";
function "-"
( T1, T2 : ABSOLUTE_TIME ) return RELATIVE_TIME is
TM1,
TM2 : TIME;
DUR : DURATION;
Yl,
Y2 : YEAR_NUMBER;
M1,
M2 : MONTH NUMBER;
D1,
D2 : DAY NUMBER;
S1,
S2 : DAY_DURATION;
RT1,
RT2 : RELATIVE_TIME;
begin
-- Use CALENDAR functions to get year, month, day of T1, T2
Y1 := YEAR NUMBER ( T1.ABS_YEAR );
Y2 := YEAR_NUMBER ( T2.ABS YEAR );
M1 := MONTH_NUMBER ( T1.ABS_MONTH );
M2 := MONTH_NUMBER ( T2.ABS_MONTH );
D1 := DAY_NUMBER ( T1.ABS_DAY );
```

```
D2 := DAY_NUMBER ( T2.ABS_DAY );
-- Convert hours, minutes, seconds of T1, T2 to seconds ( RELATIVE_TIME
RT1 := MAKE RELATIVE TIME ( T1.ABS HOUR,
         T1.ABS_MINUTE,
         T1.ABS SECONDS );
RT2 := MAKE_RELATIVE_TIME ( T2.ABS HOUR,
         T2.ABS MINUTE,
         T2.ABS SECONDS );
-- Convert RELATIVE_TIME types of T1, T2 to DAY DURATION subtype,
-- then represent all values in terms of CALENDAR.TIME
S1 := DAY DURATION ( RT1 );
S2 := DAY DURATION ( RT2 );
TM1 := TIME_OF ( Y1, M1, D1, S1 );
TM2 := TIME_OF ( Y2, M2, D2, S2 );
-- Use CALENDAR "-" function to subtract T2 equivalent from T1
equivalent
DUR := CALENDAR."-" ( TM1, TM2 );
return RELATIVE TIME ( DUR );
end "-";
function "<"
( T1, T2 : ABSOLUTE_TIME ) return BOOLEAN is
TM1,
TM2 : TIME;
DUR : DURATION;
Y1,
Y2 : YEAR_NUMBER;
M1,
M2 : MONTH NUMBER;
D2 : DAY NUMBER;
S1,
S2 : DAY_DURATION;
```

```
RT1,
RT2 : RELATIVE_TIME;
begin
-- Use CALENDAR functions to get year, month, day of T1, T2
Y1 := YEAR NUMBER ( T1.ABS YEAR );
Y2 := YEAR NUMBER ( T2.ABS YEAR );
M1 := MONTH_NUMBER ( T1.ABS_MONTH );
M2 := MONTH NUMBER ( T2.ABS MONTH );
D1 := DAY_NUMBER ( T1.ABS_DAY );
D2 := DAY_NUMBER ( T2.ABS_DAY );
-- Convert hours, minutes, seconds of T1, T2 to seconds ( RELATIVE TIME
RT1 := MAKE_RELATIVE_TIME ( T1.ABS_HOUR,
         T1.ABS_MINUTE,
         T1.ABS SECONDS );
RT2 := MAKE_RELATIVE_TIME ( T2.ABS_HOUR,
         T2.ABS MINUTE,
         T2.ABS_SECONDS );
 -- Convert RELATIVE_TIME types of T1, T2 to DAY_DURATION subtype,
 -- then represent all values in terms of CALENDAR.TIME
 S1 := DAY_DURATION ( RT1 );
 S2 := DAY_DURATION ( RT2 );
 TM1 := TIME_OF ( Y1, M1, D1, S1 );
 TM2 := TIME_OF ( Y2, M2, D2, S2 );
-- Use CALENDAR "<" function to compare T2 equivalent to T1 equivalent
 return CALENDAR."<" ( TM1, TM2 );
end "<";
end ABSOLUTE_TIME PKG;
```

#### APPENDIX L

#### **DISTANCE PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines data subtype DISTANCE and associated functions
package DISTANCE PKG is
subtype DISTANCE is FLOAT; -- Units : yards
-- Larger than any observable range.
UNLIMITED : constant DISTANCE := FLOAT'LAST;
-- Unknown altitude.
UNKNOWN : constant DISTANCE := - UNLIMITED;
-- Converts nautical miles to yards
function MAKE_NAUTICAL_MILES_DISTANCE
 ( NM : FLOAT ) return DISTANCE;
-- Converts yards to nautical miles
function DISTANCE_IN_NAUTICAL MILES
 ( D : DISTANCE ) return FLOAT;
pragma INLINE
 ( MAKE NAUTICAL_MILES_DISTANCE,
```

```
DISTANCE_IN_NAUTICAL_MILES );
end DISTANCE PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
package body DISTANCE PKG is
YDS_IN_NAUTICAL_MILE : constant FLOAT := 6080.2 / 3.0;
......MAKE_NAUTICAL_MILES_DISTANCE.....
function MAKE NAUTICAL MILES DISTANCE
( NM : FLOAT ) return DISTANCE is
begin
return NM * YDS IN NAUTICAL MILE;
end MAKE_NAUTICAL_MILES_DISTANCE;
......DISTANCE_IN_NAUTICAL_MILES.....
function DISTANCE_IN_NAUTICAL_MILES
( D : DISTANCE ) return FLOAT is
begin
return D / YDS_IN_NAUTICAL MILE;
end DISTANCE_IN_NAUTICAL MILES;
end DISTANCE PKG;
```

#### **APPENDIX M**

# **GLOBAL OBSERVATION PACKAGE**

```
_______
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines data type GLOBAL_OBSERVATION
with GLOBAL_POSITION_PKG, VELOCITY_PKG, ABSOLUTE_TIME_PKG;
use GLOBAL_POSITION_PKG, VELOCITY PKG, ABSOLUTE TIME PKG;
package GLOBAL_OBSERVATION_PKG is
type GLOBAL_OBSERVATION is
record
POSITION : GLOBAL_POSITION;
COURSE_AND_SPEED : VELOCITY;
OBSERVATION TIME : ABSOLUTE TIME;
end record;
end GLOBAL_OBSERVATION_PKG;
```

#### APPENDIX N

#### **GLOBAL POSITION PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines abstract data type GLOBAL POSITION and
associated
-- functions/procedures
with RELATIVE POSITION PKG, ANGLE PKG, DISTANCE PKG;
use RELATIVE_POSITION_PKG, ANGLE_PKG, DISTANCE_PKG;
package GLOBAL POSITION PKG is
 type GLOBAL_POSITION is private; -- Earth coordinates.
 type NORTH_SOUTH is ( N, S ); -- Specifies latitude hemispere
 type EAST WEST is ( E, W ); -- Specifies longitude hemisphere
 -- Converts lat/long degrees, minutes, seconds to GLOBAL POSITION
 function MAKE GLOBAL POSITION
 ( LATITUDE_DIRECTION : NORTH SOUTH;
 LATITUDE DEGREES : NATURAL;
 LATITUDE MINUTES : NATURAL;
 LATITUDE SECONDS : NATURAL;
 LONGITUDE DIRECTION : EAST WEST;
 LONGITUDE_DEGREES : NATURAL;
```

```
LONGITUDE MINUTES : NATURAL;
LONGITUDE SECONDS : NATURAL ) return GLOBAL_POSITION;
-- Finds bearing & range ( RELATIVE POSITION ) from 1 earth coordinate
-- another
function FIND RELATIVE POSITION
 ( CONTACT,
REFERENCE POINT : GLOBAL_POSITION ) return RELATIVE_POSITION;
-- Returns an earth coordinate, given 1 earth coordinate and a bearing &
range
-- ( RELATIVE POSITION )
function FIND_GLOBAL_POSITION
 ( OFFSET : RELATIVE_POSITION;
 REFERENCE POINT : GLOBAL POSITION ) return GLOBAL_POSITION;
 -- Returns length of the great circle path from p1 to p2
 function GREAT_CIRCLE_DISTANCE
 ( P1,
 P2 : GLOBAL POSITION ) return DISTANCE;
-- Returns true bearing at position pl of the great circle path from pl
to p2
 function GREAT_CIRCLE_BEARING
 P2 : GLOBAL POSITION ) return ANGLE;
 -- Returns latitude ( in familiar terms, degrees, minutes, seconds ) of
 -- given GLOBAL_POSITION
 procedure GET LATITUDE
 ( POSITION : in GLOBAL POSITION;
 DIRECTION : out NORTH_SOUTH;
 DEGREES : out NATURAL;
 MINUTES : out NATURAL;
 SECONDS : out NATURAL );
 -- Returns longitude ( in familiar terms, degrees, minutes, seconds ) of
 -- given GLOBAL POSITION
 procedure GET LONGITUDE
```

```
( POSITION : in GLOBAL POSITION;
DIRECTION : out EAST WEST;
DEGREES : out NATURAL;
MINUTES : out NATURAL;
SECONDS : out NATURAL );
pragma INLINE ( MAKE GLOBAL POSITION, FIND_RELATIVE_POSITION,
     FIND_GLOBAL_POSITION, GREAT_CIRCLE_DISTANCE,
     GREAT CIRCLE BEARING, GET LATITUDE, GET LONGITUDE );
private
type GLOBAL POSITION is
record
THETA: ANGLE; -- Longitude angle in radians, -2pi to 2pi
      -- 0.0 = Greenwich Meridian
-- 0.0 to 2pi = East longitude
PHI : AZIMUTH; -- Latitude angle in radians, -pi to pi
      -- 0.0 = equator
      -- 0.0 to pi = North latitude
end record;
end GLOBAL_POSITION PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
with MATH, VECTOR_2_PKG;
use VECTOR 2 PKG;
package body GLOBAL_POSITION_PKG is
```

```
function MAKE_GLOBAL_POSITION
( LATITUDE_DIRECTION : NORTH_SOUTH;
LATITUDE DEGREES : NATURAL;
LATITUDE_MINUTES : NATURAL;
LATITUDE SECONDS : NATURAL;
LONGITUDE DIRECTION : EAST WEST;
LONGITUDE DEGREES : NATURAL;
LONGITUDE MINUTES : NATURAL;
LONGITUDE SECONDS : NATURAL ) return GLOBAL_POSITION is
LAT DEG,
LONG_DEG : FLOAT;
GP : GLOBAL POSITION;
begin
-- Convert latitude, longitude to seconds
LAT DEG := FLOAT ( LATITUDE DEGREES * 3600 + LATITUDE MINUTES * 60 +
LATITUDE_SECONDS );
LONG_DEG := FLOAT ( LONGITUDE_DEGREES * 3600 + LONGITUDE_MINUTES * 60 +
LONGITUDE SECONDS );
-- Convert longitude seconds to radians (0..PI = east, -PI..0 = west)
GP.THETA := ANGLE ( LONG_DEG / 3600.0 * MATH.PI / 180.0 );
if LONGITUDE_DIRECTION = W then
GP.THETA := -GP.THETA;
end if;
-- Convert latitude seconds to radians (0..PI/2 = north, -PI/2..0 =
GP.PHI := AZIMUTH ( LAT_DEG / 3600.0 * MATH.PI / 180.0 );
if LATITUDE_DIRECTION = S then
GP.PHI := -GP.PHI;
end if;
return GP;
```

```
..... FIND RELATIVE POSITION......
function FIND_RELATIVE_POSITION
( CONTACT,
REFERENCE POINT : GLOBAL POSITION ) return RELATIVE POSITION is
DELTA LAT IN NM,
DELTA_LONG_IN_NM : FLOAT; -- In nautical miles
DELTA_LAT_IN_RADIANS : AZIMUTH; -- In radians
DELTA_LONG_IN_RADIANS : ANGLE; -- In radians
CTC REL POS : RELATIVE POSITION;
begin
-- Compute change in latitude ( radians )
DELTA LAT IN RADIANS := CONTACT.PHI - REFERENCE POINT.PHI;
--If E / W hemisphere change over International Date Line
if ( CONTACT.THETA * REFERENCE POINT.THETA < 0.0 ) and
( ABS ( CONTACT.THETA - REFERENCE POINT.THETA ) ) > MATH.PI then
-- If going East to West
if REFERENCE POINT.THETA > 0.0 then
DELTA_LONG_IN RADIANS := MATH.PI * 2.0 - ( REFERENCE POINT.THETA -
              CONTACT. THETA );
-- If going West to East
else
DELTA_LONG_IN_RADIANS := - MATH.PI * 2.0 - ( REFERENCE_POINT.THETA -
              CONTACT. THETA );
end if;
-- No change in E / W hemispheres
else
DELTA_LONG IN RADIANS := CONTACT.THETA - REFERENCE_POINT.THETA;
end if;
-- Convert lat/long change to nautical miles
-- 1 degree ( in radians ) of change = 60 miles
DELTA_LAT_IN_NM := DELTA LAT IN RADIANS * 180.0 / MATH.PI * 60.0;
```

end MAKE GLOBAL POSITION;

```
DELTA LONG IN NM := DELTA LONG IN RADIANS * 180.0 / MATH.PI * 60.0;
 -- Convert the changes in lat/long to DISTANCE ( yards )
 -- then initialize the RELATIVE POSITION (2-D vector)
CTC REL POS := MAKE CARTESIAN VECTOR 2
     ( FLOAT ( MAKE NAUTICAL MILES DISTANCE
        ( DELTA_LONG_IN_NM ) ),
     FLOAT ( MAKE NAUTICAL MILES DISTANCE
        ( DELTA LAT IN NM ) );
 return CTC REL POS;
 end FIND RELATIVE POSITION;
function FIND GLOBAL POSITION
 ( OFFSET : RELATIVE POSITION;
REFERENCE_POINT : GLOBAL_POSITION ) return GLOBAL_POSITION is
DELTA LAT IN NM,
DELTA_LONG_IN_NM : FLOAT; -- in nautical miles
DELTA LAT IN RADIANS : AZIMUTH; -- in radians
DELTA_LONG_IN_RADIANS : ANGLE; -- in radians
CTC_POSITION : GLOBAL POSITION;
begin
-- Get changes in lat/long & convert to nautical miles
DELTA_LAT_IN_NM := DISTANCE IN NAUTICAL MILES ( Y COORDINATE ( OFFSET )
);
DELTA LONG_IN NM := DISTANCE_IN_NAUTICAL_MILES ( X_COORDINATE ( OFFSET
-- Convert NM to radians
DELTA LAT IN RADIANS := AZIMUTH ( DEGREES TO RADIANS
          ( DELTA_LAT_IN_NM / 60.0 ) );
DELTA LONG_IN RADIANS := DEGREES_TO_RADIANS ( DELTA_LONG_IN_NM / 60.0
-- If the target lies on the other side of the pole, don't
-- make the resultant latitude > 90 degrees
```

```
if ABS ( REFERENCE POINT.PHI + DELTA LAT IN RADIANS ) > MATH.PI / 2.0
-- If going over the south pole
if DELTA LAT IN RADIANS < 0.0 then
CTC POSITION.PHI := - MATH.PI - ( REFERENCE_POINT.PHI +
            DELTA_LAT_IN_RADIANS );
-- Going over the north pole
else
CTC POSITION.PHI := MATH.PI - ( REFERENCE POINT.PHI +
           DELTA_LAT_IN_RADIANS );
end if;
-- If we cross the n/s pole, we also change e/w hemispheres
DELTA LONG IN RADIANS := DELTA LONG IN RADIANS + MATH.PI;
-- Not going over the n/s pole
else
-- Assign target's latitude (in radians)
CTC POSITION.PHI := REFERENCE POINT.PHI + DELTA LAT IN RADIANS;
end if;
-- If target lies in other e/w hemisphere
if ABS ( REFERENCE POINT.THETA + DELTA LONG IN RADIANS ) > MATH.PI then
-- Target is in western hemisphere
if DELTA_LONG_IN_RADIANS < 0.0 then</pre>
DELTA LONG IN RADIANS := DELTA LONG IN RADIANS + MATH.PI * 2.0;
-- Target is in eastern hemisphere
else
DELTA_LONG IN RADIANS := DELTA LONG IN RADIANS - MATH.PI * 2.0;
end if:
end if;
-- Assign target's longitude
CTC_POSITION.THETA := REFERENCE POINT.THETA + DELTA LONG IN RADIANS;
return CTC POSITION;
```

```
end FIND_GLOBAL_POSITION;
......GREAT_CIRCLE_DISTANCE.....
function GREAT_CIRCLE_DISTANCE
( P1,
P2 : GLOBAL POSITION ) return DISTANCE is
CTC RG BRG : RELATIVE POSITION;
begin
-- Find where P2 is in relation to P1 (bearing & range )
CTC_RG_BRG := FIND_RELATIVE_POSITION ( P1, P2 );
-- Return only the range ( great circle )
return RANGE_OF ( CTC_RG_BRG );
end GREAT_CIRCLE_DISTANCE;
--....GREAT_CIRCLE_BEARIN
function GREAT CIRCLE BEARING
( P1, -- From
P2 -- To
   : GLOBAL_POSITION ) return ANGLE is
CTC_RG_BRG : RELATIVE_POSITION;
begin
-- Find where P2 is in relation to P1 (bearing & range)
CTC_RG_BRG := FIND RELATIVE POSITION ( P1, P2 );
-- Return only the bearing ( great circle )
return BEARING_TO ( CTC_RG_BRG );
end GREAT_CIRCLE_BEARING;
```

```
.....GET_LATITUDE......
procedure GET LATITUDE
( POSITION : in GLOBAL POSITION;
DIRECTION : out NORTH SOUTH;
DEGREES : out NATURAL;
MINUTES : out NATURAL;
SECONDS : out NATURAL ) is
PH : AZIMUTH := POSITION.PHI;
DEG : NATURAL;
MIN : NATURAL;
SEC : NATURAL;
begin
-- If the value of target's PHI < 0.0, it's in the southern hemisphere
if PH < 0.0 then
DIRECTION := S;
PH := -PH;
else
DIRECTION := N;
end if;
-- Convert latitude ( radians ) to seconds
SEC := NATURAL ( FLOAT ( PH ) * 180.0 / MATH.PI * 3600.0 );
-- Calculate degrees, minutes, seconds
DEG := SEC / 3600;
MIN := (SEC - DEG * 3600) / 60;
SEC := SEC - DEG * 3600 - MIN * 60;
DEGREES := DEG;
MINUTES := MIN;
SECONDS := SEC;
end GET LATITUDE;
.....GET_LONGITUDE.....
procedure GET LONGITUDE
( POSITION : in GLOBAL_POSITION;
```

```
DIRECTION : out EAST_WEST;
DEGREES : out NATURAL;
MINUTES : out NATURAL;
SECONDS : out NATURAL ) is
TH : ANGLE := POSITION.THETA;
DEG : NATURAL;
MIN : NATURAL;
SEC : NATURAL;
begin
-- If the value of target's THETA < 0.0, it's in the western hemisphere
if TH < 0.0 then
DIRECTION := W;
TH := -TH;
else
DIRECTION := E;
end if;
-- Convert longitude ( radians ) to seconds
SEC := NATURAL ( FLOAT ( TH ) * 180.0 / MATH.PI * 3600.0 );
-- Calculate degrees, minutes, seconds
DEG := SEC / 3600;
MIN := (SEC - DEG * 3600) / 60;
SEC := SEC - DEG * 3600 - MIN * 60;
DEGREES := DEG;
MINUTES := MIN;
SECONDS := SEC;
end GET_LONGITUDE;
-- ......
end GLOBAL_POSITION_PKG;
```

# **APPENDIX O**

#### RELATIVE OBSERVATION PACKAGE

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines data type RELATIVE OBSERVATION
with RELATIVE_POSITION_PKG, CALENDAR;
use RELATIVE POSITION PKG, CALENDAR;
package RELATIVE OBSERVATION PKG is
type RELATIVE_OBSERVATION is
record
POSITION : RELATIVE_POSITION;
OBSERVATION TIME : TIME;
end record;
end RELATIVE_OBSERVATION_PKG;
```

#### APPENDIX P

#### **RELATIVE POSITION PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines data type RELATIVE POSITION and associated
functions
with VECTOR_2_PKG, DISTANCE_PKG, ANGLE_PKG;
use VECTOR_2 PKG, DISTANCE PKG, ANGLE PKG;
package RELATIVE POSITION PKG is
subtype RELATIVE POSITION is VECTOR 2; -- Two dimensional position
vector.
 -- Returns the distance portion of a 2-D RELATIVE POSITION vector
 function RANGE OF
 ( CONTACT : RELATIVE_POSITION ) return DISTANCE
  renames VECTOR_2_PKG.LENGTH;
 -- Returns the bearing portion of a 2-D RELATIVE POSITION vector
 function BEARING_TO
 ( CONTACT : RELATIVE_POSITION ) return ANGLE
  renames VECTOR 2 PKG.DIRECTION;
pragma INLINE ( RANGE OF, BEARING TO );
end RELATIVE POSITION PKG;
```

# **APPENDIX Q**

#### TRACK DATABASE PACKAGE

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines abstract data type TRACK_DATABASE and
associated
-- functions and procedures
with TRACK PKG;
use TRACK PKG;
package TRACK DATABASE PKG is
type TRACK DATABASE is private;
 -- Determines whether or not a TRACK is active
 function ACTIVE TRACK
 ( DBASE : TRACK DATABASE ) return BOOLEAN;
 -- Restores active TRACK to database before new one is activated
procedure RESTORE_ALTERED TRACK TO DATABASE
 ( TRAK : in TRACK;
DBASE : in out TRACK_DATABASE );
 -- Finds a TRACK in the database by track number
procedure FIND_TRACK_IN DBASE
 ( TRAK_NUM : in NATURAL;
```

```
TRAK : in out TRACK;
 DBASE : in out TRACK DATABASE );
 -- Adds a new TRACK to the database
 procedure ADD TRACK TO DBASE
 ( TRAK : in TRACK;
 DBASE : in out TRACK DATABASE );
 -- TRACKS object & all associated observations of that TRACK
 -- are purged. Only the currently active TRACK can be deleted.
 procedure DROP_TRACK_FROM_DBASE
 ( DBASE : in out TRACK DATABASE );
 -- Drops all TRACKS from the database and sends them to history
 -- Should be automatically invoked upon termination of main program
 procedure PURGE ENTIRE DBASE
 ( DBASE : in out TRACK DATABASE );
 pragma INLINE ( ACTIVE_TRACK, RESTORE_ALTERED_TRACK_TO_DATABASE,
      FIND_TRACK_IN_DBASE, ADD_TRACK_TO_DBASE,
      DROP TRACK FROM DBASE, PURGE ENTIRE DBASE );
private
 type TRACK_NODE; -- Elements of the TRACK_DATABASE
 type TRACK PTR is access TRACK NODE;
 type TRACK NODE is
 record
 TRAK : TRACK;
 NEXT_TRACK : TRACK_PTR;
 end record;
 type TRACK DATABASE is
 record
 OWNSHIP_POSITION : TRACK PTR; -- Points to OWNSHIP TRACK
 CURRENT_TRACK POSITION : TRACK PTR; -- Points to currently active TRACK
 PRIOR TRACK POSITION : TRACK PTR; -- Points to TRACK before active
             -- TRACK for relink purposes after
             -- active TRACK is deleted
```

```
end record;
end TRACK_DATABASE_PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
with UNCHECKED_DEALLOCATION;
package body TRACK_DATABASE_PKG is
procedure FREE TRK is
new UNCHECKED_DEALLOCATION ( TRACK_NODE, TRACK_PTR );
.....ACTIVE_TRACK.....
function ACTIVE_TRACK
( DBASE : TRACK_DATABASE ) return BOOLEAN is
begin
if DBASE.CURRENT_TRACK POSITION = null then
return FALSE;
end if;
return TRUE;
end ACTIVE_TRACK;
......RESTORE_ALTERED_TRACK_TO_DATABASE.....
procedure RESTORE_ALTERED_TRACK_TO_DATABASE
( TRAK : in TRACK; -- altered TRACK
DBASE : in out TRACK DATABASE ) is
```

```
begin
 -- If currently active TRACK was not deleted
 if ACTIVE TRACK ( DBASE ) then
 -- Restore currently active TRACK
 DBASE.CURRENT_TRACK POSITION.TRAK := TRAK;
 -- Restore OWNSHIP TRACK, if necessary
 if DBASE.CURRENT TRACK POSITION = DBASE.OWNSHIP POSITION then
 DBASE.OWNSHIP_POSITION.TRAK := TRAK;
 end if;
 end if;
 end RESTORE ALTERED TRACK TO DATABASE;
.....FIND_TRACK_IN_DBASE.....
procedure FIND_TRACK IN DBASE
 ( TRAK NUM : in NATURAL;
 TRAK : in out TRACK;
 DBASE : in out TRACK DATABASE ) is
 begin
 -- Restore currently active TRACK before reassigning current pointer
 RESTORE_ALTERED_TRACK_TO_DATABASE ( TRAK, DBASE );
 if TRAK_NUM /= 0 then-- not OWNSHIP
 DBASE.CURRENT_TRACK_POSITION := DBASE.OWNSHIP_POSITION.NEXT_TRACK;
DBASE.PRIOR_TRACK_POSITION := DBASE.OWNSHIP_POSITION;
 while ( DBASE.CURRENT TRACK POSITION /= null ) and then
 ( TRACK_ID_NUMBER ( DBASE.CURRENT TRACK POSITION.TRAK ) >
   TRAK NUM ) loop
DBASE.PRIOR_TRACK_POSITION := DBASE.CURRENT_TRACK_POSITION;
 DBASE.CURRENT_TRACK_POSITION :=
DBASE.CURRENT TRACK POSITION.NEXT TRACK;
```

```
end loop;
else
DBASE.CURRENT_TRACK_POSITION := DBASE.OWNSHIP_POSITION;
DBASE.PRIOR_TRACK_POSITION := null;
end if;
-- If TRACK found, return it
if ( DBASE.CURRENT TRACK POSITION /= null ) and then
 ( TRACK ID NUMBER ( DBASE.CURRENT TRACK POSITION.TRAK ) = TRAK NUM )
then
TRAK := DBASE.CURRENT_TRACK_POSITION.TRAK;
else -- TRACK not found
DBASE.CURRENT TRACK POSITION := null;
end if;
end FIND TRACK IN DBASE;
.....ADD_TRACK_TO_DBASE.......
procedure ADD_TRACK_TO DBASE
( TRAK : in TRACK;
DBASE : in out TRACK_DATABASE ) is
T P : TRACK PTR;
begin
T P := new TRACK NODE;
T_P.TRAK := TRAK;
if DBASE.OWNSHIP_POSITION = null then
-- first track entered ( OWNSHIP )
DBASE.OWNSHIP_POSITION := T P;
DBASE.PRIOR_TRACK_POSITION := T_P;
```

else

```
-- All new TRACKs are entered in the TRACK DATABASE linked list
-- immediately following OWNSHIP
T P.NEXT TRACK := DBASE.OWNSHIP_POSITION.NEXT_TRACK;
DBASE.OWNSHIP POSITION.NEXT TRACK := T P;
DBASE.PRIOR TRACK POSITION := DBASE.OWNSHIP POSITION;
end if;
DBASE.CURRENT TRACK POSITION := T_P;
end ADD TRACK TO DBASE;
.....DROP_TRACK_FROM_DBASE.....
procedure DROP TRACK FROM_DBASE
( DBASE : in out TRACK_DATABASE ) is
TR : TRACK := DBASE.CURRENT_TRACK_POSITION.TRAK;
begin
-- OWNSHIP cannot be dropped
if DBASE.CURRENT_TRACK POSITION /= DBASE.OWNSHIP POSITION then
-- Send TRACK data & all its observations to archive file
DELETE TRACK AND SEND TO HISTORY ( TR );
DBASE.PRIOR_TRACK_POSITION.NEXT_TRACK :=
DBASE.CURRENT_TRACK_POSITION.NEXT_TRACK;
-- Free deleted TRACK's memory space
FREE_TRK ( DBASE.CURRENT_TRACK_POSITION );
end if;
end DROP_TRACK_FROM_DBASE;
.....PURGE_ENTIRE_DBASE.....
procedure PURGE_ENTIRE_DBASE
( DBASE : in out TRACK DATABASE ) is
```

```
OP : TRACK_PTR := DBASE.OWNSHIP_POSITION;
CP, PP : TRACK_PTR;
 TRAK : TRACK := OP.TRAK;
begin
 -- Send OWNSHIP data & all its observations to archive file
DELETE_TRACK_AND_SEND_TO_HISTORY ( TRAK );
-- Get next TRACK in database
CP := OP.NEXT TRACK;
 -- Delete TRACKs, send data to archives, and free up memory for all
 -- TRACKs in the database
while CP /= null loop
TRAK := CP.TRAK;
DELETE_TRACK_AND_SEND_TO_HISTORY ( TRAK );
PP := CP.NEXT_TRACK;
FREE TRK ( CP );
CP := PP;
end loop;
FREE TRK ( OP );
DBASE.OWNSHIP_POSITION := null;
DBASE.CURRENT TRACK POSITION := null;
DBASE.PRIOR_TRACK_POSITION := null;
end PURGE ENTIRE DBASE;
end TRACK_DATABASE_PKG;
```

## **APPENDIX R**

## LINK PACKAGE

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines abstract data type LINK TYPE and associated
-- functions and procedures
with TRACK_PKG, GLOBAL_POSITION_PKG, INTEGRATION_SYSTEM_PKG,
RELATIVE_TIME PKG, M_SERIES_MSG_PKG;
use TRACK_PKG, GLOBAL_POSITION_PKG, INTEGRATION_SYSTEM PKG,
RELATIVE_TIME_PKG, M_SERIES_MSG_PKG;
package LINK_PKG is
TIME_OUT_DURATION : constant RELATIVE TIME := 3600.0; --<<<----+
 -- LINK_TRACK times out after 1 hour of no updates |
 -- Actual value may differ once implemented -----+
type LINK_TYPE is private;
type LINK_TABLE;
type LINK_PTR is access LINK TABLE;
type LINK TABLE is
 record
 LINK NUM : NATURAL; -- link assigned
```

```
TRK NUM : NATURAL := 0; -- system assigned
CTL : CONTROL_TYPE; -- LINK, LOCAL
NEXT LT : LINK PTR;
end record;
-- Extracts & formats a link M series message to a LINK TYPE that
-- is later transformed into a TRACK
function CONVERT M SERIES MSG TO LINK TYPE
( MSG : M_SERIES_MSG ) return LINK_TYPE;
-- Creates a TRACK under LINK control from a LINK TYPE
procedure CREATE LINK TRACK
( LT : in LINK TYPE;
L_TBL : in out LINK PTR;
TRK : in out TRACK );
-- Adds a new observation to an existing LINK TRACK
procedure ADD LINK OBSERVATION
( LT : in LINK TYPE;
TRK : in out TRACK );
-- All tracks reported over link are relative to DLRP
-- ( Data Link Reference Point )
procedure MAKE DLRP TRACK
( DLRP : in GLOBAL POSITION;
TRK : in out TRACK );
procedure FIND_LINK_TYPE_IN_TABLE_BY_LINK_NUM
( LN : in NATURAL; -- link table number
LP : in LINK PTR;
LT : out LINK_TYPE );
procedure FIND_LINK TYPE IN TABLE BY TRK NUM
( TN : in NATURAL; -- system assigned track number
LP : in LINK PTR;
LT : out LINK TYPE );
-- Updates LINK_TABLE to reflect LOCAL control so no more link
-- updates to that track will occur
procedure CHANGE LINK TRACK TO LOCAL TRACK
( TN : in NATURAL );
```

```
-- Visits each node in LINK TABLE
 -- Calls TIME_OUT to see if outside acceptable update time
 -- If no update within specified period, assume link has dropped it &
 -- call DROP LINK TRACK AFTER TIME OUT
 procedure SCAN_LINK_TABLE_FOR_TIME_OUTS
 ( LP : in out LINK PTR );
 -- Deletes LINK TABLE entry after timeout
 -- Makes call to INTEGRATION_SYSTEM to drop TRACK, if not under LOCAL
control
 procedure DROP_LINK_TRACK_AFTER_TIME OUT
 ( LP : in out LINK PTR;
 TRK NUM : out NATURAL );
 -- Checks LINK_TABLE to see if LINK_TYPE is under LOCAL control
 function ASSIGNED_LOCAL_CONTROL
 ( LT : LINK TYPE;
 LP : LINK PTR ) return BOOLEAN;
 -- Calls FIND_LINK_TYPE_IN_TABLE_BY_LINK_NUM
 -- Flags system to drop link track after no updates in pre-assigned
 -- time period
 function TIME OUT
 ( LN : NATURAL ) return BOOLEAN;
 pragma INLINE ( CONVERT_M SERIES MSG TO LINK TYPE, CREATE LINK TRACK,
      ADD_LINK_OBSERVATION, MAKE_DLRP TRACK,
     FIND LINK TYPE IN TABLE BY LINK NUM,
      FIND_LINK_TYPE_IN_TABLE_BY_TRK NUM,
      CHANGE_LINK_TRACK TO LOCAL TRACK,
      SCAN_LINK_TABLE FOR TIME OUTS, DROP LINK TRACK AFTER TIME OUT,
      ASSIGNED LOCAL CONTROL, TIME OUT );
private
 type LINK TYPE is
 record
 LINK_NUM : NATURAL;
 REL_POS_FM_DLRP : RELATIVE POSITION;
 TIME OF OBS : ABSOLUTE TIME;
```

TRK\_CAT : TRACK\_CATEGORY;
TRK\_ID : IDENTITY\_TYPE;
ALTITUDE : DISTANCE := 0.0;

end record;

end LINK\_PKG;

### **APPENDIX S**

### SYSTEM STATUS PACKAGE

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines abstract data type SYSTEM_STATUS and associated
-- functions and procedures
package SYSTEM_STATUS_PKG is
type STATUS is ( UP, DOWN );
type SENSOR is ( LINK, GPS, RADAR, PITSWORD, GYRO, FATHOMETER );
 type SYSTEM_STATUS is private;
 -- Retrieves status of a particular sensor
 function GET_STATUS
 ( SYS_STATUS : SYSTEM_STATUS;
 SENSER : SENSOR ) return STATUS;
 -- Sets the status of a particular sensor
 procedure SET STATUS
 ( SYS_STATUS : out SYSTEM STATUS;
 SENSER : in SENSOR;
UP DOWN : in STATUS );
pragma INLINE ( GET_STATUS, SET_STATUS );
```

```
type SYSTEM_STATUS is
record
LINK_STATUS : STATUS := DOWN;
GPS STATUS : STATUS := DOWN;
RADAR STATUS : STATUS := DOWN;
PITSWORD_STATUS : STATUS := DOWN;
GYRO STATUS : STATUS := DOWN;
FATHOMETER STATUS : STATUS := DOWN;
end record;
end SYSTEM STATUS PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
package body SYSTEM_STATUS_PKG is
.....GET_STATUS.....
function GET_STATUS
( SYS_STATUS : SYSTEM_STATUS;
SENSER: SENSOR) return STATUS is
begin
case SENSER is
when LINK =>
return SYS_STATUS.LINK_STATUS;
when GPS =>
return SYS_STATUS.GPS_STATUS;
when RADAR =>
return SYS_STATUS.RADAR_STATUS;
when PITSWORD =>
```

private

```
return SYS_STATUS.PITSWORD_STATUS;
when GYRO =>
return SYS STATUS.GYRO STATUS;
when FATHOMETER =>
return SYS STATUS.FATHOMETER STATUS;
end case;
end GET_STATUS;
.....SET_STATUS.....
procedure SET STATUS
 ( SYS_STATUS : out SYSTEM_STATUS;
SENSER : in SENSOR;
UP DOWN : in STATUS ) is
begin
case SENSER is
when LINK =>
SYS_STATUS.LINK_STATUS := UP_DOWN;
when GPS =>
SYS_STATUS.GPS_STATUS := UP_DOWN;
when RADAR =>
SYS_STATUS.RADAR_STATUS := UP_DOWN;
when PITSWORD =>
SYS STATUS.PITSWORD STATUS := UP DOWN;
when GYRO =>
SYS_STATUS.GYRO_STATUS := UP DOWN;
when FATHOMETER =>
SYS_STATUS.FATHOMETER_STATUS := UP_DOWN;
end case;
end SET STATUS;
end SYSTEM_STATUS_PKG;
```

### **APPENDIX T**

### **NAVIGATION PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines function GET_GPS_UPDATE
with GLOBAL_OBSERVATION_PKG, TEXT_IO, GLOBAL_POSITION_PKG,
 ABSOLUTE_TIME_PKG, VECTOR 2 PKG;
use GLOBAL_OBSERVATION_PKG, TEXT_IO, GLOBAL_POSITION_PKG,
 ABSOLUTE_TIME_PKG, VECTOR_2_PKG;
package NAVIGATION PKG is
 -- Returns current OWNSHIP's position from GPS
 function GET GPS UPDATE return GLOBAL OBSERVATION;
pragma INLINE ( GET GPS_UPDATE );
end NAVIGATION_PKG;
package body NAVIGATION PKG is
 function GET_GPS_UPDATE return GLOBAL OBSERVATION is
```

CHAR : CHARACTER;

```
THE FILE : FILE TYPE;
IN_STRING : BOOLEAN := FALSE; -- Start character '[' found,
           -- reading position data
LAT DEG, -- Degrees of latitude
LONG DEG, -- Degrees of longitude
LAT_MIN, -- Minutes of latitude
LONG MIN, -- Minutes of longitude
LAT SEC, -- Seconds of latitude
LONG SEC : NATURAL; -- Seconds of longitude
LAT_MIN_FL, -- GPS output of latitude minutes
LONG MIN FL : FLOAT; -- GPS output of longitude minutes
LAT DIR : NORTH SOUTH; -- North/South latitude
LONG DIR : EAST WEST; -- East/West longitude
OWN_OBS : GLOBAL_OBSERVATION; -- Returned position after conversion
package NATURAL INOUT is new INTEGER_IO ( NATURAL );
package FLOAT_INOUT is new FLOAT IO ( FLOAT );
package N_S_INOUT is new ENUMERATION_IO ( NORTH_SOUTH );
package E W INOUT is new ENUMERATION_IO ( EAST_WEST );
use NATURAL INOUT, FLOAT INOUT, N S INOUT, E W INOUT;
begin
-- Open RS-232 comm port connected to GPS
OPEN ( THE_FILE, IN_FILE, NAME => "/dev/ttya" );
loop -- Until position data is fully read in
GET ( THE_FILE, CHAR ); -- Read the next character from the GPS string
if NOT IN_STRING then -- If start character not yet found
if CHAR = '[' then -- Start character found
  IN STRING := TRUE;
end if;
else -- Start character has been found
 -- Skip over next 29 characters, irrelevant data
 for I in 1 .. 29 loop
GET ( THE FILE, CHAR );
```

```
end loop;
```

```
-- Get data that pertains to OWNSHIP's GLOBAL_POSITION
GET ( THE FILE, LAT DEG, 2 );
GET ( THE FILE, CHAR );
GET ( THE FILE, LAT MIN FL, 7 );
GET ( THE FILE, LAT_DIR );
 GET ( THE_FILE, CHAR );
 GET ( THE FILE, LONG DEG, 3 );
 GET ( THE FILE, CHAR );
 GET ( THE_FILE, LONG_MIN_FL, 7 );
 GET ( THE FILE, LONG DIR );
 -- Close the comm port
 CLOSE ( THE FILE );
 -- GPS does not send minutes and seconds, but rather sends minutes as
 -- a floating point number. The 4 statements below convert that
 -- floating point number to minutes and seconds as required to fill a
 -- GLOBAL POSITION.
 LAT MIN := NATURAL ( LAT_MIN_FL ~ 0.5 );
 LAT_SEC := NATURAL ( ( LAT_MIN_FL - FLOAT ( LAT_MIN ) ) *
              60.0 - 0.5);
 LONG MIN := NATURAL ( LONG_MIN_FL - 0.5 );
 LONG_SEC := NATURAL ( ( LONG_MIN_FL - FLOAT ( LONG_MIN ) ) *
              60.0 - 0.5);
 -- Fill the GLOBAL OBSERVATION record with the above position,
 -- current system time, and a course and speed of 0.0, 0.0.
 -- Procedures to calculate actual course and speed are found
 -- in TRACK PKG.
 OWN OBS.POSITION := MAKE_GLOBAL_POSITION
  ( LAT_DIR, LAT_DEG, LAT_MIN, LAT_SEC,
       LONG DIR, LONG DEG, LONG MIN, LONG SEC );
 OWN OBS.OBSERVATION TIME := NOW;
 OWN OBS.COURSE AND SPEED := MAKE CARTESIAN VECTOR 2 ( 0.0, 0.0 );
 return OWN OBS;
end if;
```

```
end loop;
end GET_GPS_UPDATE;
end NAVIGATION_PKG;
```

### **APPENDIX U**

### M\_SERIES\_MSG\_PACKAGE

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines abstract data types M SERIES MSG,
M SERIES MSG BUFFER
-- and their associated functions and procedures
package M_SERIES_MSG_PKG is
 type M SERIES MSG is private;
 type M_SERIES MSG BUFFER is private;
 -- Reads in an individual M SERIES MSG from the LINK processor
 procedure GET M SERIES MSG FROM LINK
 ( MSG : out M_SERIES_MSG );
 -- Loops until START TRANSMISSION signal is found on LINK.
 -- Once START TRANSMISSION signal found,
 -- calls GET M SERIES MSG FROM LINK until END TRANSMISSION
 -- signal found.
 -- Each M_SERIES_MSG retrieved is appended to M_SERIES_MSG_BUFFER
 procedure FILL_M_SERIES_MSG_BUFFER
 ( MSG BUFF : out M SERIES MSG BUFFER );
```

- -- other functions/procedures to retrieve M\_SERIES\_MSG,
- -- M\_SERIES\_MSG\_BUFFER record items to be completed in
- -- follow-on thesis work

#### private

type M\_SERIES\_MSG is
 record

-- to be completed in follow-on thesis work end record;

type M\_SERIES\_MSG\_BUFFER is
-- some data structure of M\_SERIES\_MSG types

end M\_SERIES\_MSG\_PKG;

### APPENDIX V

### PROCESS\_LINK\_TRACK\_PACKAGE

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines procedure PROCESS MSG BUFFER and task
-- PROCESS LINK TRACKS
with INTEGRATION SYSTEM PKG, M SERIES MSG PKG, LINK PKG, TRACK PKG,
SYSTEM_STATUS_PKG;
use INTEGRATION SYSTEM PKG, M SERIES MSG PKG, LINK PKG, TRACK PKG,
SYSTEM STATUS PKG;
package PROCESS_LINK_TRACKS_PKG is
procedure PROCESS MSG BUFFER
 ( MSG_BUFF : in M_SERIES_MSG_BUFFER );
task PROCESS_LINK_TRACKS;
end PROCESS LINK TRACKS PKG;
package body PROCESS LINK TRACKS PKG is
```

```
procedure PROCESS_MSG_BUFFER
( MSG BUFF : in M_SERIES_MSG_BUFFER ) is
begin
-- Uses procedures/functions in LINK PKG, TRACK PKG to
-- break down MSG_BUFF into individual M_SERIES MSGs and
-- convert them to link TRACKS, altering/adding them to the
-- TRACK_DATABASE as necessary ( using INTEGRATION_SYSTEM
-- entry calls )
end PROCESS MSG BUFFER;
task body PROCESS_LINK_TRACKS is
MSG_BUFF : M_SERIES_MSG_BUFFER;
SENSER_STATUS : STATUS;
begin
loop
-- Get synch signal from INTEGRATION SYSTEM_PKG.LINK CYCLE
LINK_CYCLE.START LINK UPDATE;
-- See if there's anything to process
INTEGRATION SYSTEM.GET SENSOR STATUS ( LINK, SENSER STATUS );
if SENSER_STATUS = UP then
 -- Get the msg buffer
FILL_M SERIES_MSG BUFFER ( MSG BUFF );
 -- Process the buffer into separate msgs and possibly LINK TRACKs
PROCESS MSG BUFFER ( MSG BUFF );
end if;
end loop;
exception
```

```
when STATUS_ERROR | CONSTRAINT_ERROR =>
INTEGRATION_SYSTEM.SET_SENSOR_STATUS ( LINK, DOWN );
end PROCESS_LINK_TRACKS;
end PROCESS_LINK_TRACKS_PKG;
```

### **APPENDIX W**

## **RELATIVE\_TIME\_PACKAGE**

```
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
-- Description : Defines data type RELATIVE TIME and associated
functions
package RELATIVE TIME PKG is
subtype RELATIVE TIME is FLOAT; -- Units : seconds
--Returns total seconds, given hours, minutes, seconds
function MAKE RELATIVE TIME
 ( HOURS, MINUTES : NATURAL;
SECONDS : FLOAT ) return RELATIVE_TIME;
-- Returns whole hours of a day, given seconds of a day
function HOURS
 ( T : RELATIVE_TIME ) return NATURAL;
-- Returns whole minutes of an hour, given seconds of a day
 function MINUTES
 ( T : RELATIVE TIME ) return NATURAL;
 -- Returns seconds of a minute, given seconds of a day
 function SECONDS
```

```
( T : RELATIVE_TIME ) return FLOAT;
pragma INLINE ( MAKE RELATIVE TIME, HOURS, MINUTES, SECONDS );
end RELATIVE TIME PKG;
-- Authors : Richard T. Irwin
-- Willie K. Bolick
-- Date : 29 August 1991
package body RELATIVE TIME PKG is
......MAKE_RELATIVE_TIME.....
function MAKE RELATIVE TIME
( HOURS, MINUTES : NATURAL;
SECONDS : FLOAT ) return RELATIVE TIME is
begin
return FLOAT ( HOURS * 3600 ) + FLOAT ( MINUTES * 60 ) + SECONDS;
end MAKE_RELATIVE_TIME;
......HOURS......
function HOURS
( T : RELATIVE_TIME ) return NATURAL is
begin
return NATURAL ( T / 3600.0 - 0.5 );
end HOURS;
```

```
function MINUTES

( T : RELATIVE_TIME ) return NATURAL is

begin

return NATURAL ( ( T - RELATIVE_TIME ( HOURS ( T ) * 3600 ) ) /
60.0 - 0.5 );
end MINUTES;

--

SECONDS

( T : RELATIVE_TIME ) return FLOAT is

begin

return T - FLOAT ( HOURS ( T ) * 3600 ) - FLOAT ( MINUTES ( T ) * 60 );
end SECONDS;

--

end RELATIVE TIME PKG;
```

### **APPENDIX X**

### **GPS CONNECTION CONSIDERATIONS**


The connection between the Global\_Positioning\_Subsystem (Trimble 4000) and the SUN Microstation SPARCstation 2 is with a cable using the RS-232 port on the Trimble 4000 and Comm-port 1 on the SPARCstation. A proper setup of the connectors pins at each end of the cable is necessary to insure data transfer. The proper setup follows:

Trimble 4000 RS-232 connector pins (See Figure 20):

GROUND:= GROUND;

TXD(SEND) := SEND;

RXD(RECEIVE):= BLANK (no pin);

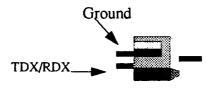

**RS-232 Connector** 

Figure 27: GPS CONNECT

SPARCstation Comm-port 1:

GROUND:= GROUND;

TXD(SEND:= BLANK (no pin);

RXD(RECEIVE):= RECEIVE;

The network configuration in this case is simply a DTE setup in the Trimble 4000 and a DCE in the SPARCstation. This setup is necessary because the Trimble 4000 will shut down with an interrupt, if the SUN, via the RXD pin sends a "ready to receive" signal accommodating the Trimble 4000 PROTOCOL.

### LIST OF REFERENCES

- [Ref. 1] Commander, Naval Sea Systems Command UNCLASSIFIED Letter 9410 OPR:61Y Serial 61Y/1036 to Superintendent, Naval Postgraduate School, Subject: Statement of Work for Low Cost Combat Direction System, 20 December 1988.
- [Ref. 2] Department of the Navy, (NAVSEA) 0967-LP-027-8602 System Engineering Handbook Vol I, Combat Direction System Model 5, February 1985.
- [Ref. 3] Seveney, J., Steinberg, G.P., "Requirements Analysis for a Low Cost Combat Direction System", Master's Thesis, Naval Postgraduate School, Monterey, CA., June, 1990.
- [Ref. 4] Department of the Navy, Military Specification(CONFIDENTIAL NAVSEA) 0967-LP-027-8635, Combat Direction System (CDS) Specification for Surface for Surface Ships (Model 4.1) (U), Vol. 1, Revision 5, April 1988.
- [Ref. 5] Department of the Navy, Military Specification(CONFIDENTIAL NAVSEA) 0967-LP-027-8635, Combat Direction System (CDS) Specification for Surface for Surface Ships (Model 4.1) (U), Vol. 2, Revision 5, April 1988.
- [Ref. 6] Department of Defense Directive 5200.28, Security Requirements for Automatic Data Processing (ADP) Systems, 18 December 1972.
- [Ref. 7] E. Yourdon, "Modern Structured Analysis", Yourdon Press by Prentice Hall, N.J.,1989.
- [Ref. 8] A. Tanenbaum, "Structured Computer Organization", Prentice Hall, Inc., Englewood Cliffs, N.J., 1984.
- [Ref. 9] V. Berzins and Luqi, "Software Engineering with Abstractions: An Integrated Approach to Software Development using Ada", Addison-Wesley, 1988.

- [Ref. 10] D. Breen, P. Getto, A. Apodaca, "Object-Oriented Programming in a Conventional Programming Environment", Computer Society Press of the IEEE, Washington, DC, 1989.
- [Ref. 11] Grady Booch, "Software Engineering with Ada", Benjamin Cummings Publishing Company, 1983.
- [Ref. 12] R. Elmasri, S.B. Navathe, "Fundamentals of the Database Systems", The Benjamin/Cummings Publishing Company, Inc., Redwood City, CA., 1989.
- [Ref. 13] S. Faulk and D. Parnas, "On Synchronization in Hard-Real\_Time Systems", Comm. of the ACM 31, 3, Mar 1988, pp 274-287.
- [Ref. 14] W. Lorensen, "Object-Oriented Software Development in a Non-Object-Oriented Environment," General Electric Technical Information Series Report 86CRD133,1986.
- [Ref. 15] B. Meyer, "Object-Oriented Software Construction", Prentice Hall, Inc., Englewood Cliffs, NJ,1988.
- [Ref. 16] Buhn, R., Karan, G., Hayse, C., Woodside, C., "Software CAD: a Revolutionary Approach", IEEE Transactions on Software Engineering, Voi 15, No.3, pp235-249, Mar 89.
- [Ref 17] Collins, M. J. Stratford-, "Ada: A Programmer's Conversion Course", R. J. Acford Press, Chichester, West Sussex, England, 1982.
- [Ref. 18] Dillon, L., "Verifying General Safety Properties of Ada Tasking Programs". IEEE Transactions of Software Engineering, Vol 16, No. 1, p51-67, Jan 90.
- [Ref. 19] Guaspari, D., Marceau, C., Polak, W., "Formal Verification of Ada Programs", IEEE Transactions on Software Engineering, Vol 16, No. 9, p1058-1076, Sep 90.
- [Ref. 20] Jalote, Pankaj, "Functional Refinement and Nested Objects for Object-Oriented Design", IEEE Transactions on Software Engineering, Vol 15, No. 3, p264-270, Mar 89.

- [Ref. 21] Moser, Louise, "Data Dependency Graphs for Ada Programs", IEEE Transactions on Software Engineering, Vol. 16, No. 5, P498-527, May 90.
- [Ref. 22] Sha, L., Goodenough, J.B., "Real-Time Scheduling Theory and Ada", Computer, Vol 23, No. 4, Published by IEEE Computer Society, p53-62, Apr 90.
- [Ref. 23] Sommerville, I., Welland, R., Beer, S., "Describing Software Design Methodologies", The Computer Journal, The British Computer Society, Vol 30, No. 2, p128-133, Apr 87.
- [Ref. 24] Schweiger, Jeffrey M., "Structuring a Software Tool for Detecting Deadlock Potential from the Formal Specification of a Distributed System", Master's Thesis, Naval Postgraduate School, Monterey, CA., unfinished.
- [Ref. 25] Vick, C. R., Ramamoorthy, C. V., "The Handbook of Software Engineering", Van Nostrand Reinhold Company, New York, NY,1984.
- [Ref. 26] Department of Defense Military Standard 2167-A, Defense System Software Development, 29 February 1988,
- [Ref. 27] Department of Defense Military Standard 2168, Defense System Software Quality Program, 29 February 1988,
- [Ref. 28] American National Standard Institute Military Standard 1815A-1983, Reference Manual for the Ada Programming Language, 17 February 1983.
- [Ref. 29] Department of Defense, Military Standard 480, Configuration Control Engineering changes, Deviations, and waivers.
- [Ref. 30] OP\_SPEC 411.2 (CONFIDENTIAL). Naval Tactical Data System Model 4 Link 11 Operational Specification, Rev 2, 15 August 1985.
- [Ref. 31] Department of Defense Military Standard 490, Specification Practices, May 1972.
- [Ref. 32] SUN MICROSYSTEMS, SUN Systems overview, February 1986.

- [Ref. 33] Skansholm, Jan, "Ada From The Beginning", Addison-Wesley publishing company, New York, NY, 1988.
- [Ref. 34] Chin, Yu-Chi, "The Navigation Data Logger for a Suitcase Navigation System", Master's Thesis, Naval Postgraduate School, Monterey, CA., June, 1991.
- [Ref. 35] DePaula Everton G., "A Tactical Database for the Low Cost Combat Direction System", Master's Thesis, Naval Postgraduate School, Monterey, CA., December, 1990
- [Ref. 36] Department of Defense Military Standard 1679, Weapons System Software Development, December 1978.
- [Ref. 37] Naval Sea System Instruction 5400.57, Technical Responsibility and Authority to perform Engineering Functions for Combat Subsystems and Equipment, June 1978.
- [Ref. 38] OPNAV Instruction 7700.1, Configuration of CDS and Combat Systems for General Purpose Forces, 31 August 1973.
- [Ref. 39] Interview between Mr. Dan Edwards, Naval Ocean Systems Center (code 412), San Diego, CA., and the authors, 9 July 1991.
- [Ref. 40] Interview between Mr. Roy, Director Research (7162), Logicon, San Diego, CA., and the authors, 5 August 1991.
- [Ref. 41] Interview between Mr. George Sadowski, Fleet Combat Direction System Support Activity, Dam Neck, VA., and the authors, 22 June 1991.

# INITIAL DISTRIBUTION LIST

Defense Technical Information Center Cameron Station	2
Alexandria, VA 22304-6145	
Dudley Knox Library	2
Code 52	
Naval Postgraduate School	
Monterey, CA 93943	
Chairman, Code CS	1
Computer Science Department	1
Naval Postgraduate School	
Monterey, CA 93943	
Office of Naval Research	1
800 N. Quincy Street	
Arlington, VA 22217-5000	
Office of the Chief of Naval Operations	1
Code OP-941	•
Washington, D.C. 20350-2000	
Commander	1
Naval Sea Systems Command	
ATTN: LCDR Scott Kelly Code 06D3131	
Washington, D.C. 20362-5101	
washington, D.C. 20302-3101	
Commander	1
Naval Ocean Systems Center	-
Code 451	
San Diego, CA 92152-5000	
Commander	1
Naval Ocean Systems Center	1
Code 431	
ATTN: Dan Edwards	
San Diego, CA 92152-5000	

Commander Naval Sea Systems Command ATTN: William L. Wilder	l
PMS-4123H Arlington, VA 22202-5101	
Dr. Valdis Berzins Code 52Be Computer Science Department Naval Postgraduate School Monterey, CA 93940	1
Dr. Luqi Code 52Lq Computer Science Department Naval Postgraduate School Monterey, CA 93940	1
LCDR (sel) Willie K. Bolick 1508 Willowbend Drive Gautier, MS 39553	1
LT Richard T. Irwin 5130 Navajo Trail Harrison, MI 48625	1